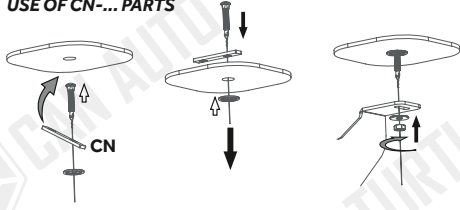


**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05038 (A/B-TYPE)**USE OF CN-... PARTS****COMPATIBLE VEHICLES**

FRD KUG (C394) SUV 08-12
FRD KUG (C520) SUV 13-19
FRD ESCP (C520) SUV 13-19

PACKAGE INCLUDED

1 - CN-02 M8	8
2 - D8 WASHER	8
3 - M8 HEX NUT	8
4 - CLAMPING PIECE	8
5 - M8 SPECIAL BOLT	8
6 - M6x15 LOCK HEADED BOLT	8
7 - M6 HEX FLANGE NUT	8

ZIPLOCK BAG

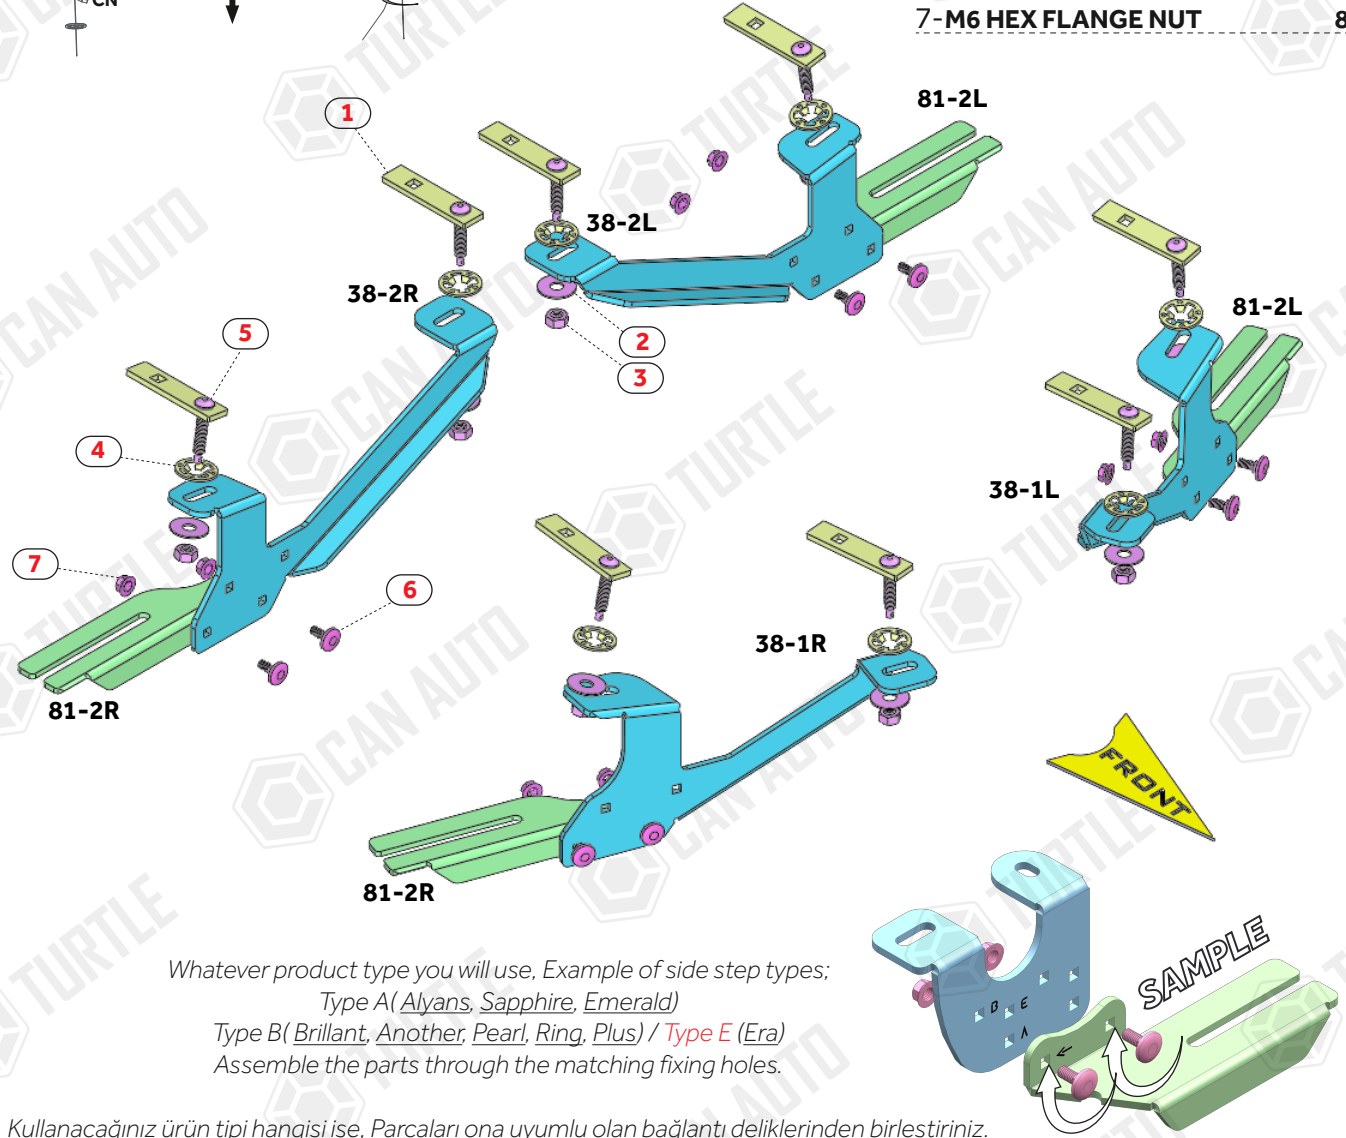

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



MB05038 / Rev.01 / 16.05.2022 (KRST)