

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05148 (A/B-TYPE)

COMPATIBLE VEHICLESFRD KUG (CX482) SUV 20-
FRD ESCP (CX482) SUV 20-**PACKAGE INCLUDED**

1- CN-02 M8	8
2- M8 SPECIAL BOLT	8
3- CLAMPING PIECE	8
4- D8 WASHER	8
5- M8 HEX NUT	8
6- M6x15 LOCK HEADED BOLT	8
7- M6 HEX FLANGE NUT	8


ZIPLOCK BAG

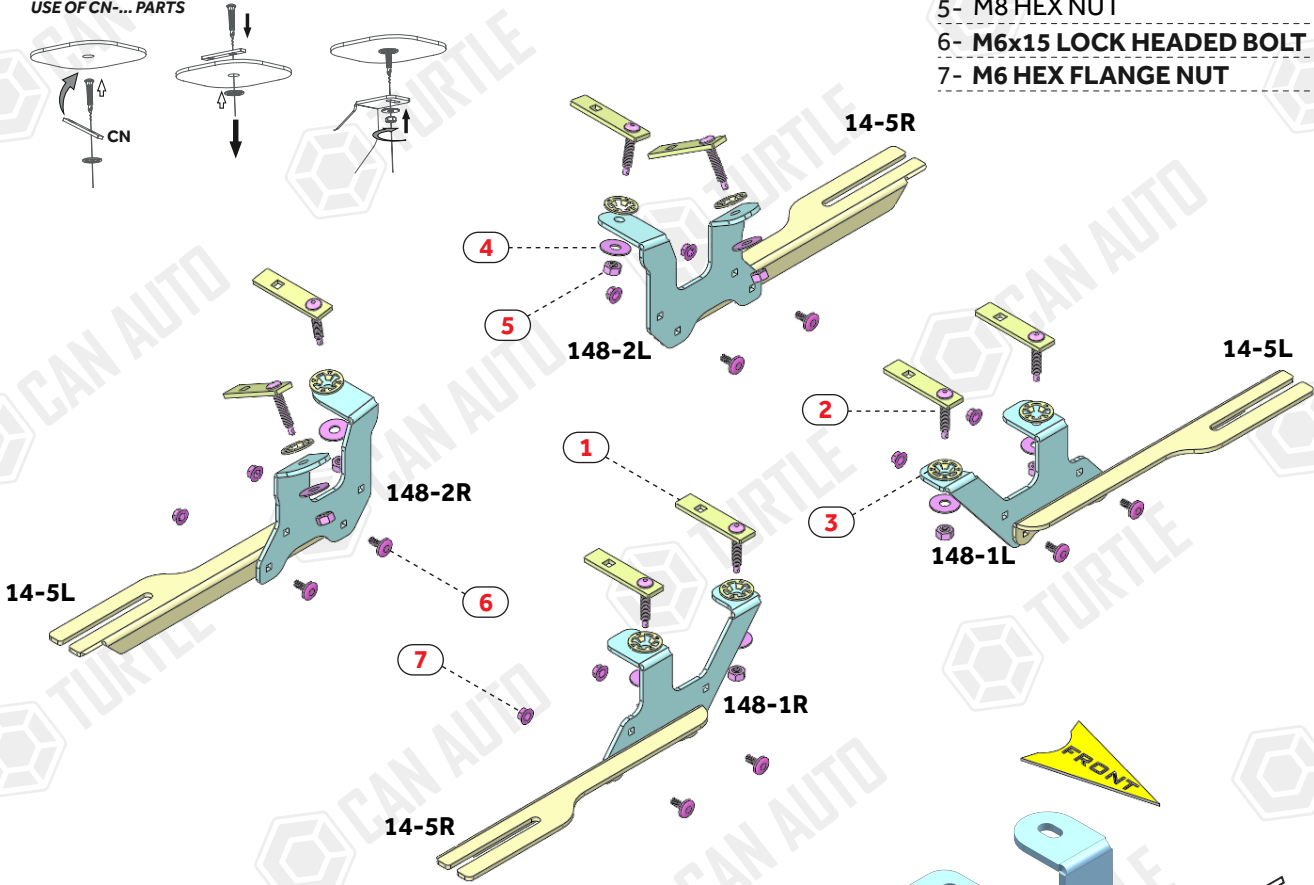

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)**Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

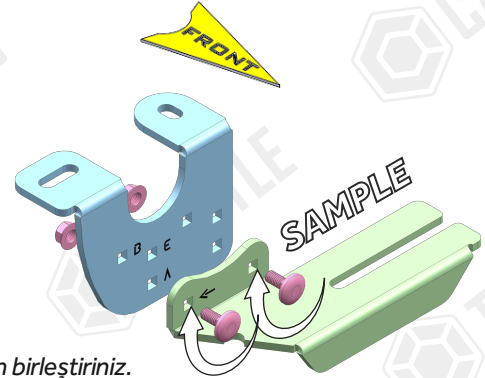

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****FRONT**

MB05148 / Rev01 / 10.02.2022 (KRST)