



ASSEMBLY INSTRUCTIONS (BRACKET KIT)


Product Code: MB01150 (A-TYPE)
MB02150 (B-TYPE)

FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

PACKAGE INCLUDED

1- CN-012 M8	8	ZIPLOCK BAG
2- M8 SPECIAL BOLT	8	
3- CLAMPING PIECE	8	
4- D8 WASHER	8	
5- M8 HEX NUT	8	

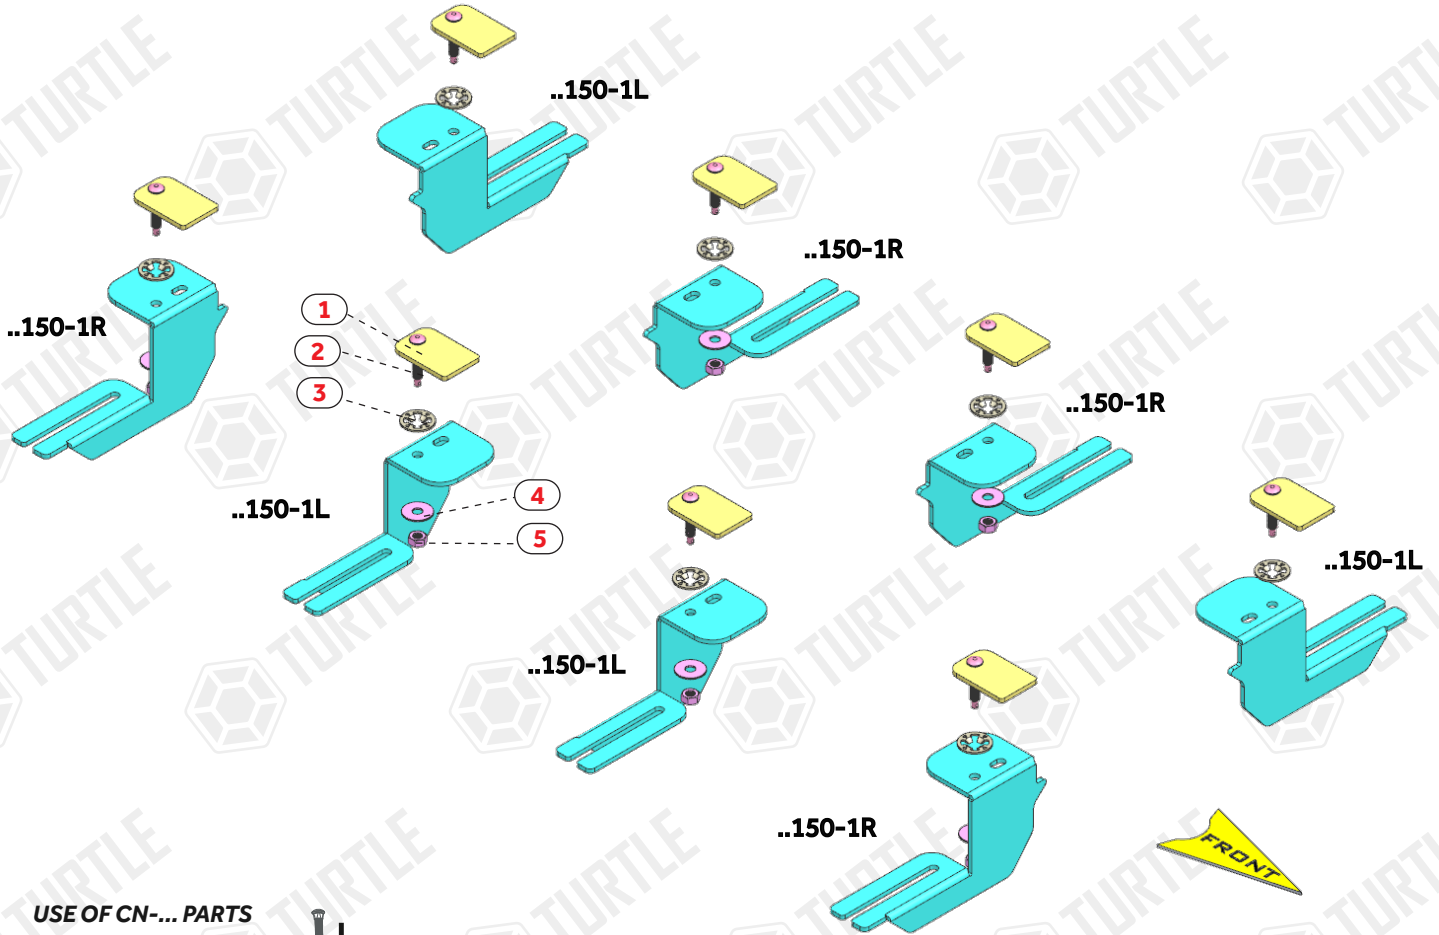

USE OF CN-... PARTS

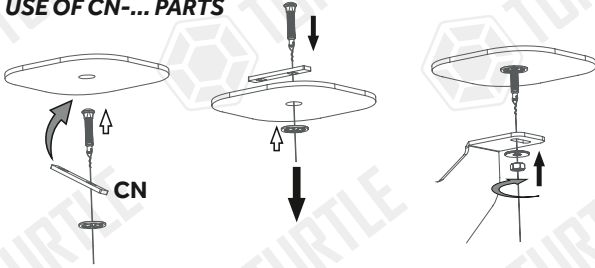

MB01150/MB02150 / Rev.00 / 29.12.2022 (ECE)