

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

\* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

\* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

\* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

**ASSEMBLY INSTRUCTIONS (BRACKET KIT)**

Product Code: MB05141 (A/B-TYPE)

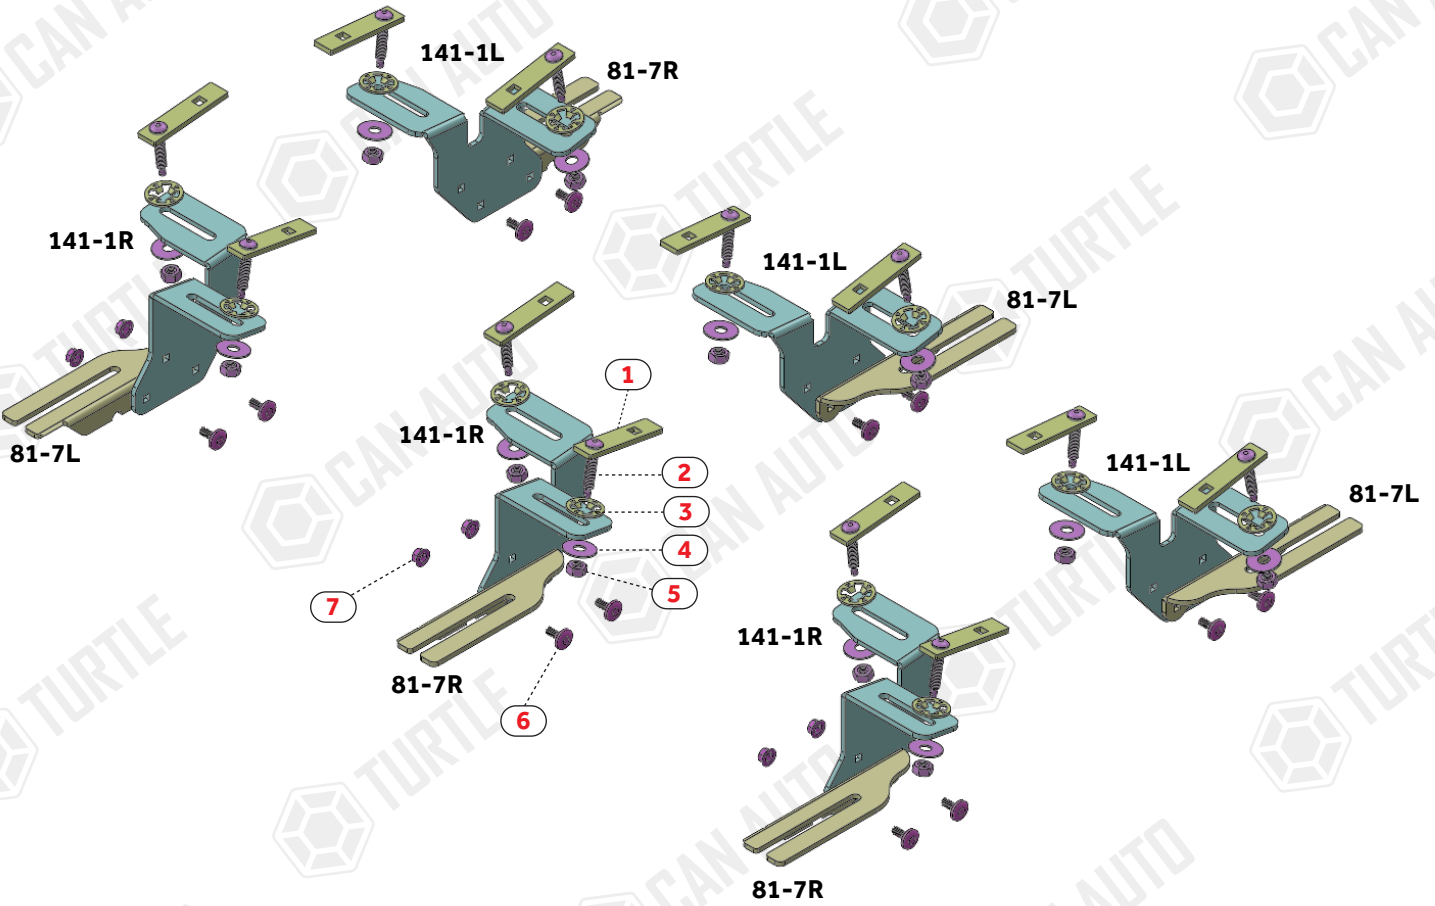
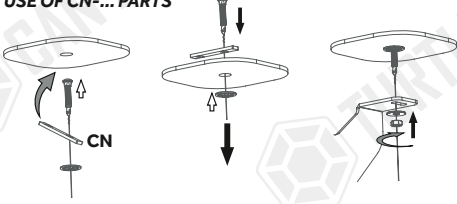
**COMPATIBLE VEHICLES**

SYNG MUSS (Q200) DOUBLE CAB 18-  
SYNG MUSS GRAND DOUBLE CAB 18-  
SYNG RXT SPORTS DOUBLE CAB 18-  
SYNG RHNO DOUBLE CAB 18-

**PACKAGE INCLUDED**

|                           |    |
|---------------------------|----|
| 1- CN-02 M8               | 12 |
| 2- M8 SPECIAL BOLT        | 12 |
| 3- CLAMPING PIECE         | 12 |
| 4- D8 WASHER              | 12 |
| 5- M8 HEX NUT             | 12 |
| 6- M6x15 LOCK HEADED BOLT | 12 |
| 7- M6 HEX FLANGE NUT      | 12 |

ZIPLOCK BAG

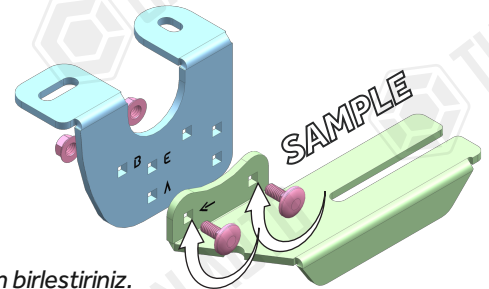
**USE OF CN-... PARTS**

Whatever product type you will use, Example of side step types;

Type A( Alyans, Sapphire, Emerald)

Type B( Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.



Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.