



ASSEMBLY INSTRUCTIONS (ROOF RACK COMPONENTS)


Product Code: MC500002 LEDDER BELT

FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

PACKAGE INCLUDED


1- LEDDER BELT BODY	1
2- M6x35 T-BOLT	2
3- M6 HEX NUT	2
4- PLASTIC HEADPIECE	2

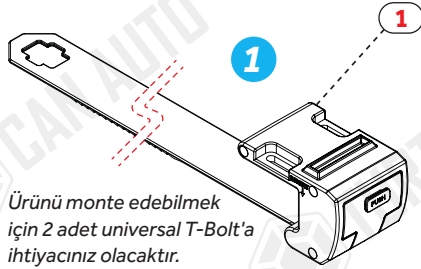


Ürünü monte edebilmek için 2 adet universal T-Bolt'a ihtiyacınız olacaktır.
You will need two universal T-Bolts to assemble the product.

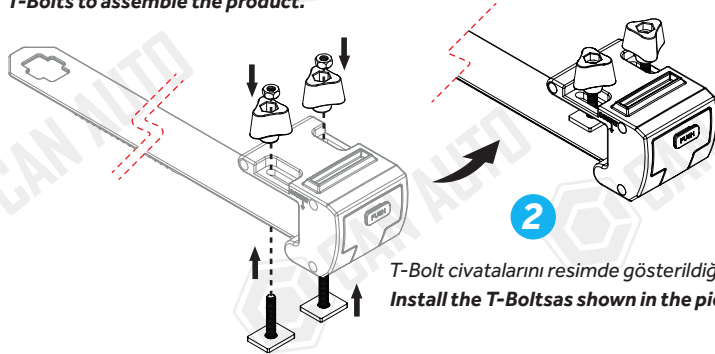


T-Bolt civatalarını resimde gösterildiği gibi takınız.
Install the T-Bolts as shown in the picture.

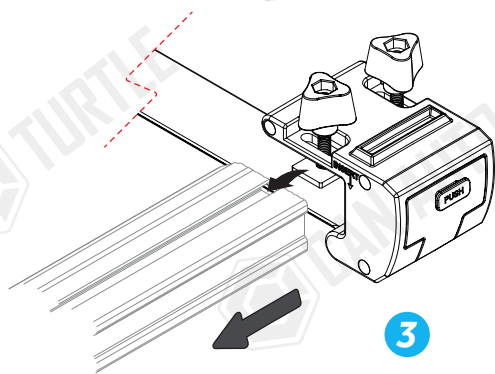


Merdiven tutucu kemeri ara atkı profilinin üstündeki kanala geçiriniz.
Pass the ladder holder belt to the channel above the roof rack profile.

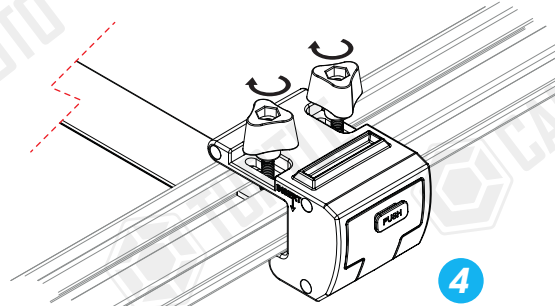


Uygun konuma getirdikten sonra T-Bolt civataları sıkarak kemeri sabitleyiniz.
After bringing the appropriate position, tighten the T-Bolts and fix the belt.

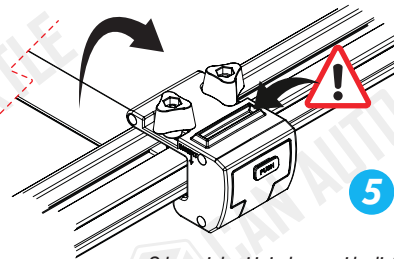

Sıkma işlevi için kemeri belirtilen kanaldan geçirmeniz gerekmektedir.
For the tightening function, you must pass the belt through the specified channel.

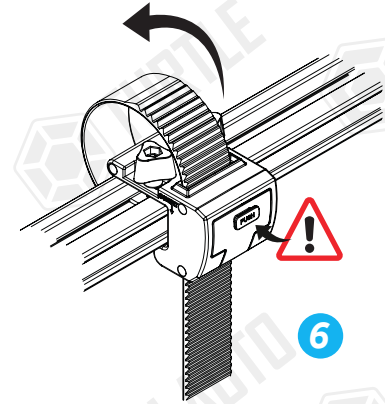

Kemeri tekrar gevşetmek ya da açmak isterseniz kapağa basarken ok yönünde çekmeniz yeterli olacaktır.
If you want to loosen or open the belt again, it will be sufficient to pull it in the direction of the arrow while pressing the cover.

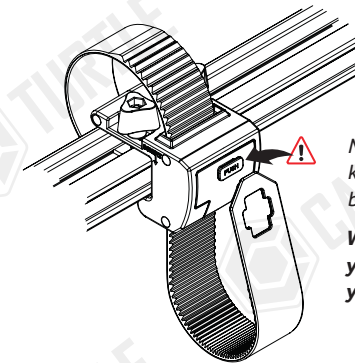

Montaj sonrasında kemeri sarı renkli kapağın üzerine artı şeklindeki boşluktan takabilirsiniz.
When you finish installation, you may attach the belt to the yellow cap from the plus gap.