


FARAD[®]***BARS***

made in italy


BS 070 - 1

RENAULT MEGANE 2008-2016
RENAULT FLUENCE 2009>
RENAULT MEGANE SPORTOUR 2009-2016




I	Istruzioni di montaggio	F	Instructions de montage
PL	Instrukcja montażu	D	Einbauanleitung
GB	Fitting instructions	E	Instrucciones de montaje
NL	Inbouwhandleiding	SWE	Montageanvisnin

KIT BS

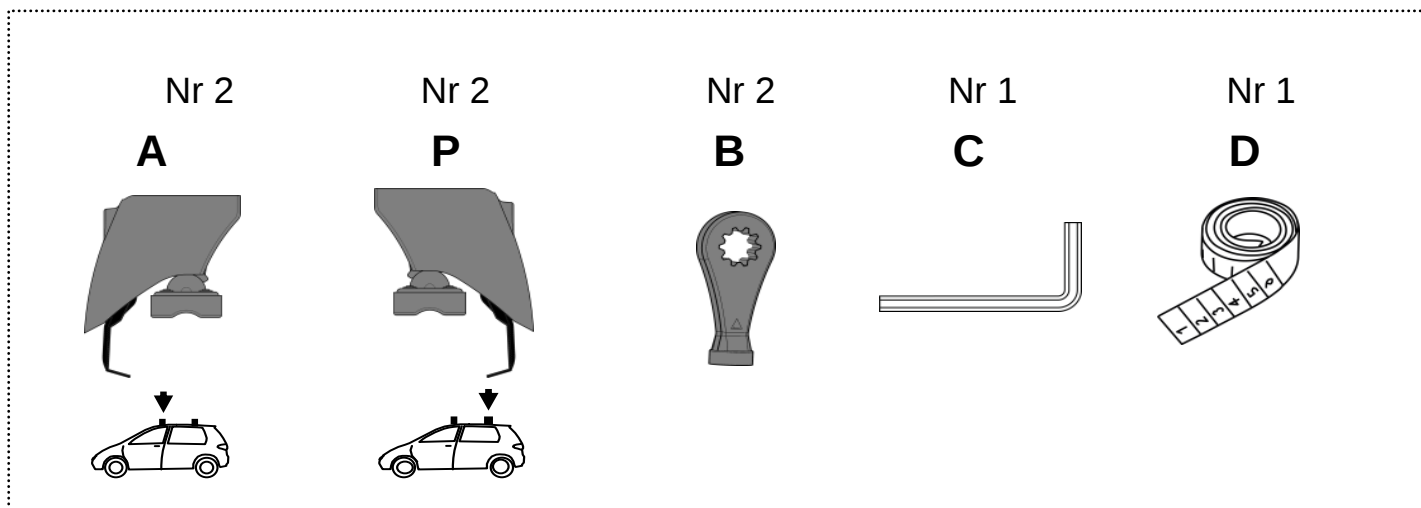












+


KIT ALU

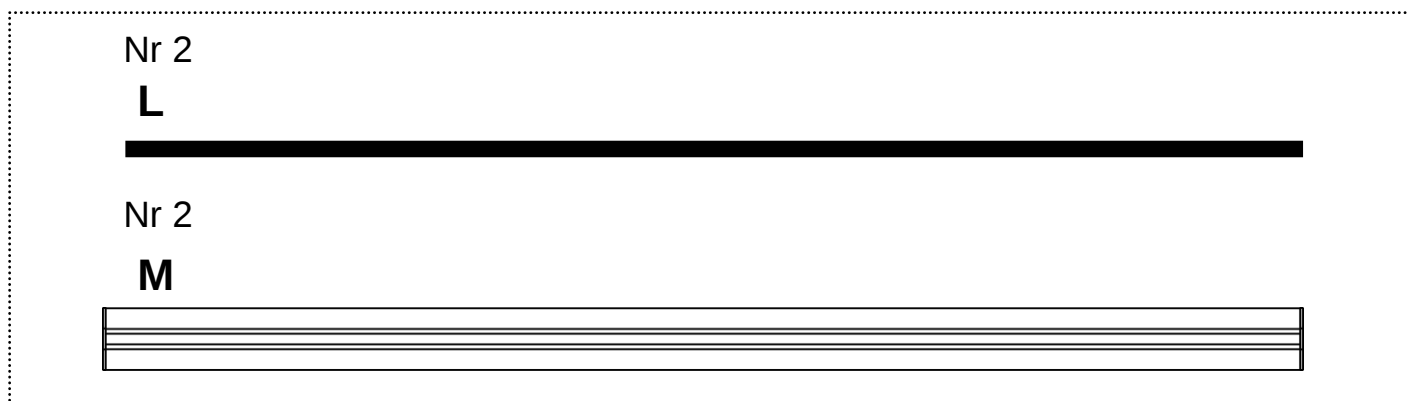




=

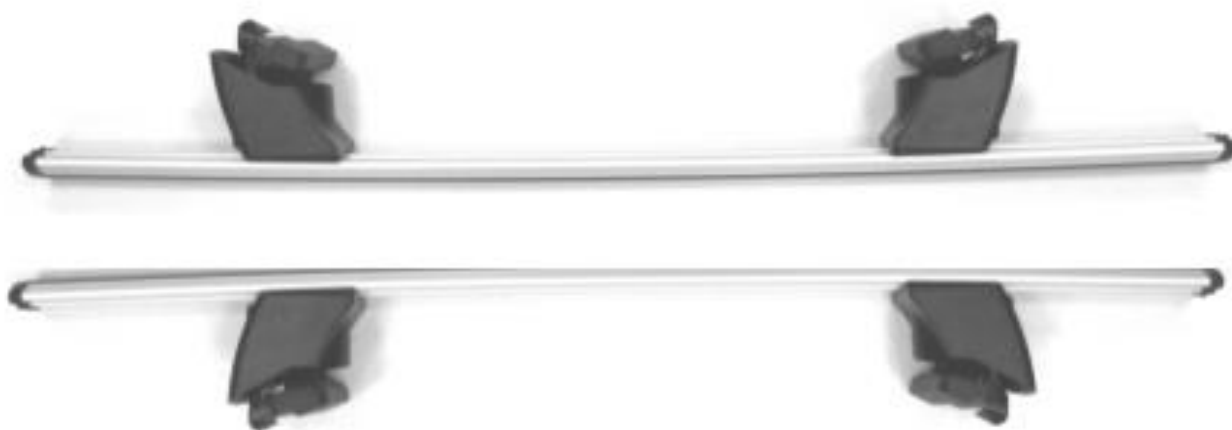


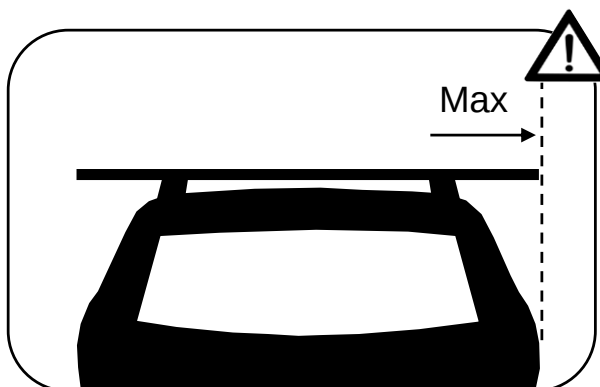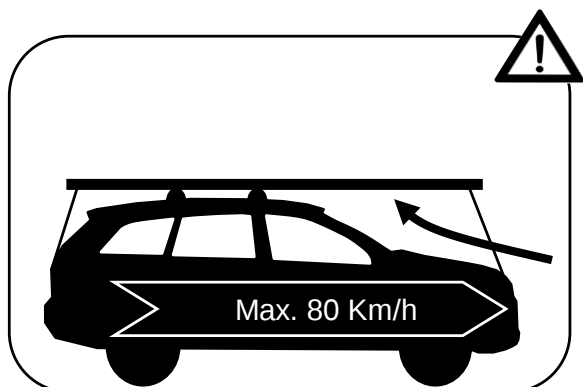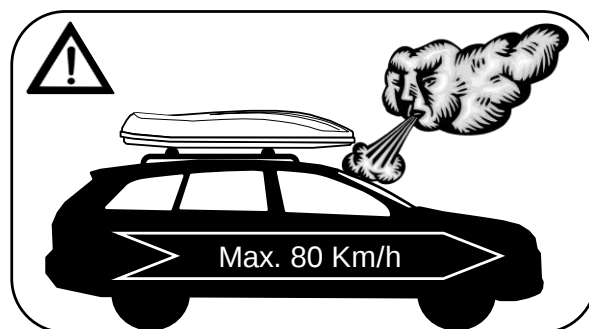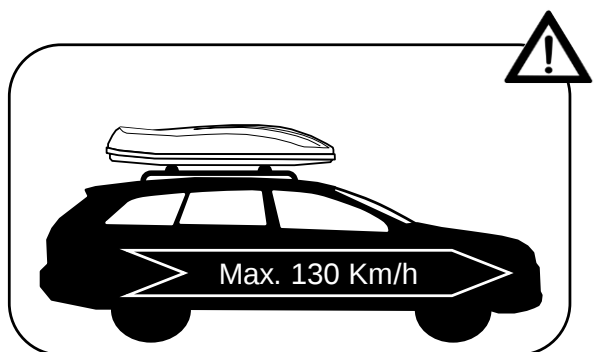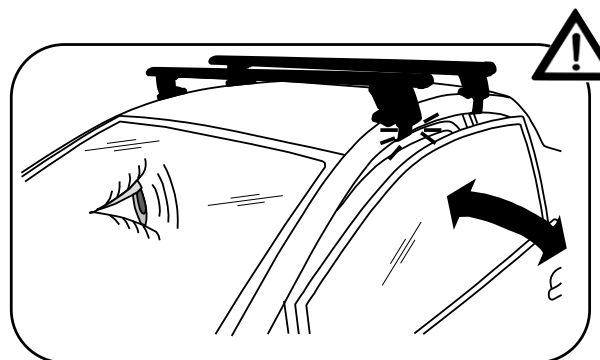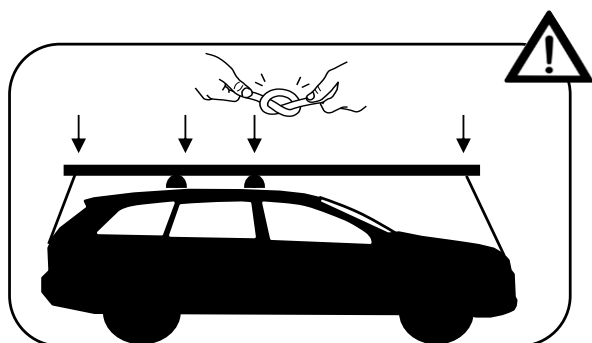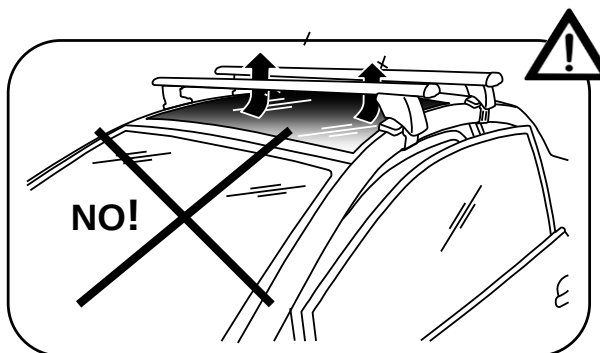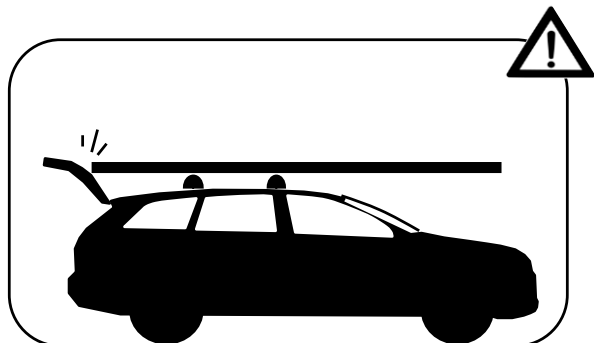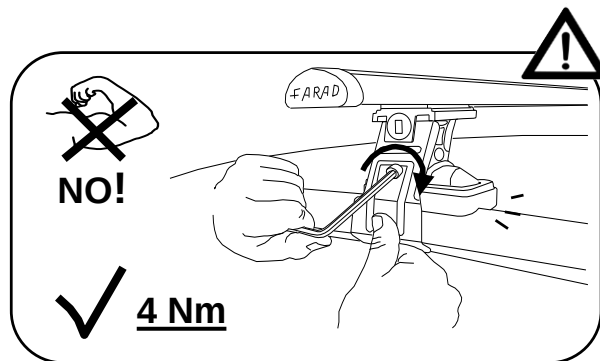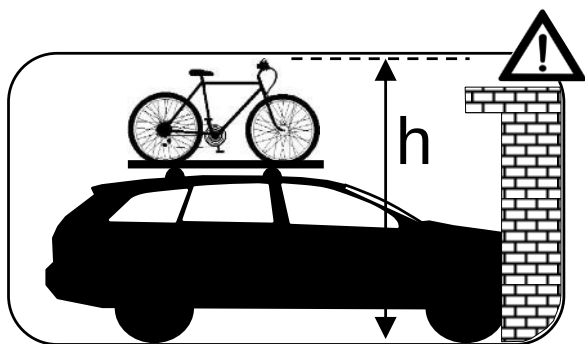

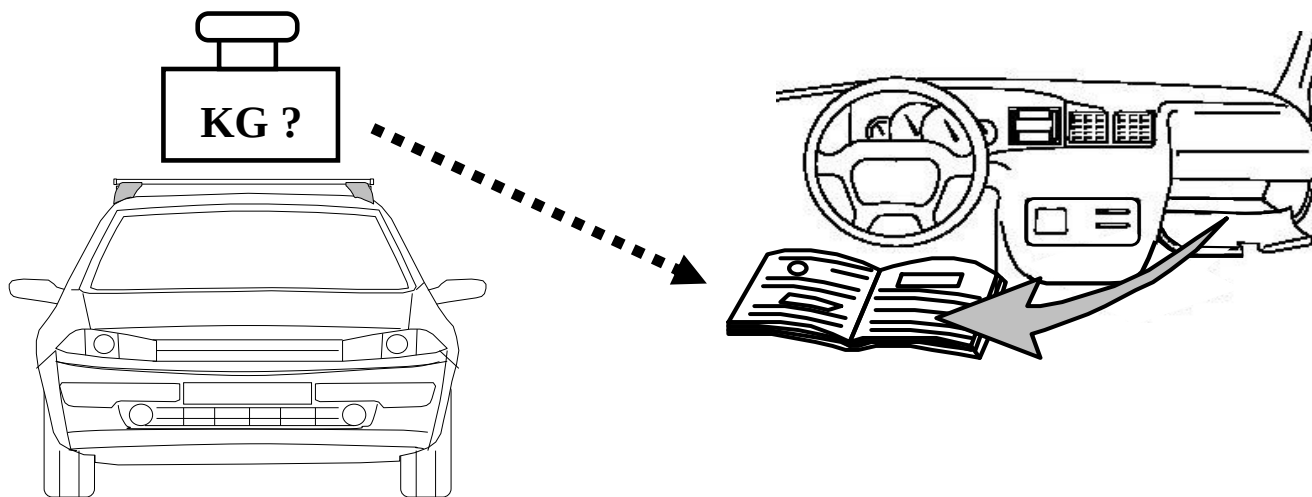

- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |

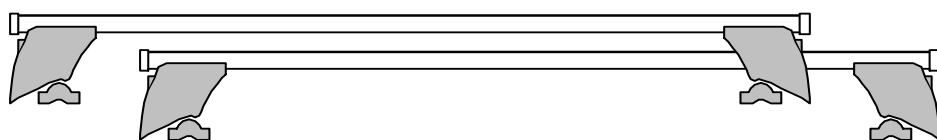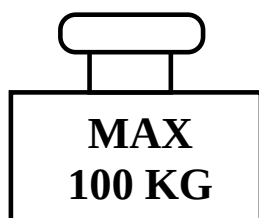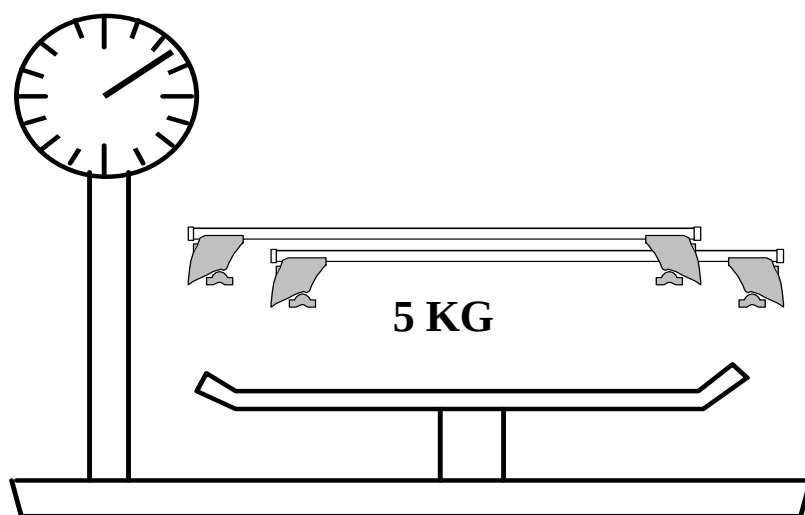

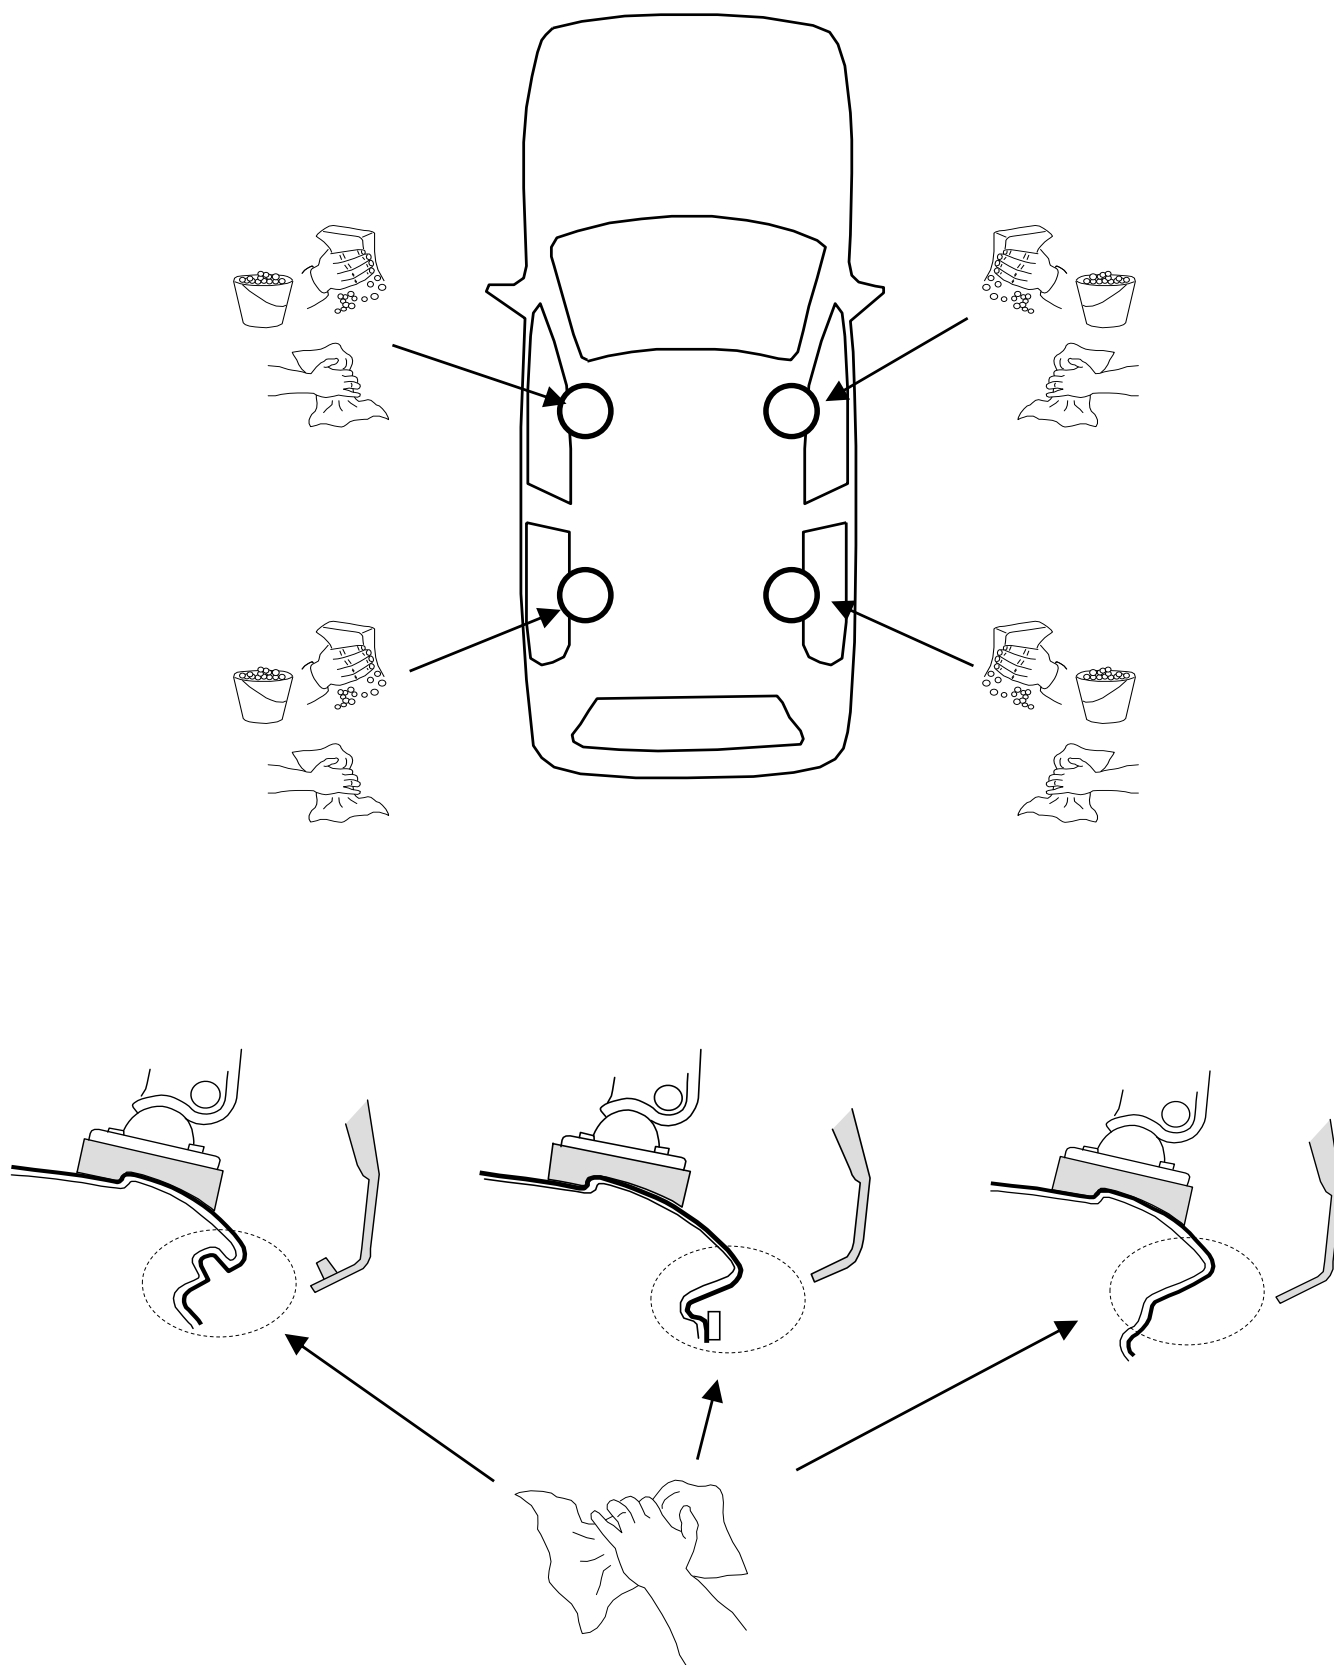

I **Montaggio Barra Anteriore**

F **Fixation Barre Avant**

PL **Montaż Bagażnika Bazowego Tylnego**


GB **Fitting Front Roof Bar**



D **Montage Vorderes Dachträgers**


NL **Montage Voorste Dakdrager**


SWE **Montering Av Främre Lasthållaren**


E **Fijación Barra Frontal**

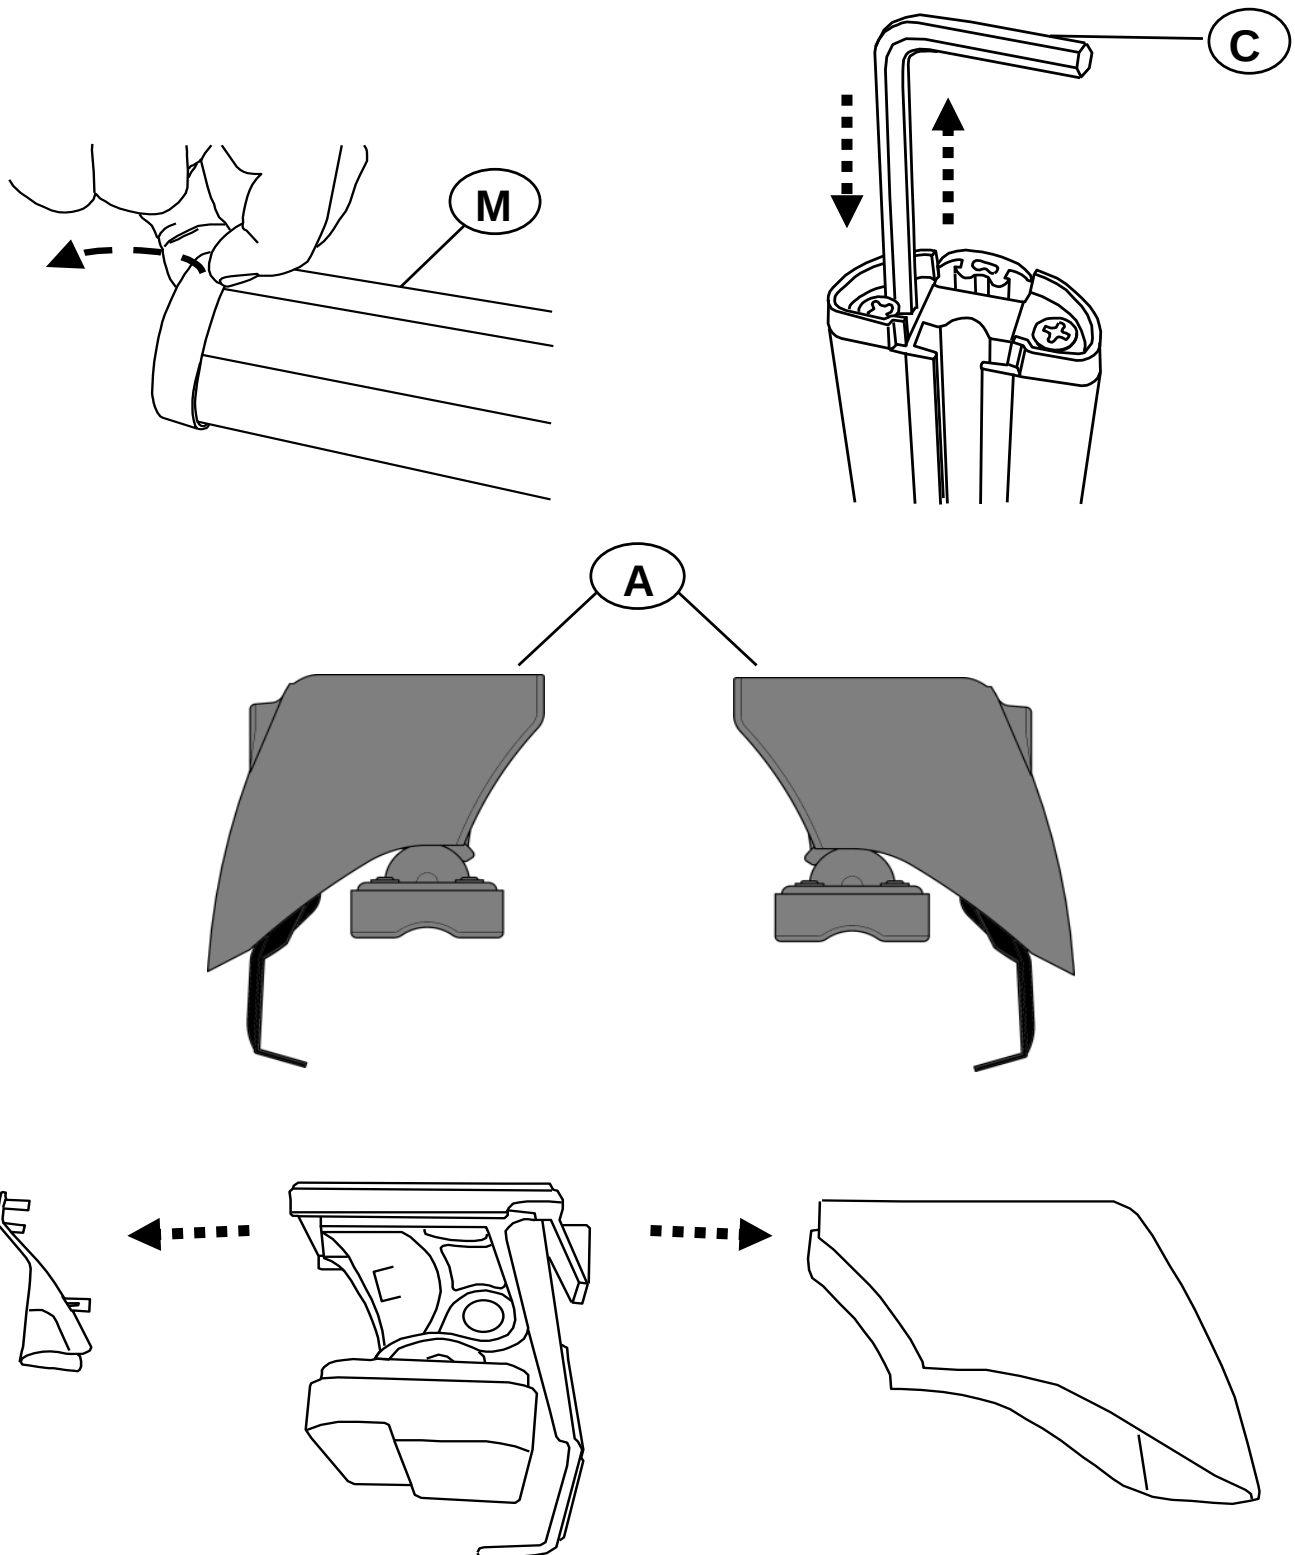


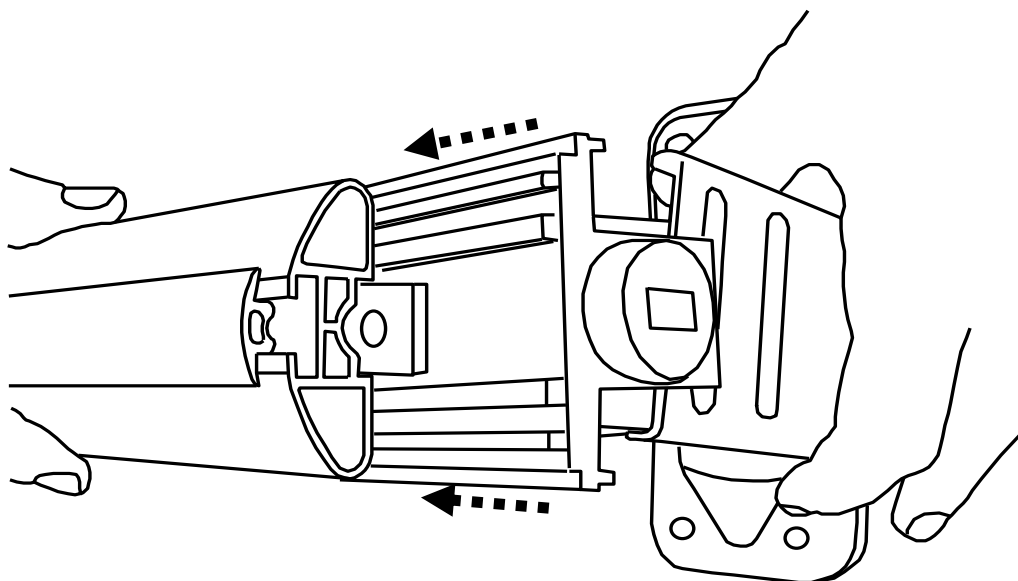
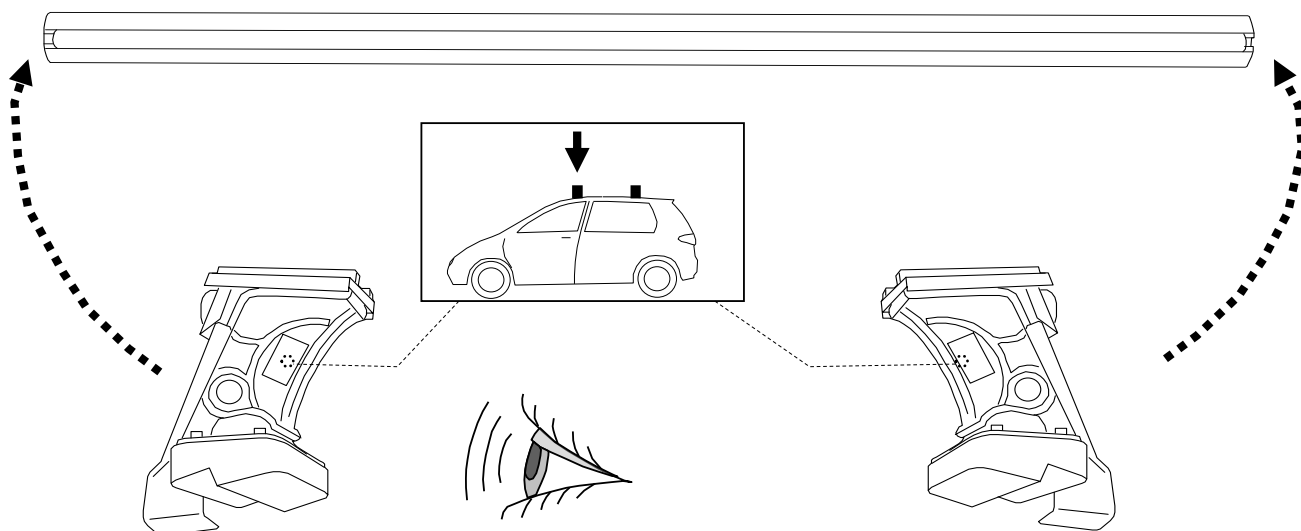




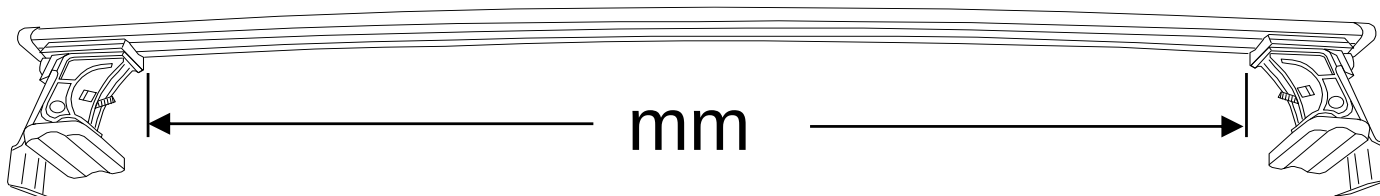




				R	mm
RENAULT	MEGANE	5	2008-2016	R=33	1030
RENAULT	FLUENCE	5	2009 >	R=33	1030
RENAULT	MEGANE SPORTOUR	5	2009-2016	R=33	1030

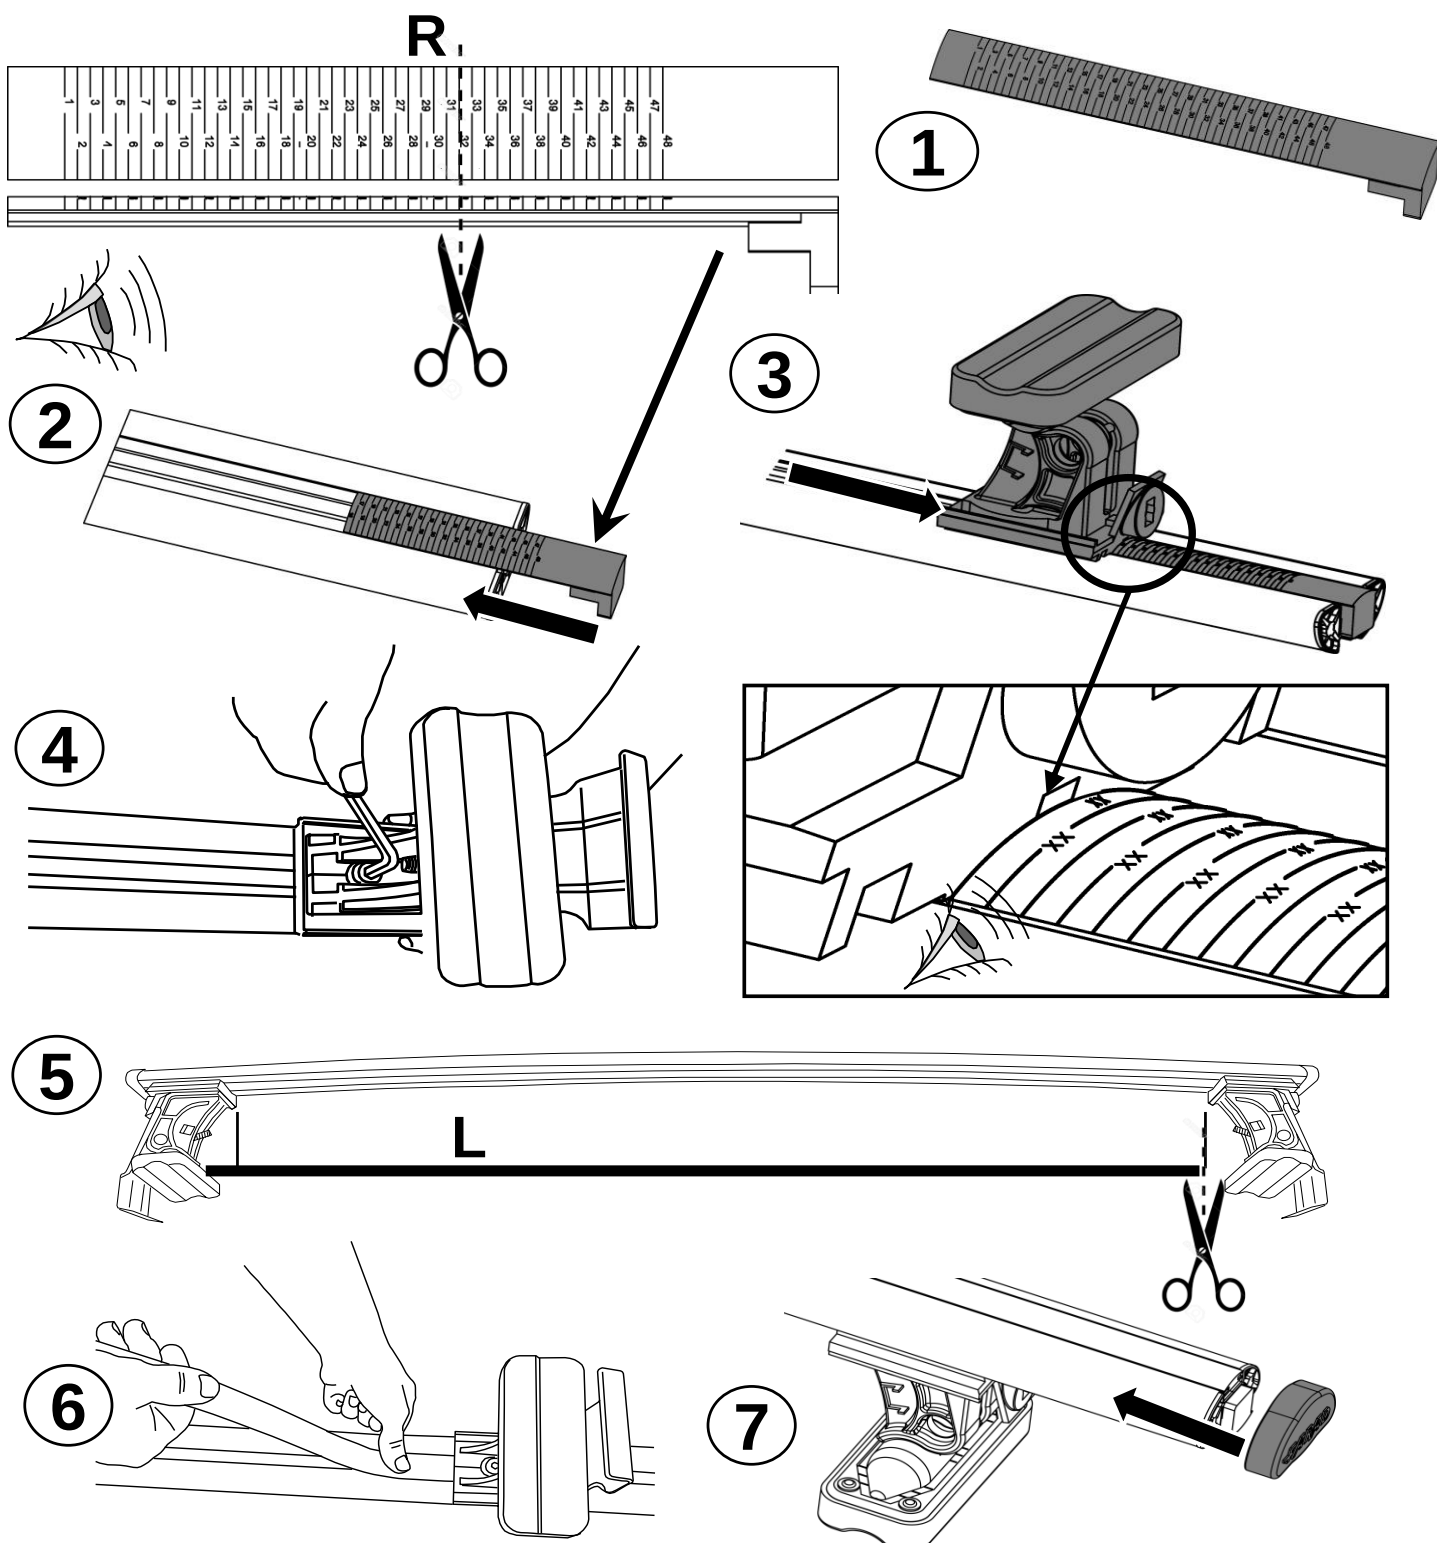

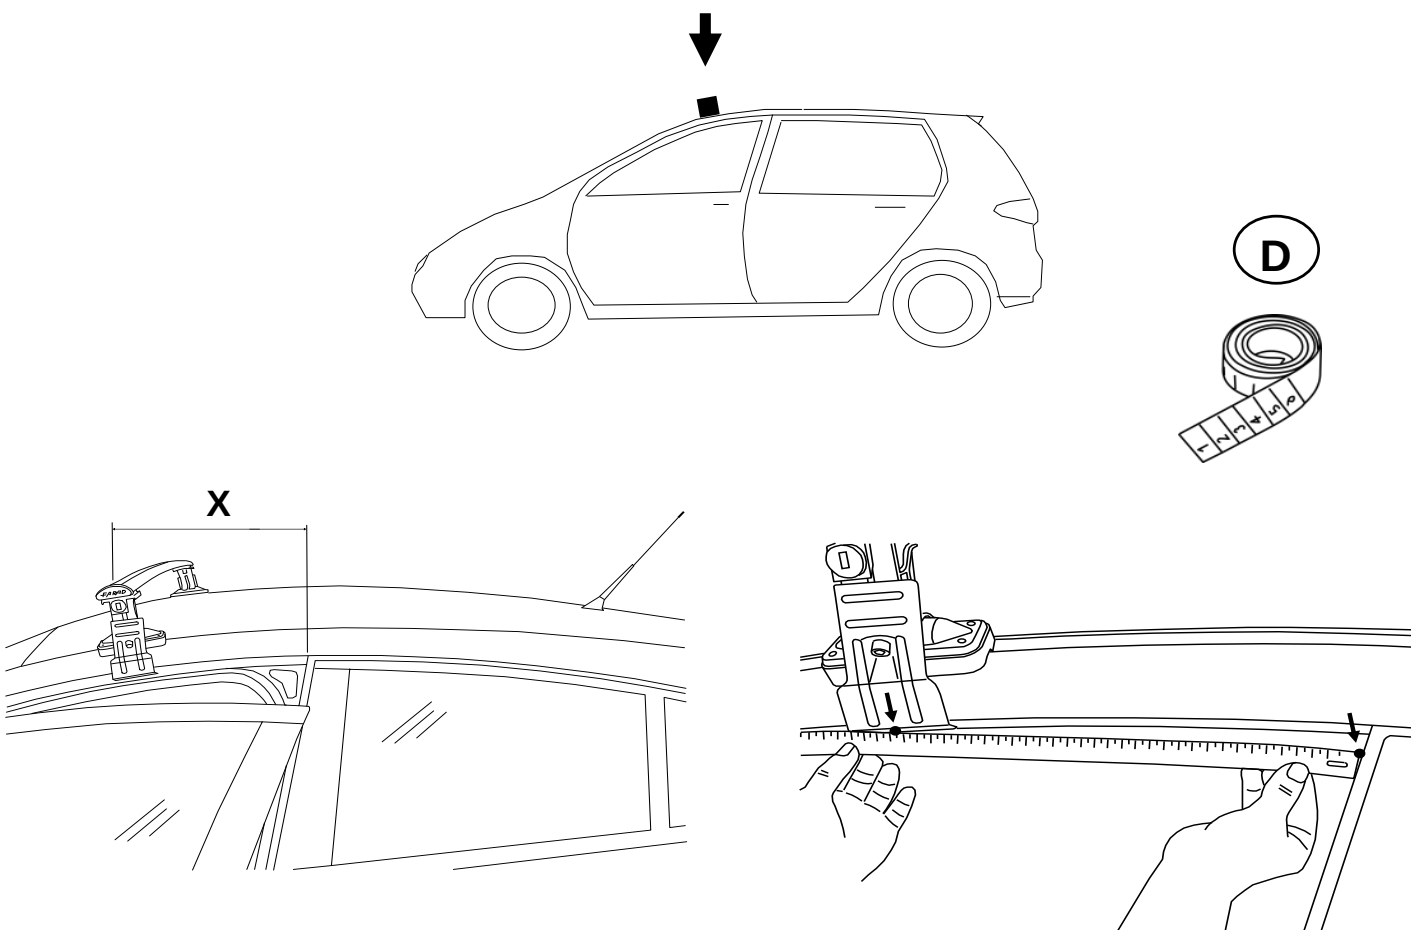





				X
RENAUL	MEGANE	5	2008-2016	X= 360
RENAULT	FLUENCE	5	2009 >	X= 360
RENAULT	MEGANE SPORTOUR	5	2009-2016	X= 360

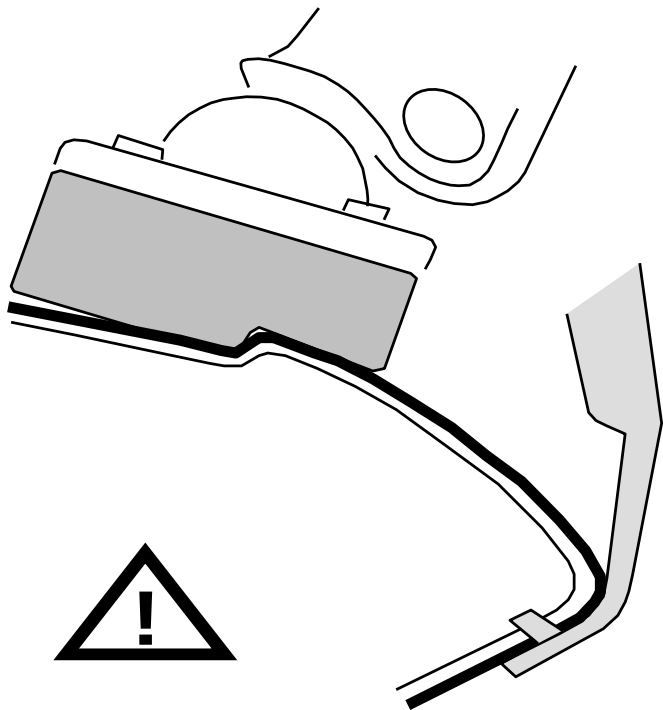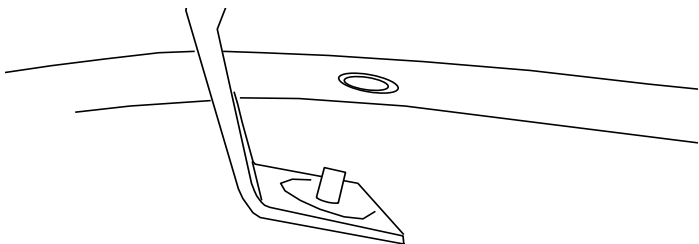


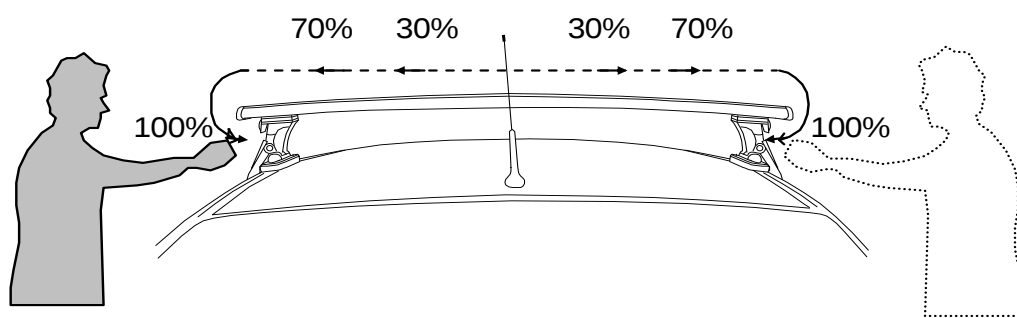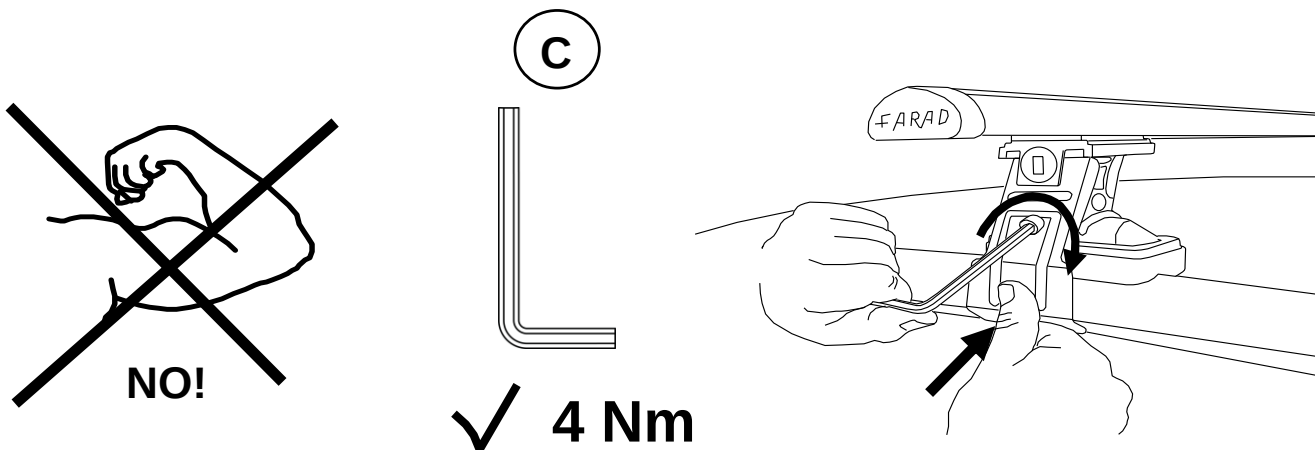

I	Alternare il fissaggio delle viti	F	Serrer alternativement chaque côté
PL	Śruby dokręcaj naprzemiennie	D	Die Schrauben abwechselnd anziehen
GB	Tighten alternately	E	Apretar alternativamente
NL	Afwisselend aan de linker- en de rechterkant aandraaien	SWE	Dra åt växelvis

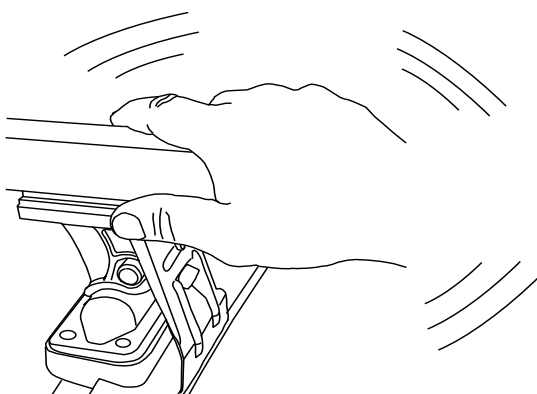

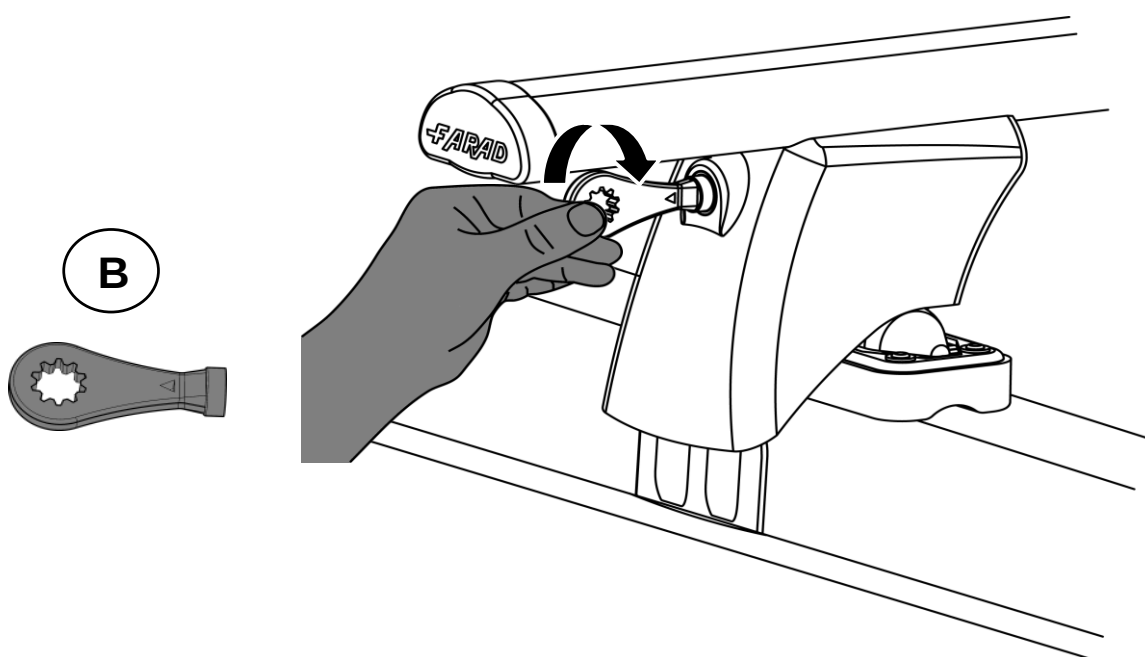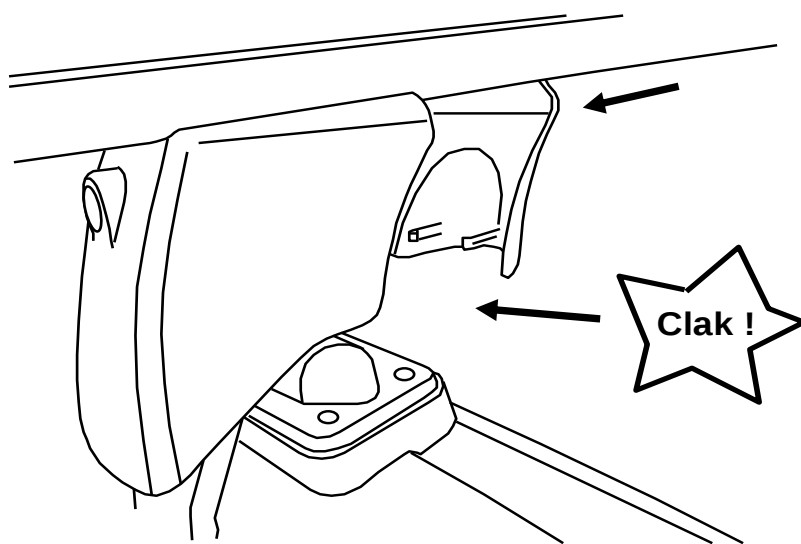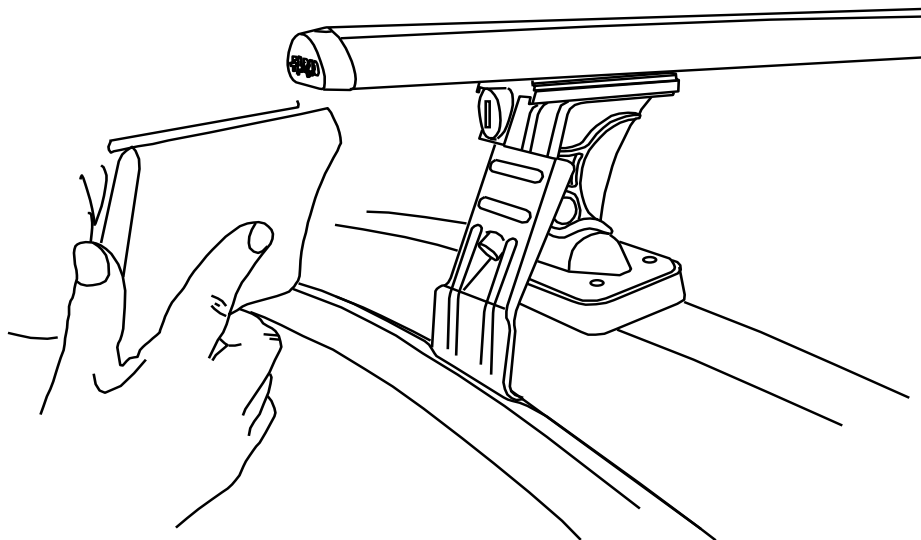

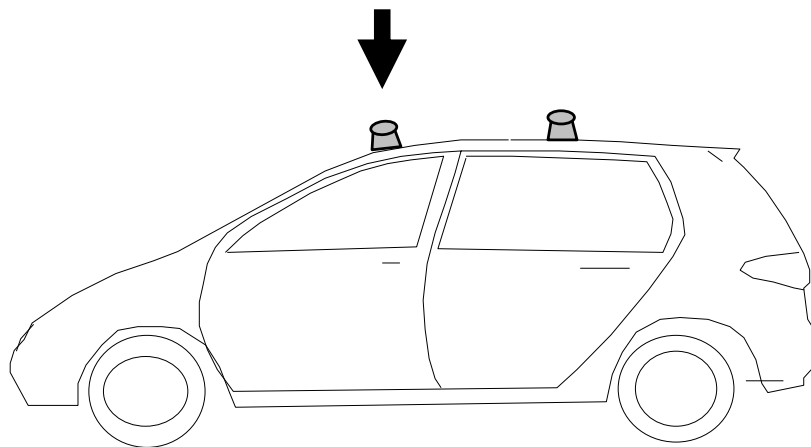

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I **Montaggio barra posteriore**

F **Fixation Barre Arriere**

PL **Montaż Bagażnika Bazowego Przedniego**


GB **Fitting Rear Roof Bar**



SWE **Montering Främre Lasthållaren**


E **Fijación Barra Trasera**


NL **Montage Achterste Dakdrager**


D **Montage Heckdachträgers**



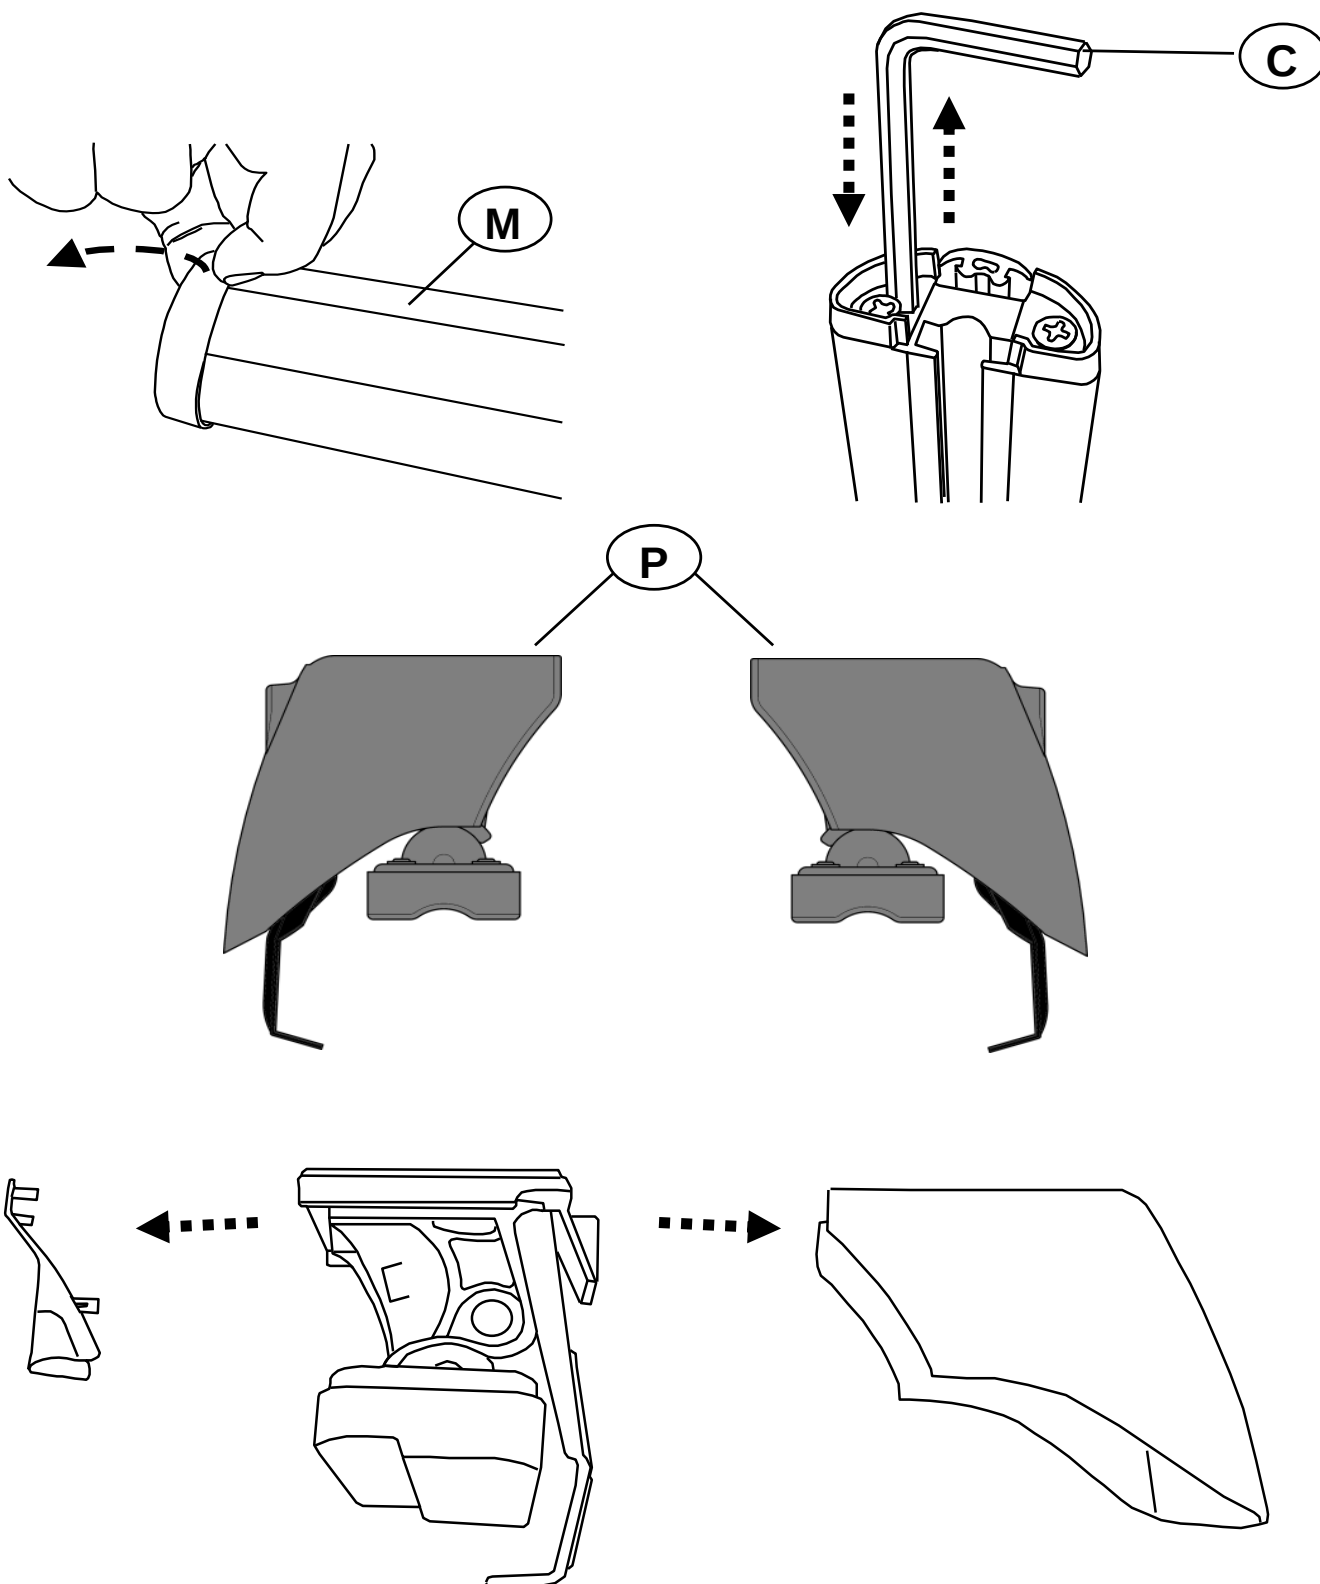


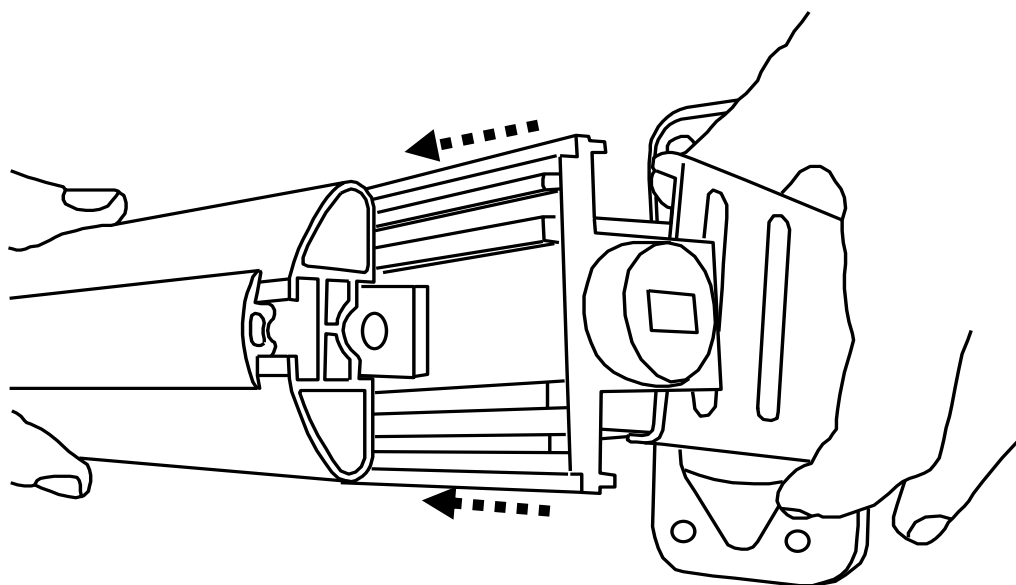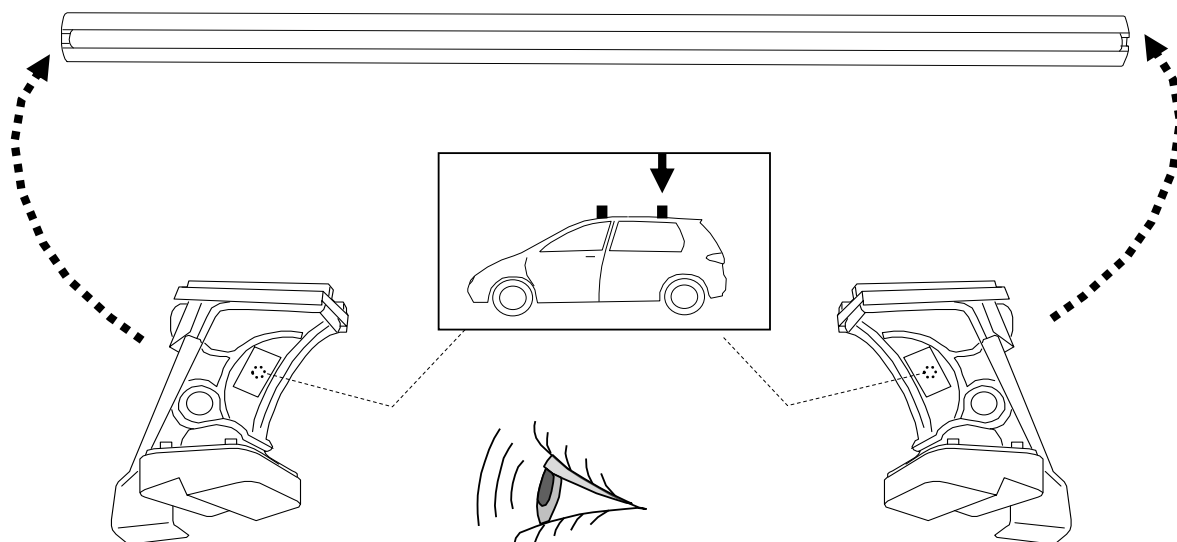



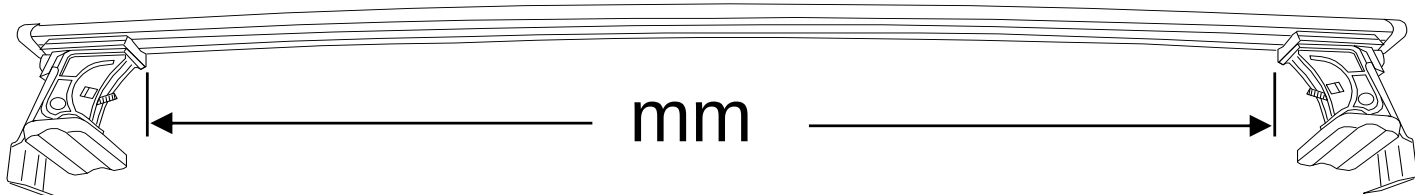


				R	mm
RENAULT	MEGANE	5	2008-2016	R= 26	990
RENAULT	FLUENCE	5	2009 >	R= 26	990
RENAULT	MEGANE SPORTOUR	5	2009-2016	R= 26	990


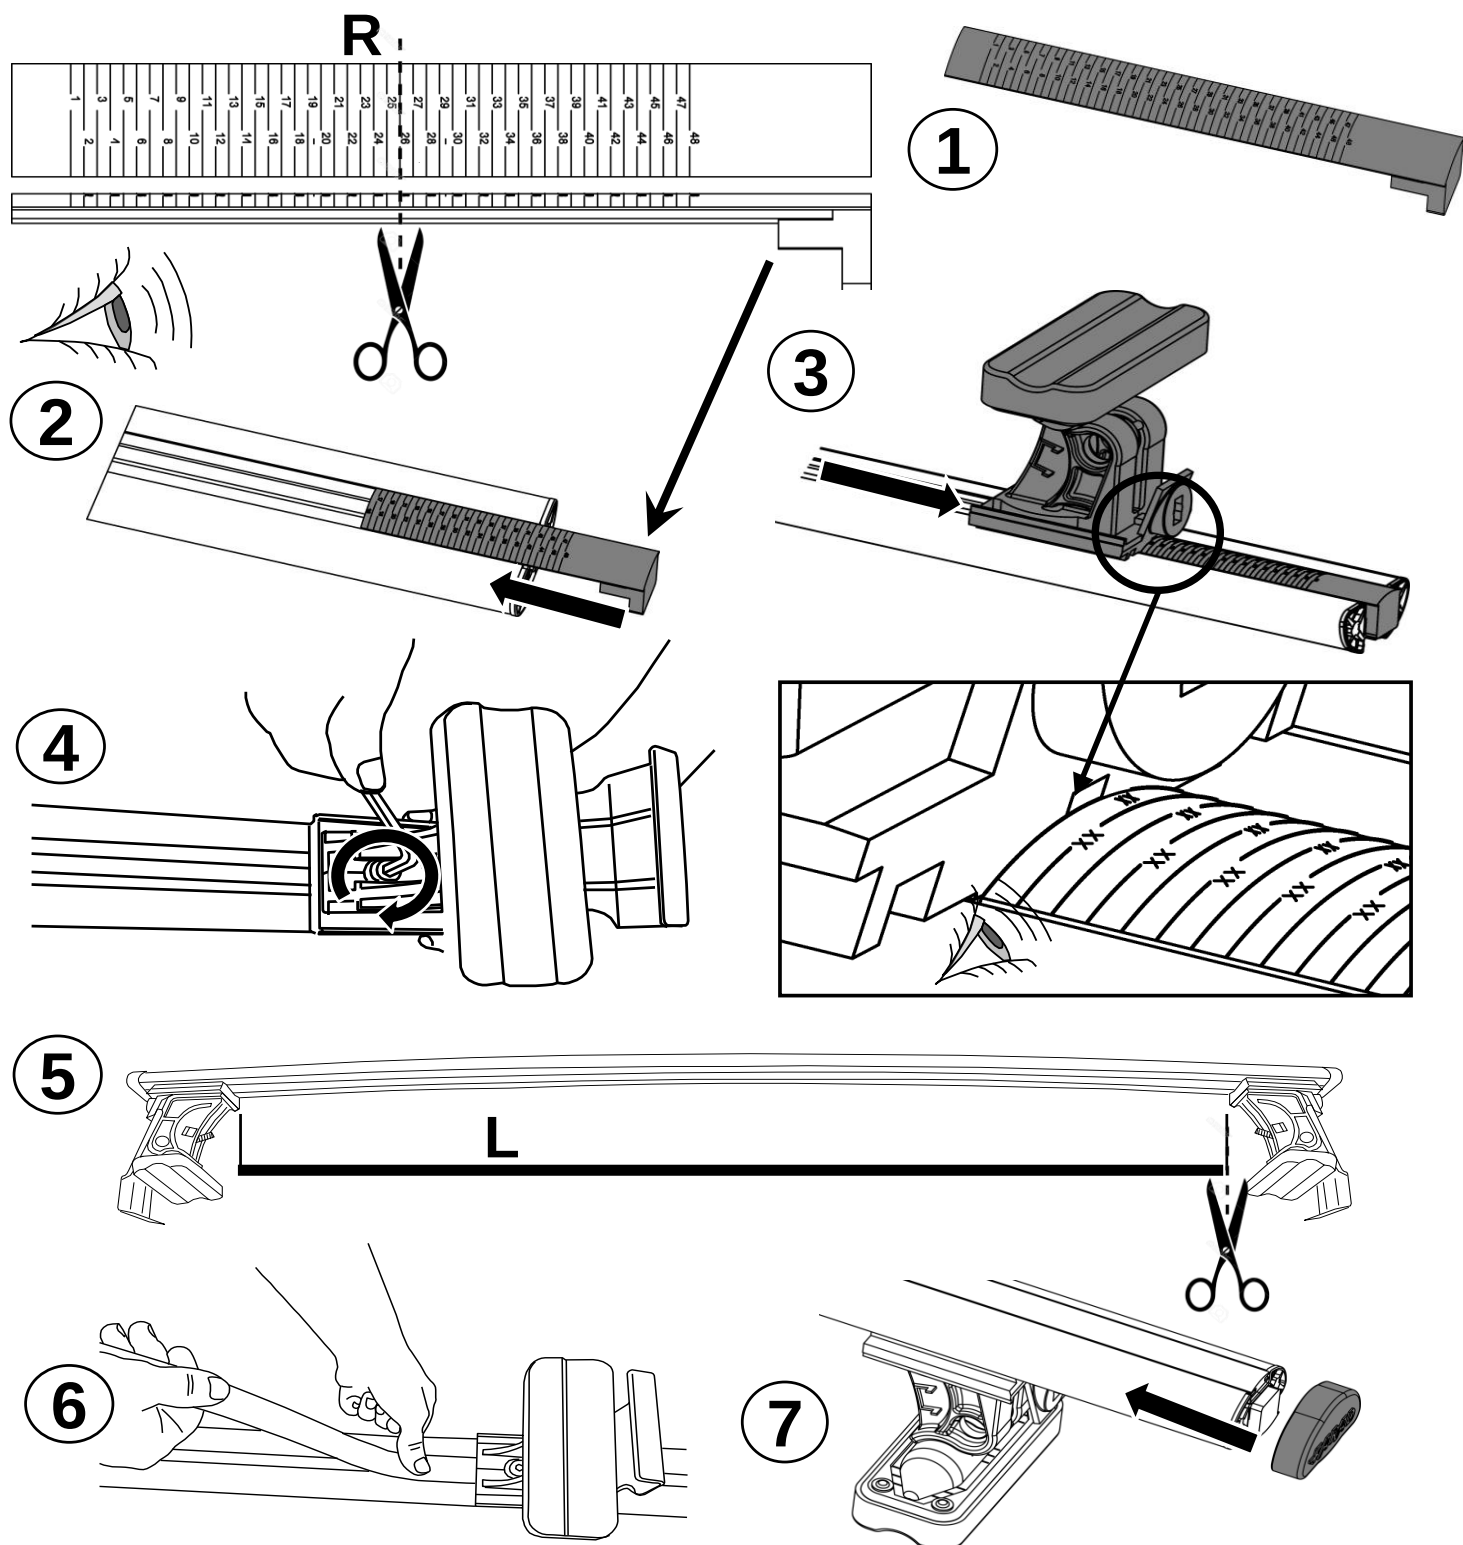


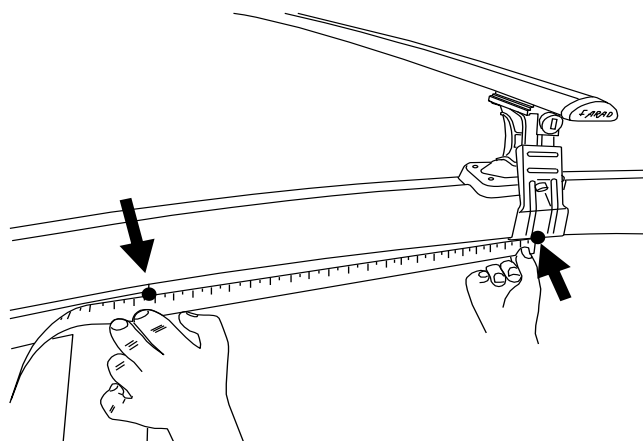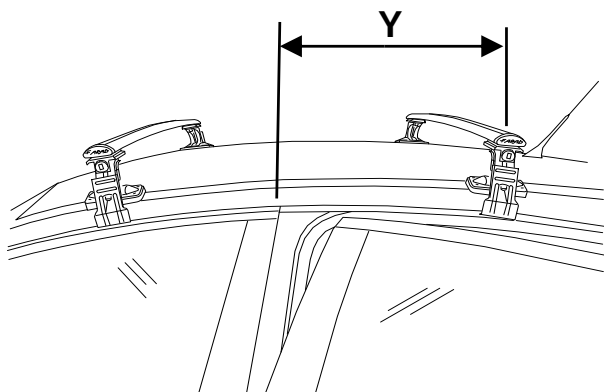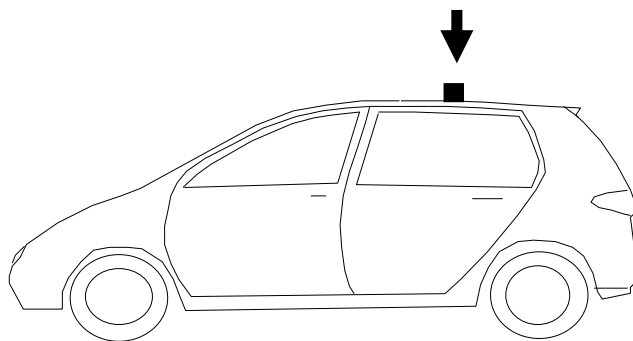


				Y
RENAULT	MEGANE	5	2008-2016	Y= 350
RENAULT	FLUENCE	5	2009 >	Y= 350
RENAULT	MEGANE SPORTOUR	5	2009-2016	Y= 350

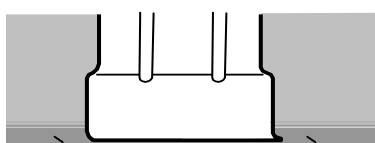

✓ 4 Nm

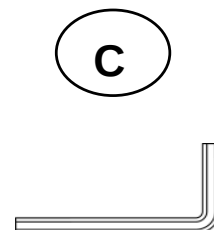
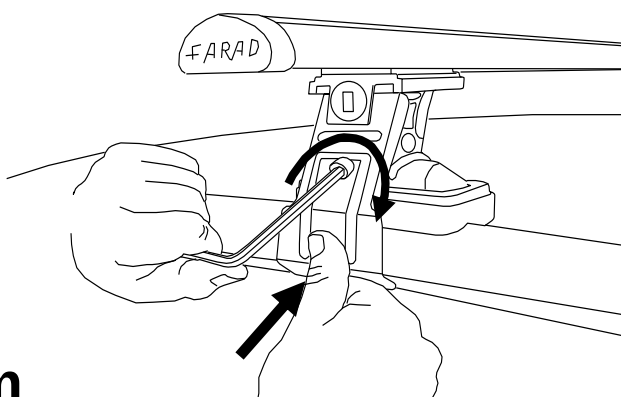





REV 001	25/09/2013	16 / 20
---------	------------	---------

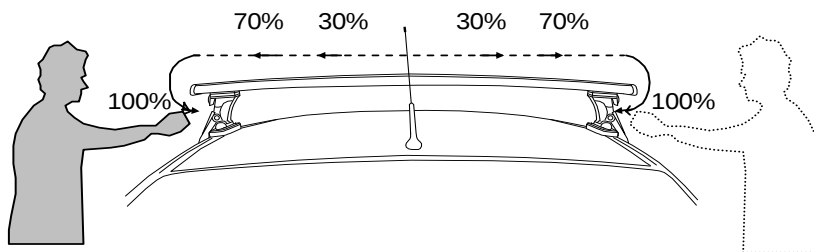


I Alternare il fissaggio delle viti
PL Śruby dokręcaj naprzemiennie
GB Tighten alternately
NL Afwisselend aan de linker- en de
rechterkant aandraaien

F Serrer alternativement chaque côté
D Die Schrauben abwechselnd anziehen
E Apretar alternativamente
SWE Dra åt växelvis

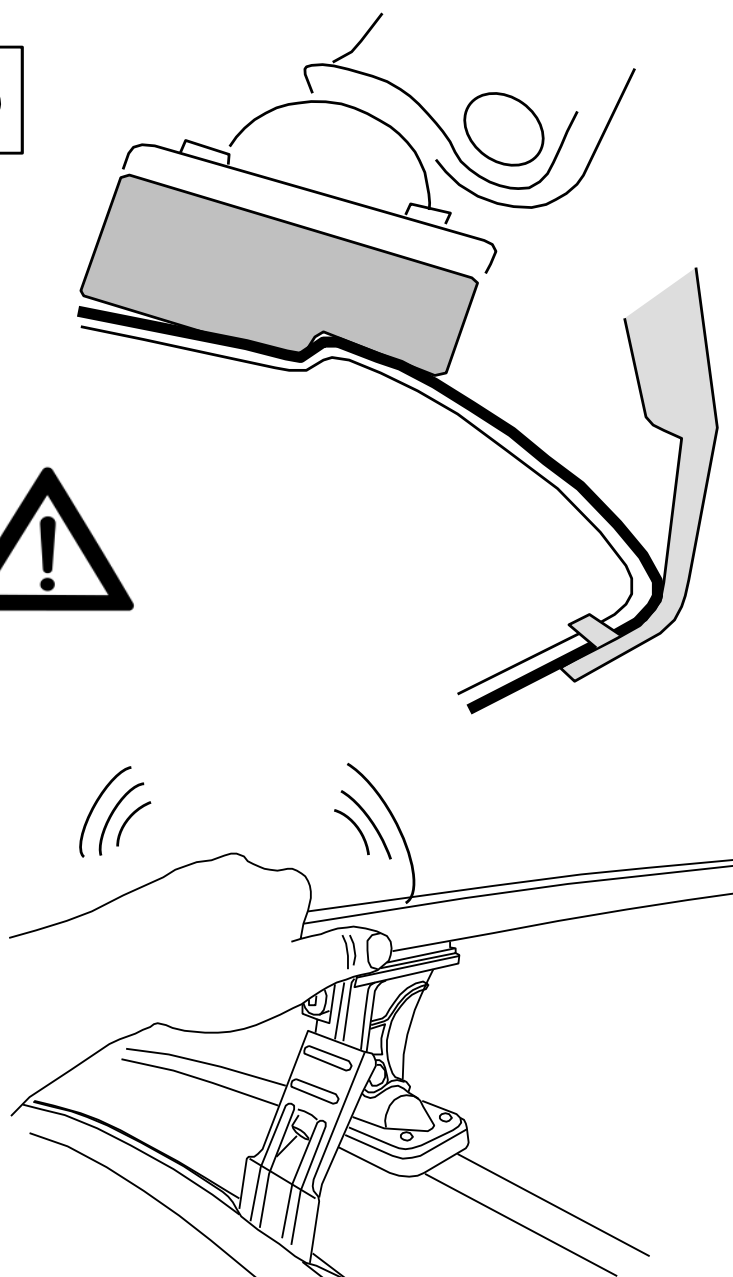

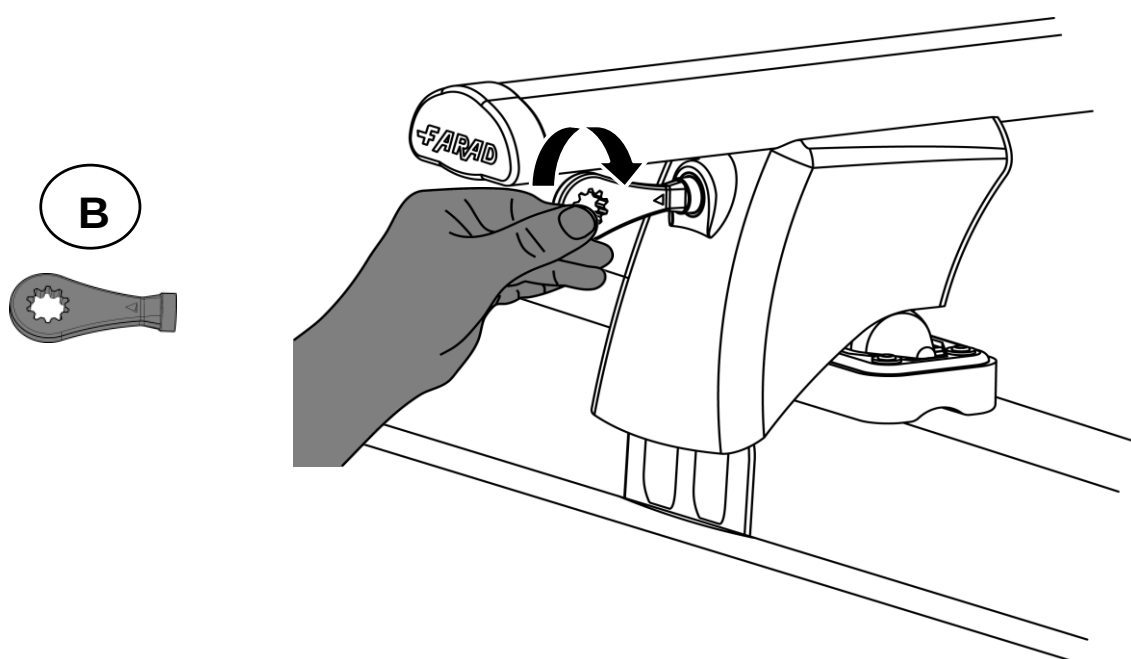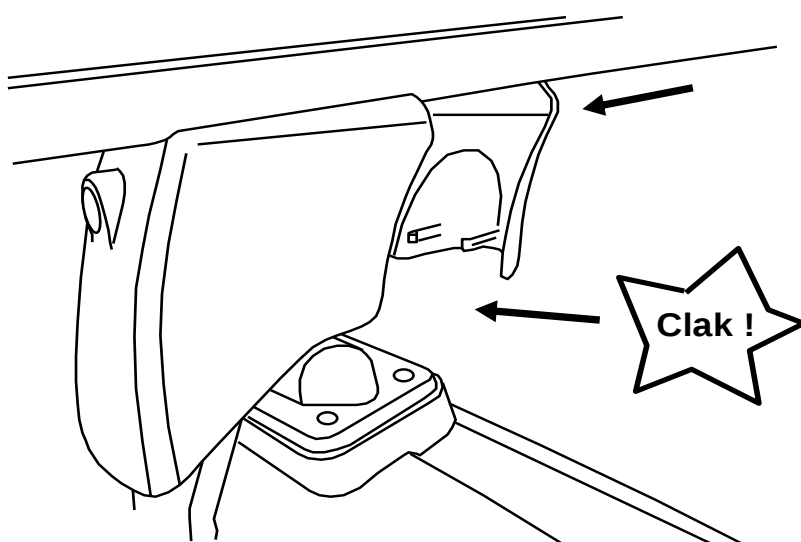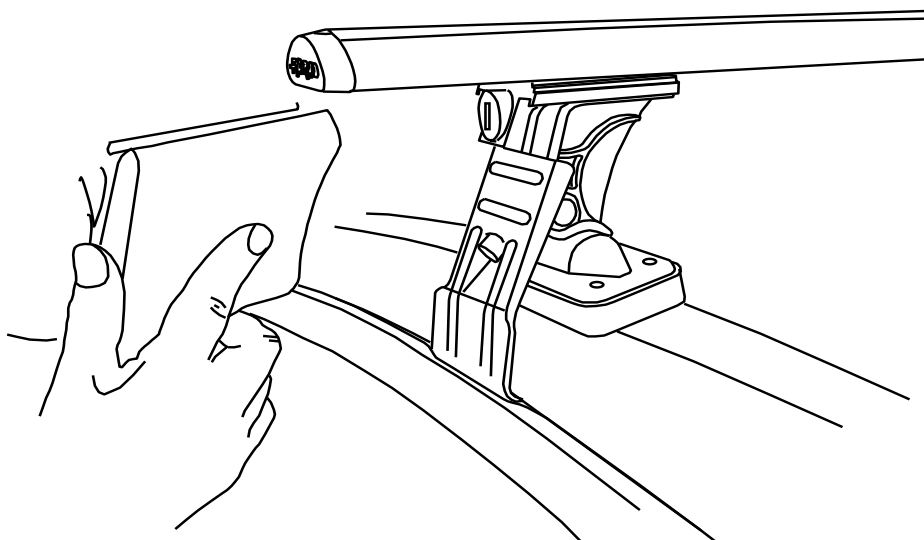

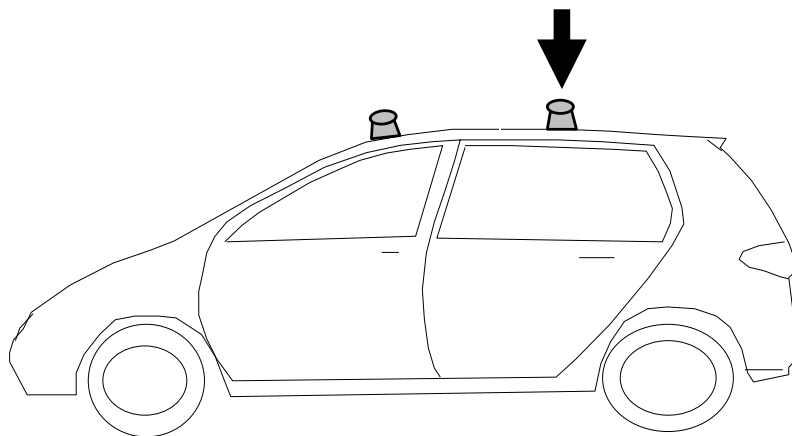


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

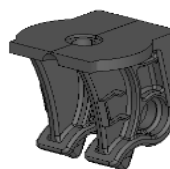

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

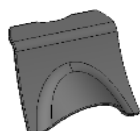


INVOLUCRO POST.
90341 / 9

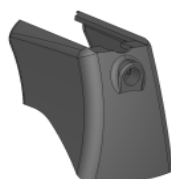

INVOLUCRO ANTERIORE
90341 / 8




CHIAVE + N° COMB
90341 / 7

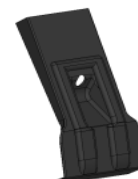

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7

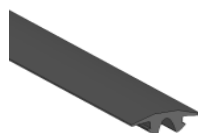


GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



**GUARNIZIONE
NUMERICA**
91141 / 14

FARAD[®]
made in italy

tel. 011 9713719 - n° verde 800984229
www.faradworld.com