

FARAD[®]

made in Italy

BS 068

VW PASSAT 2005-2010
VW PASSAT 2010-2015

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

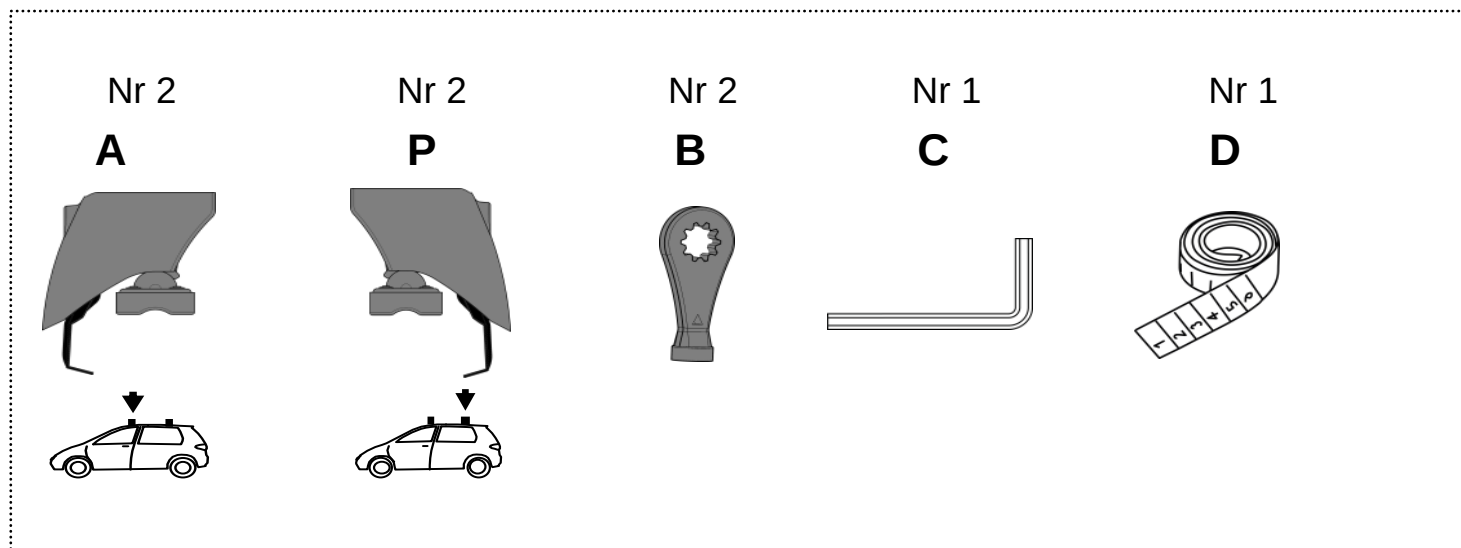











+


KIT ALU

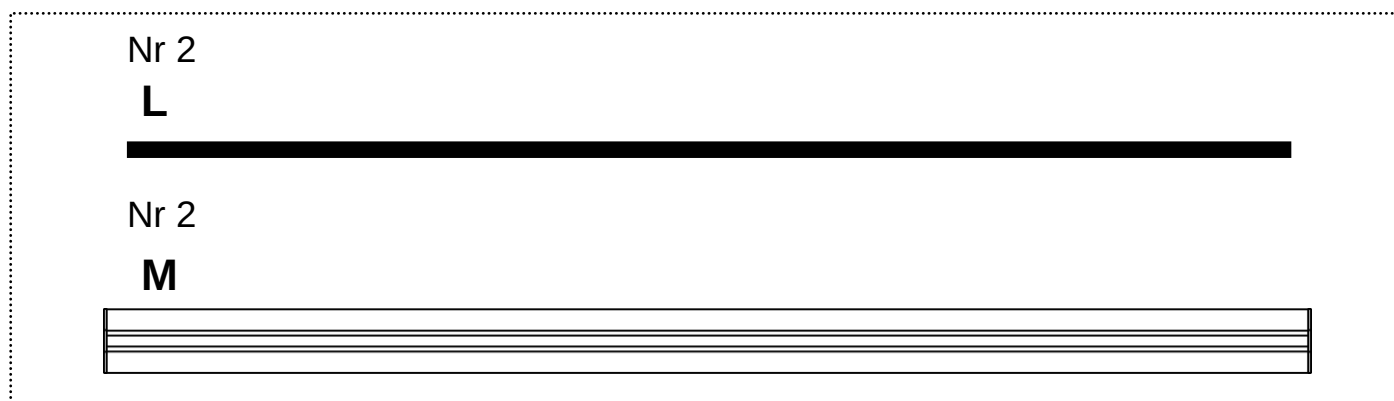




=


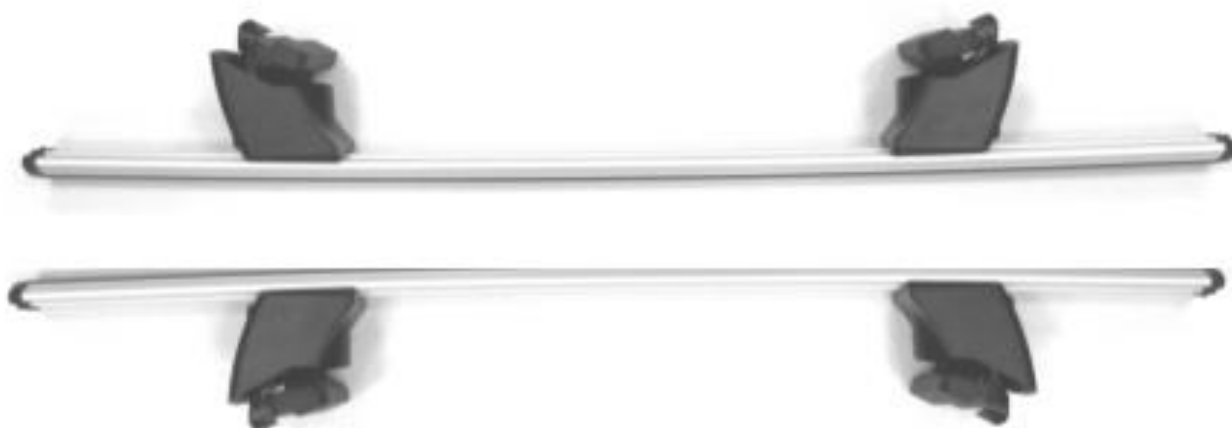


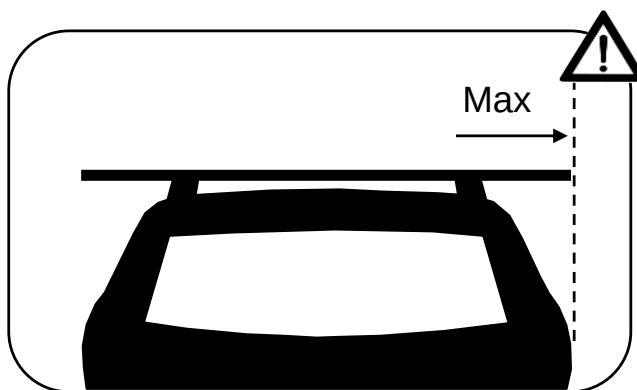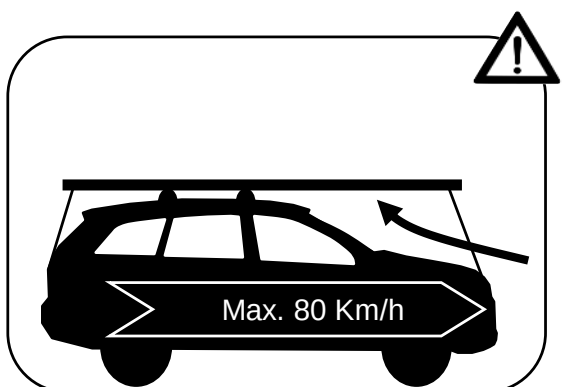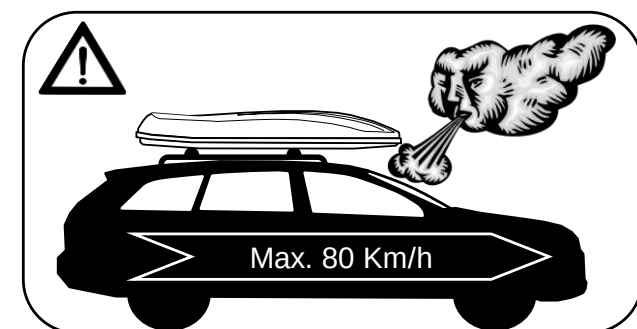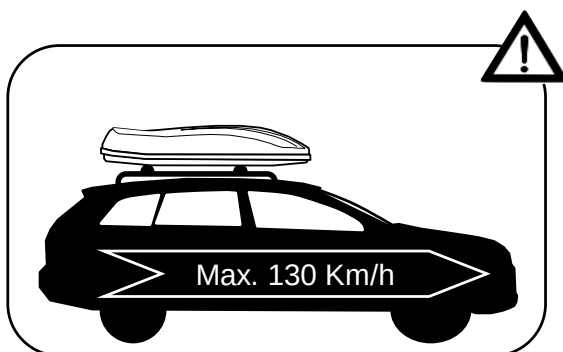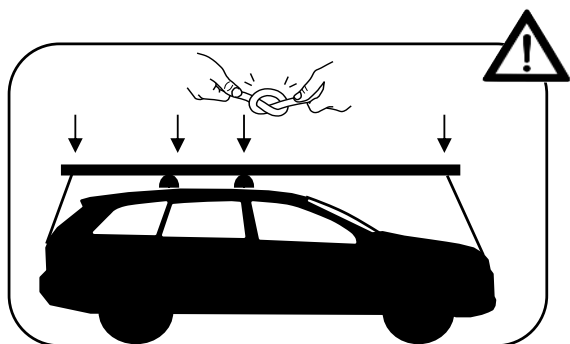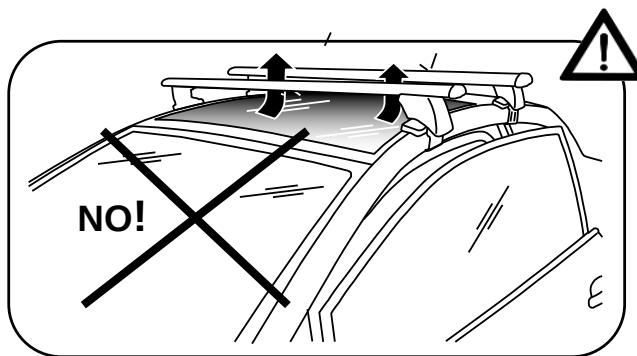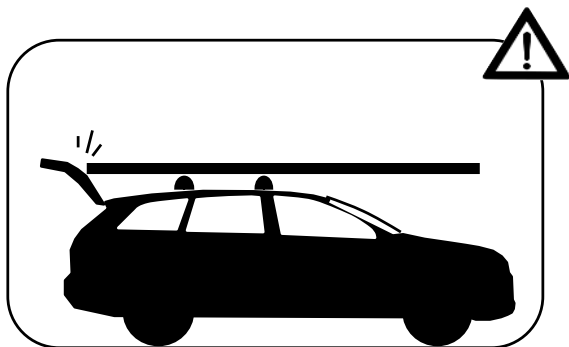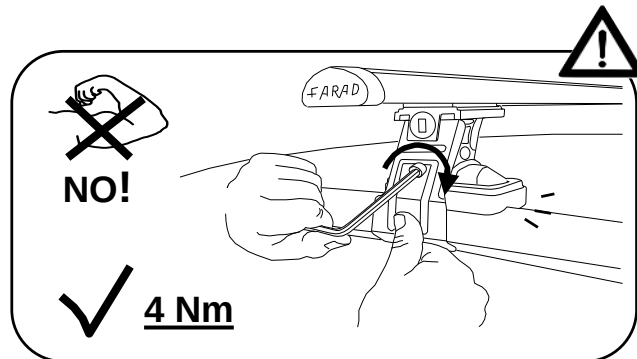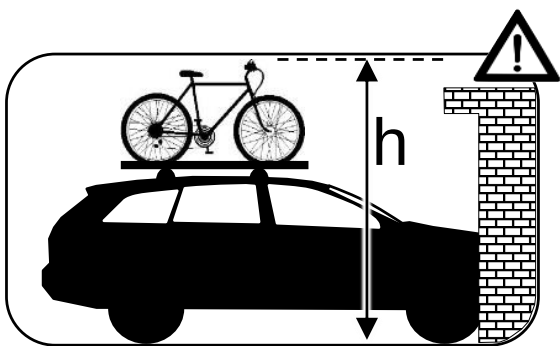

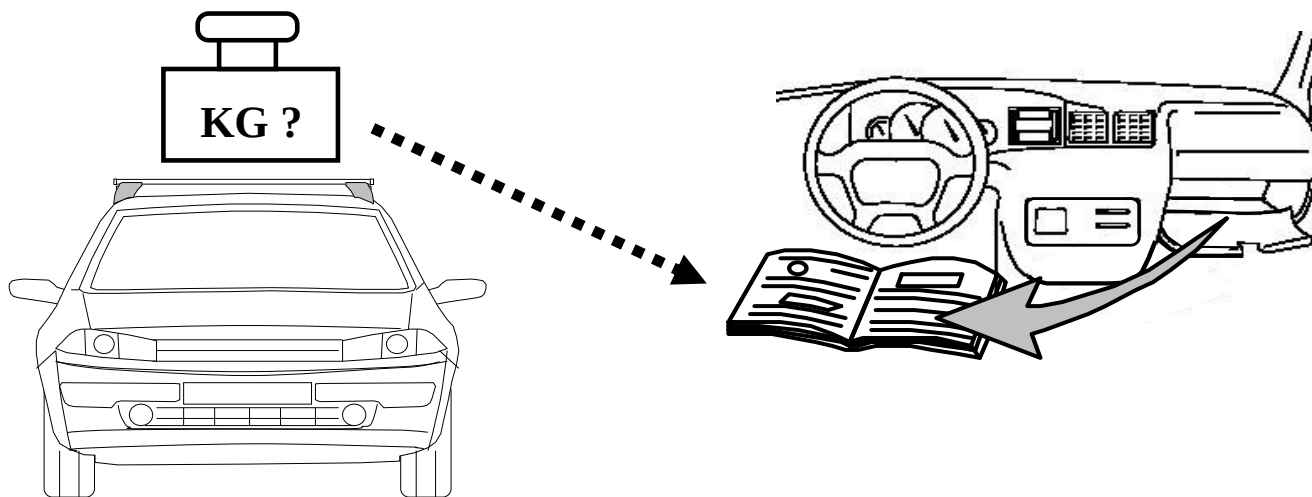


- | | |
|--|--|
| I Controllare carico del tetto sul manuale dell'auto | F vérifier le chargement manuel du toit de la voiture |
| PL Sprawdzić ładowność dachu w instrukcji | D überprüfen Sie die manuelle Beladung der Autodach |
| GB Check roof load capacity in car instruction | E comprobar la carga manual del techo del coche |
| NL check de handleiding belasting van het dak van de auto | SWE kontrollera manuell inläggning på taket av bilen |

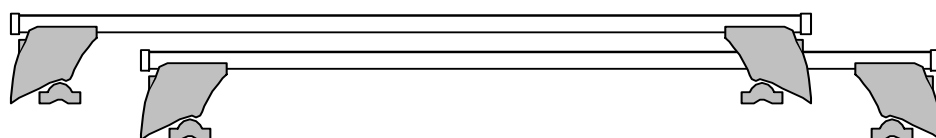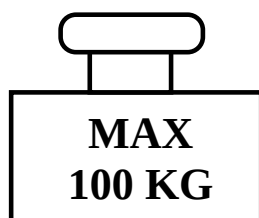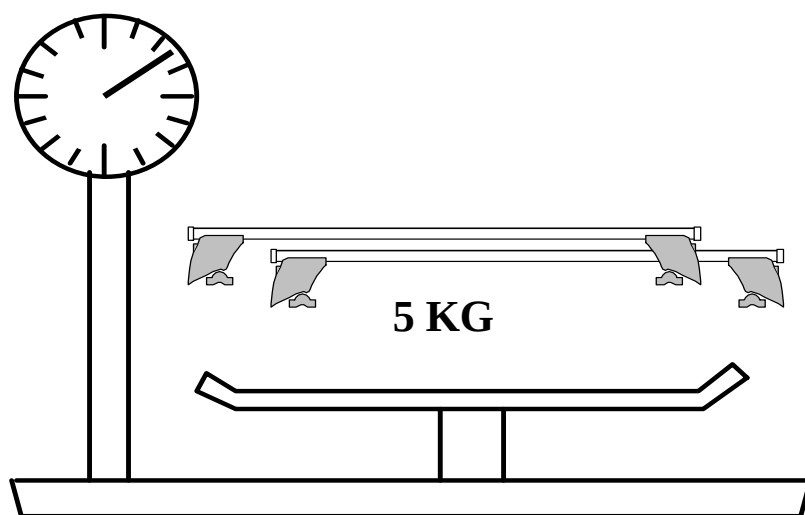

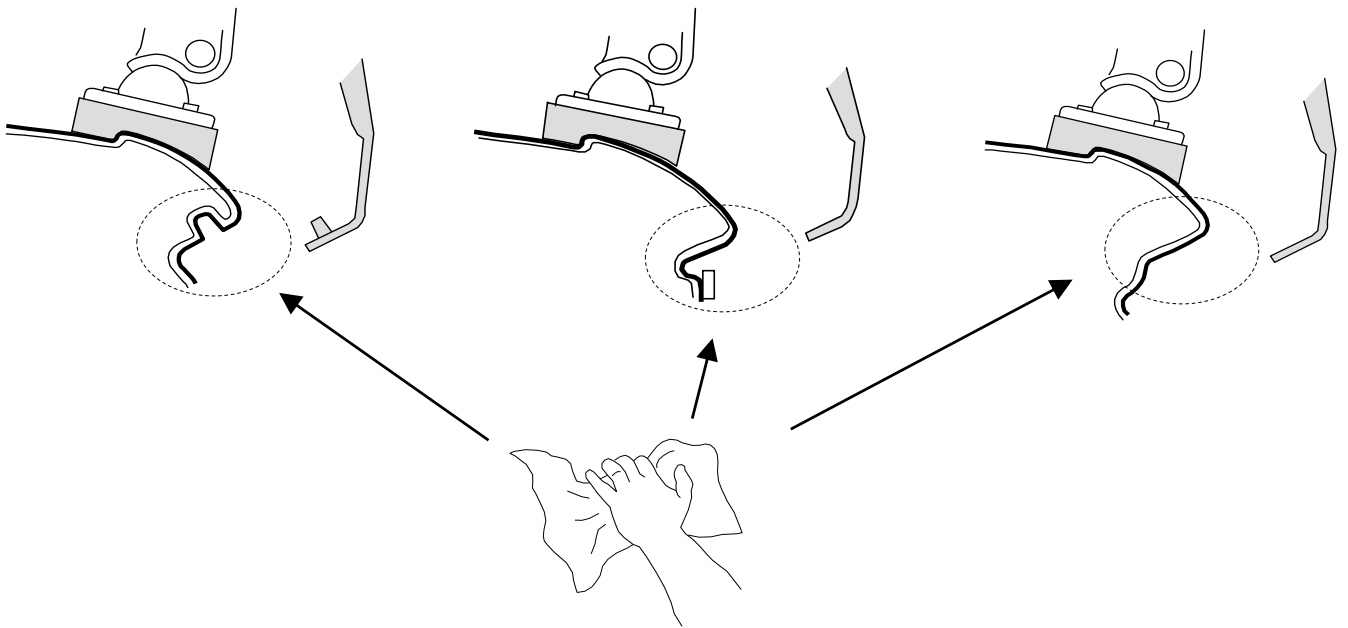
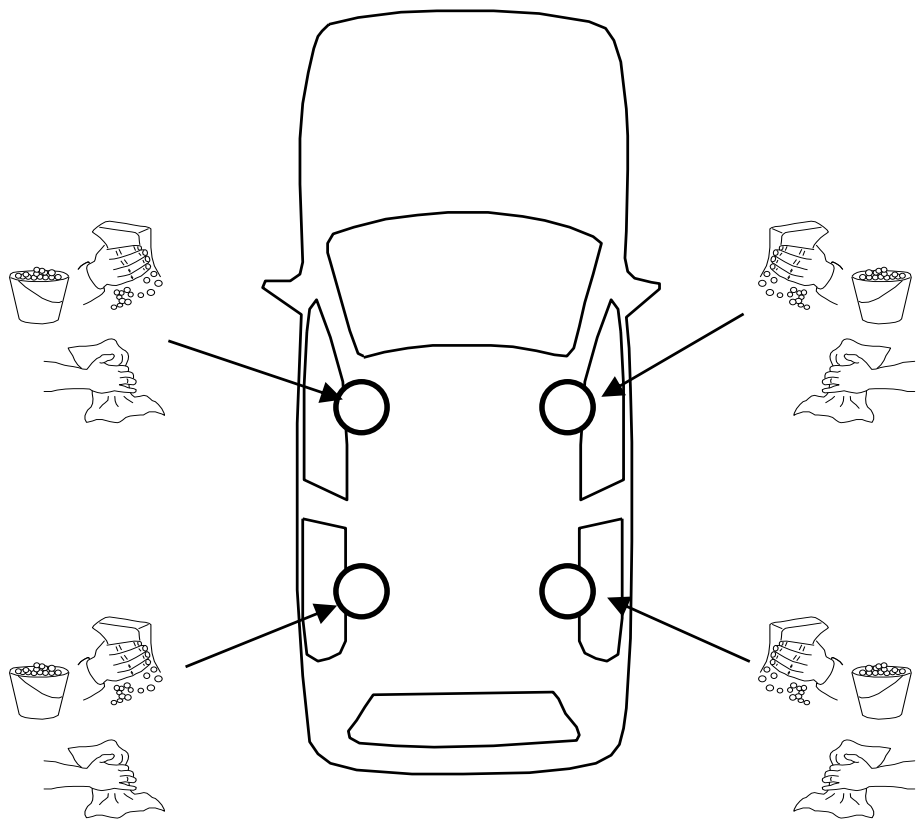



I	Montaggio Barra Anteriore	F	Fixation Barre Avant
PL	Montaż Bagażnika Bazowego Tylnego	GB	Fitting Front Roof Bar
D	Montage Vorderes Dachträgers	NL	Montage Voorste Dakdrager
SWE	Montering Av Främre Lasthållaren	E	Fijación Barra Frontal

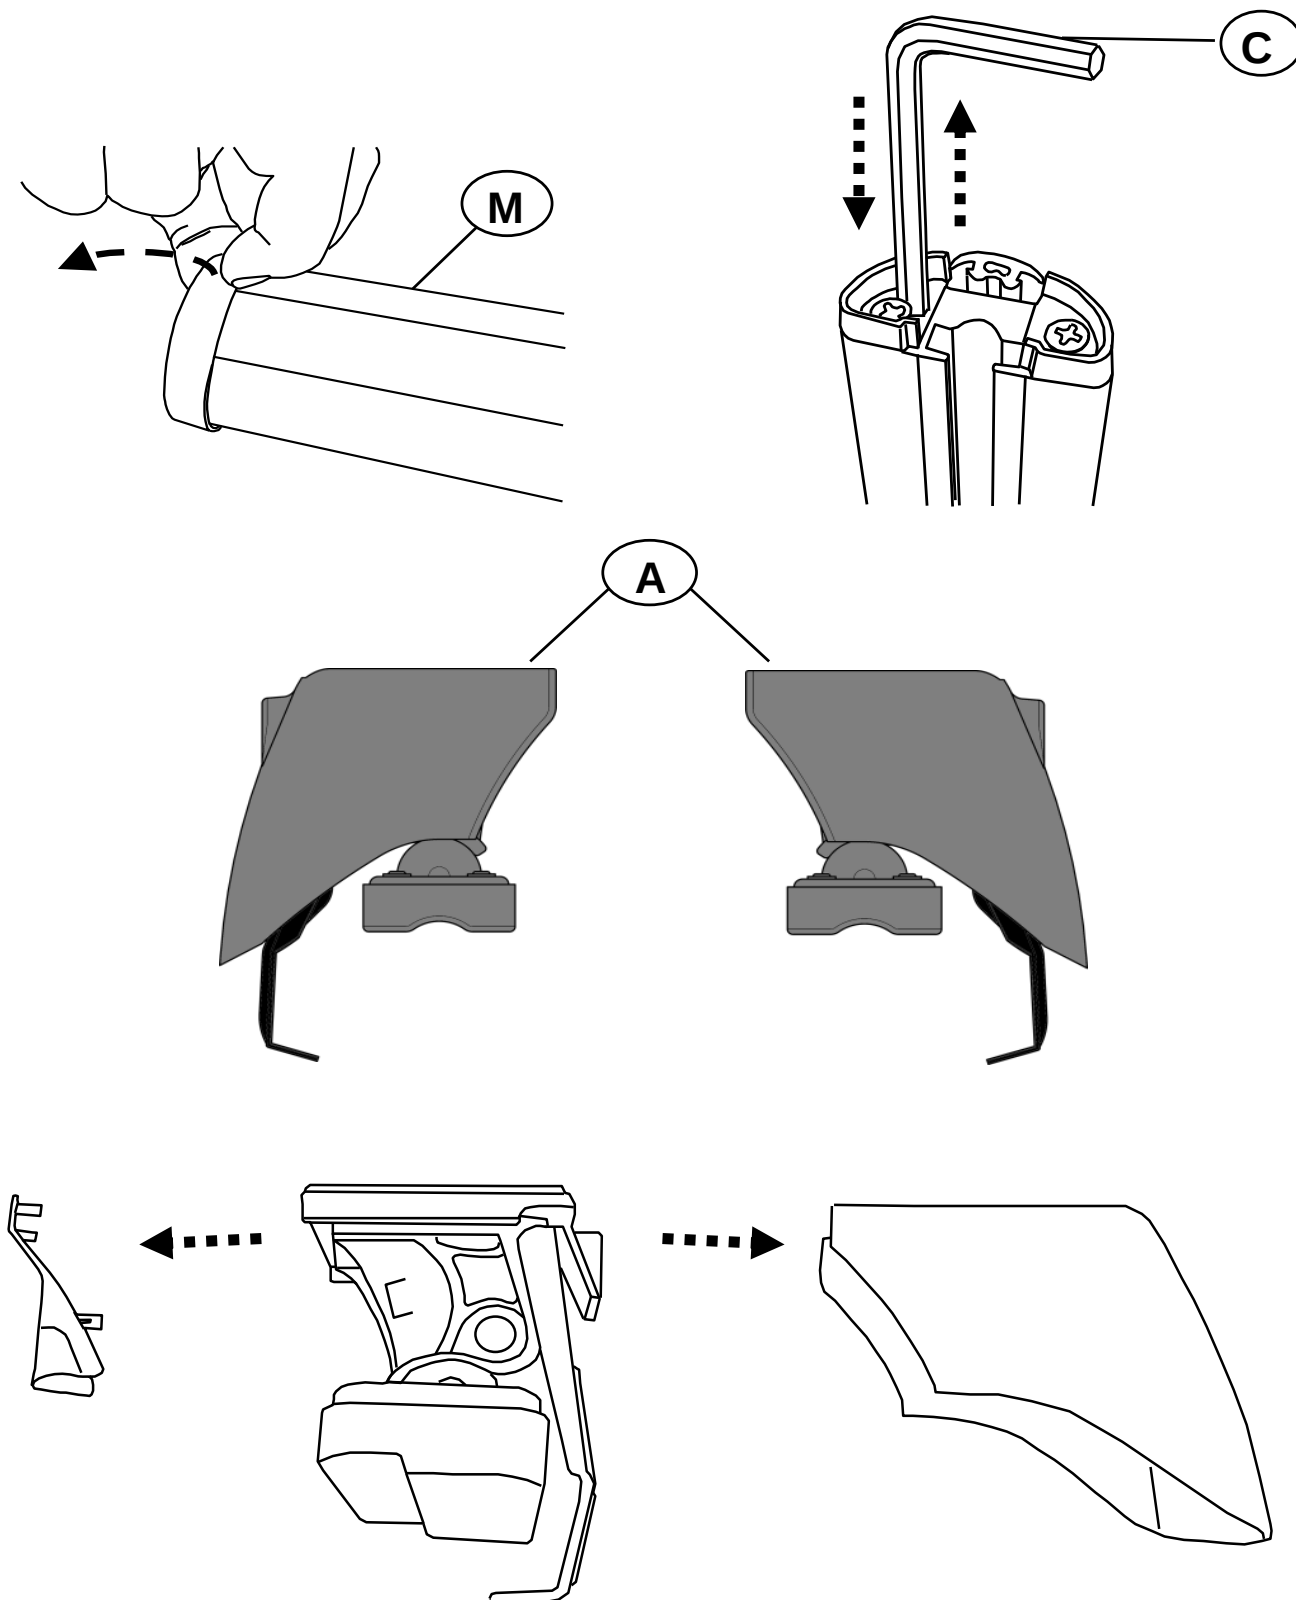





M

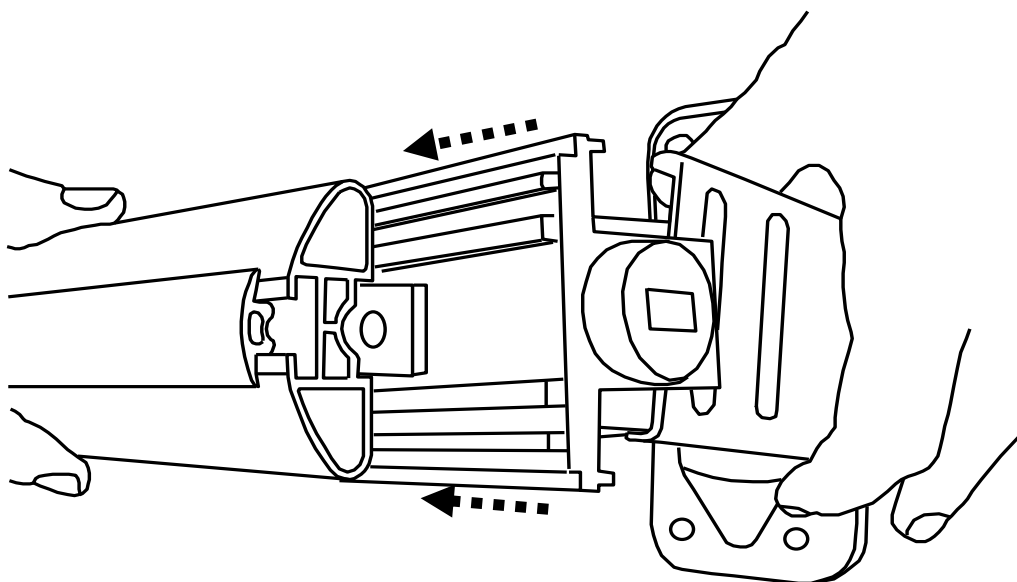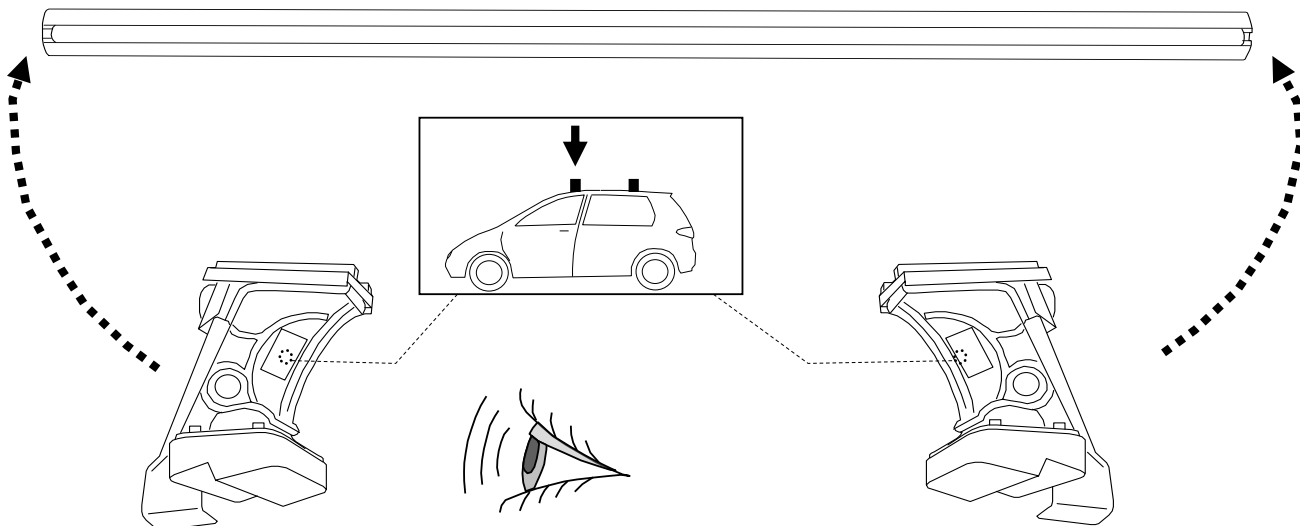

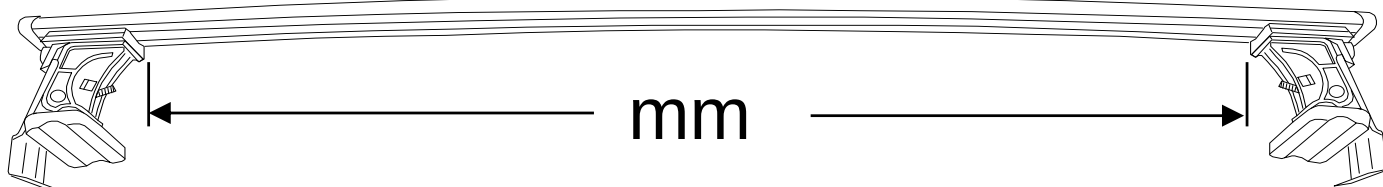


				R	mm
VW	PASSAT	5	2005-2010	R= 41	1065
VW	PASSAT	5	2010-2015	R= 39	1055

R R





1

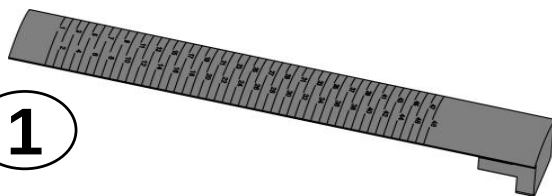



3




2

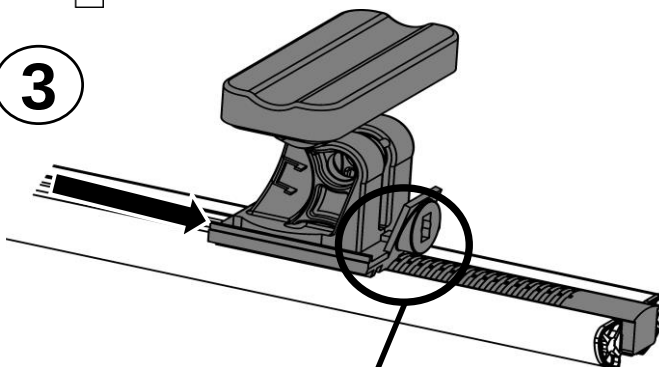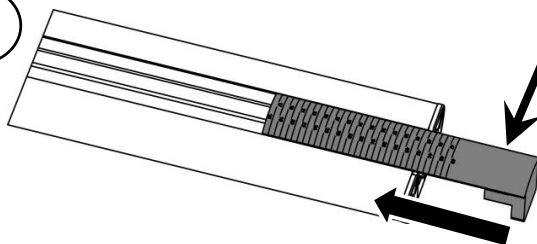


4

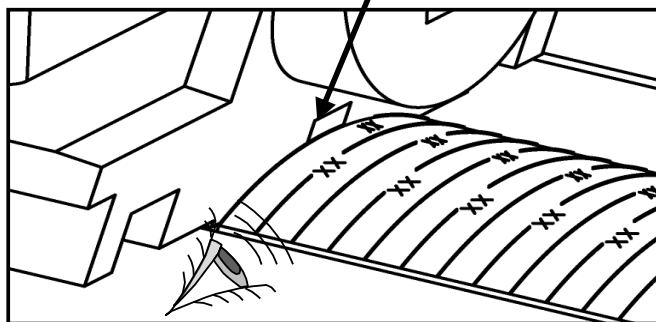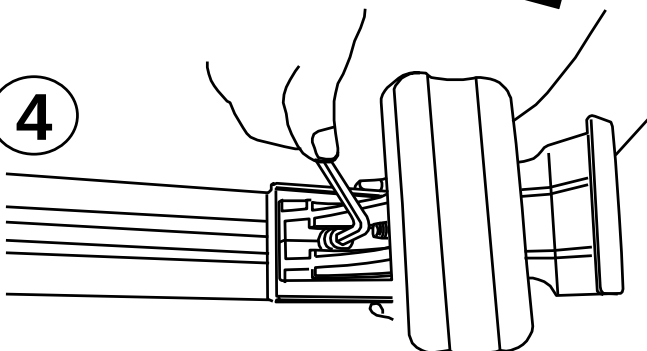


5

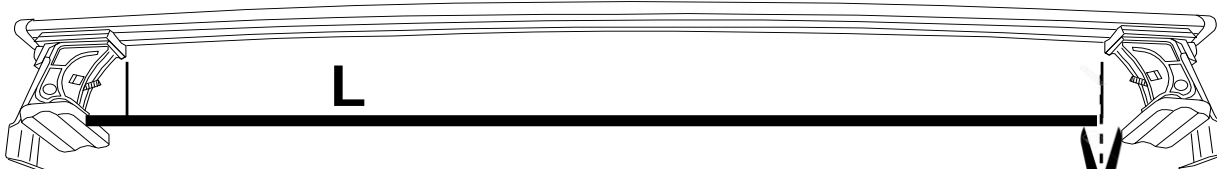


6


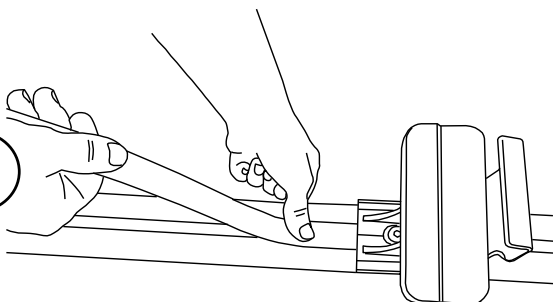




7



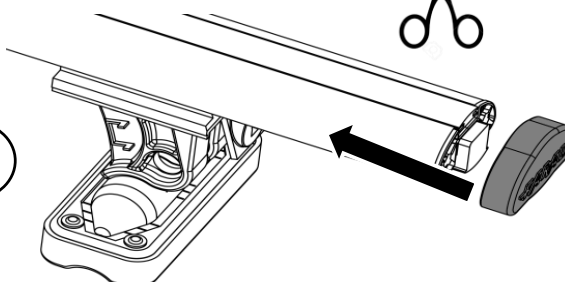


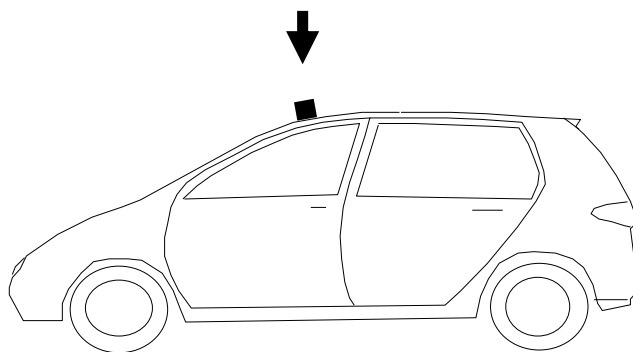




D

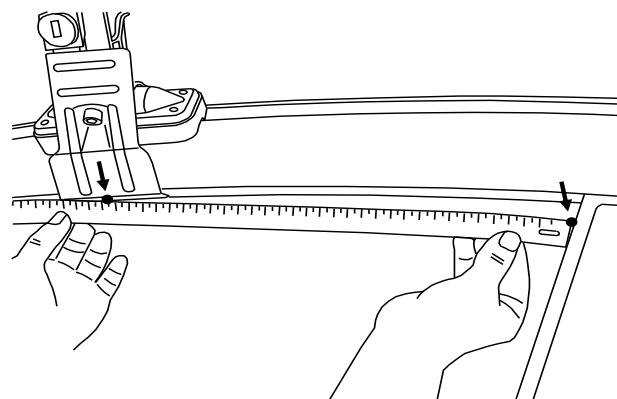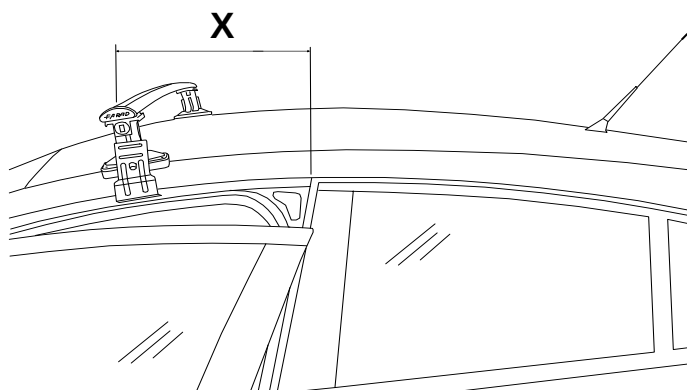

				X
VW	PASSAT	5	2005-2010	X= 270
VW	PASSAT	5	2010>	X= 270

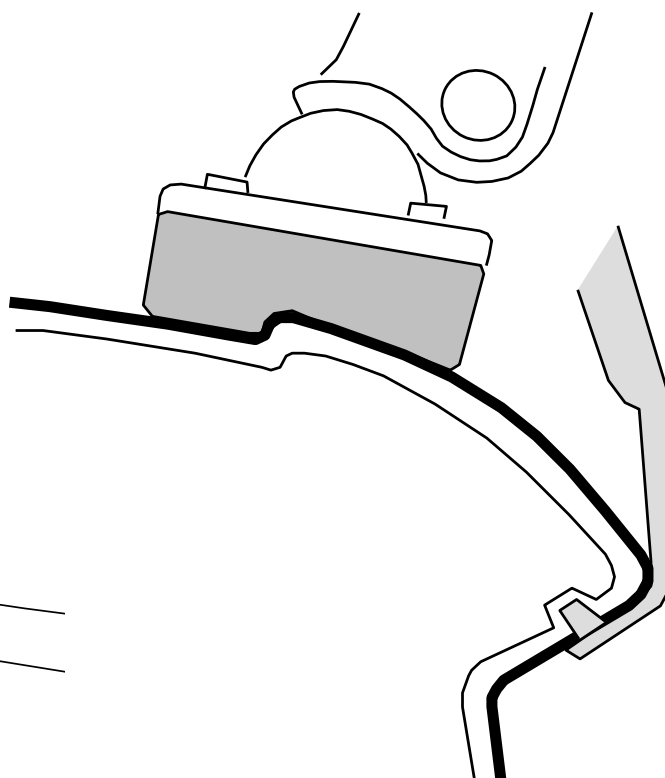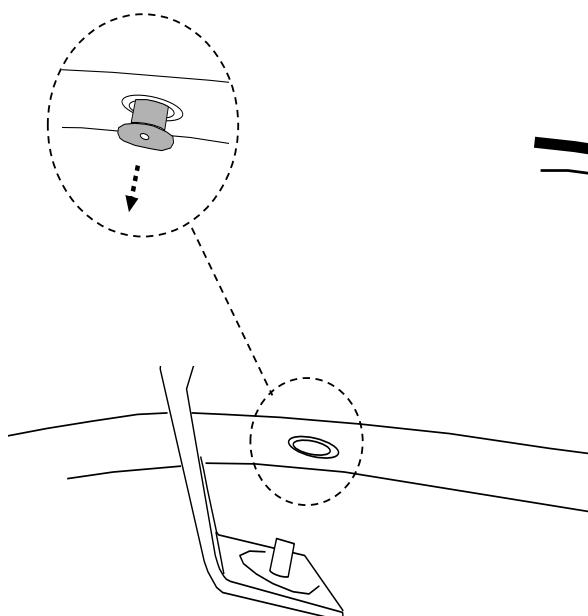





REV 000	10/05/2011	9 / 20
----------------	-------------------	---------------

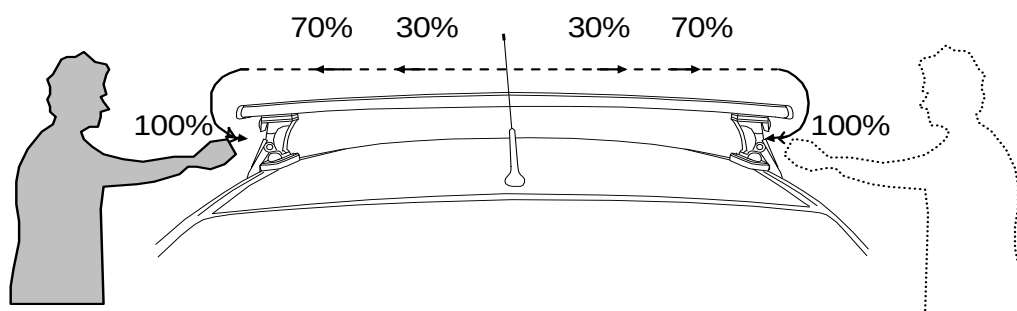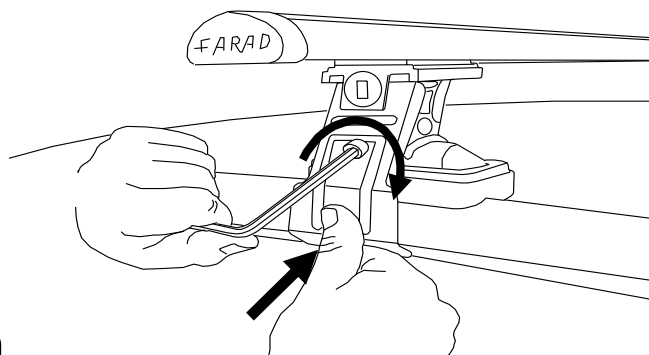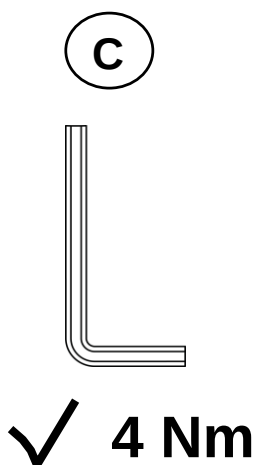


I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

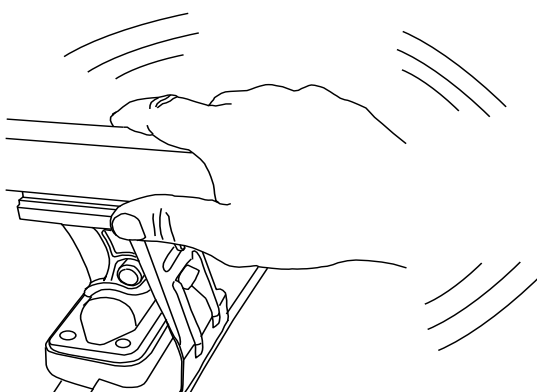

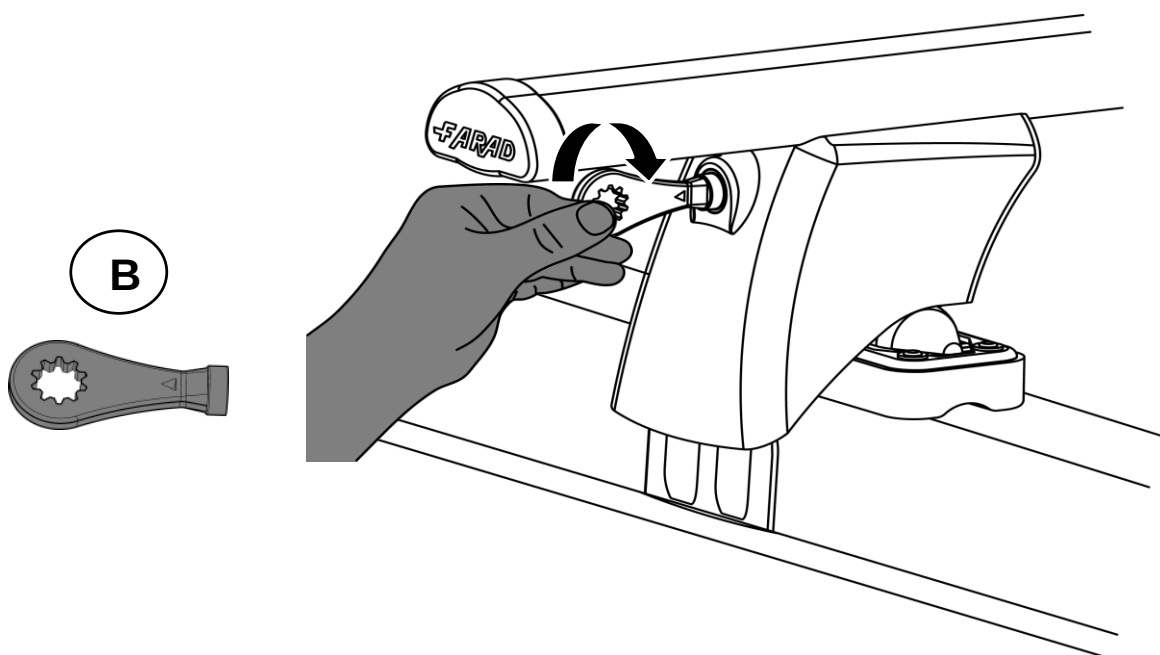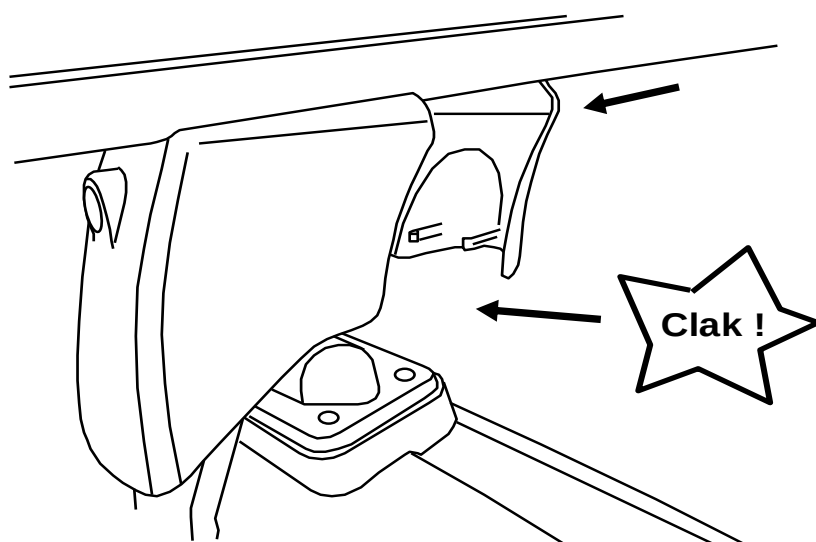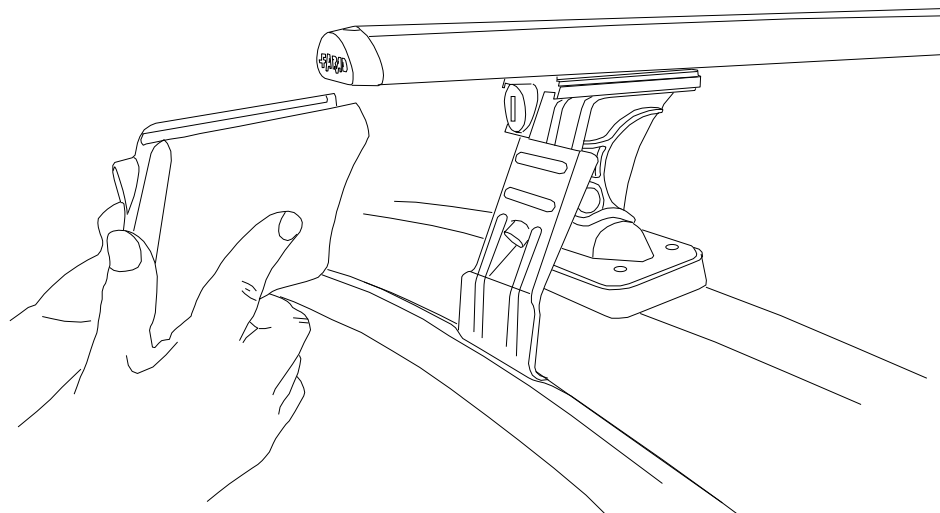

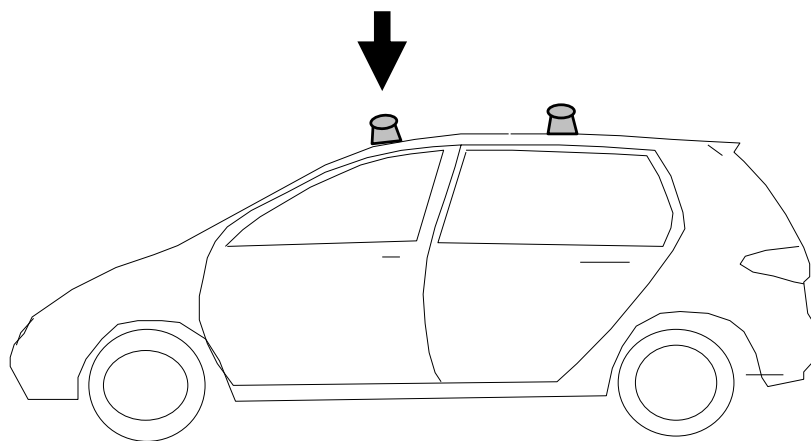

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren





NL Montage Achterste Dakdrager

F Fixation Barre Arriere

GB Fitting Rear Roof Bar



E Fijación Barra Trasera


D Montage Heckdachträgers

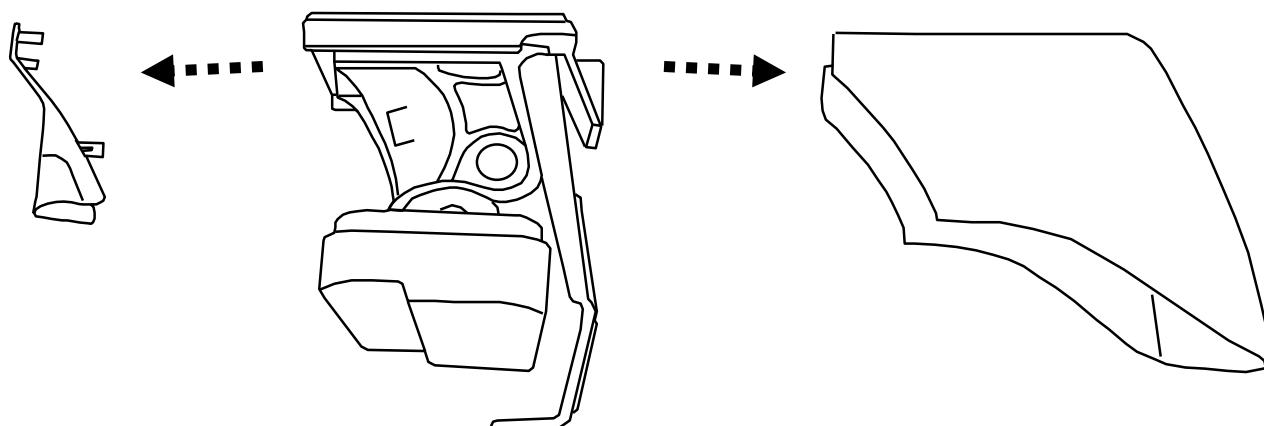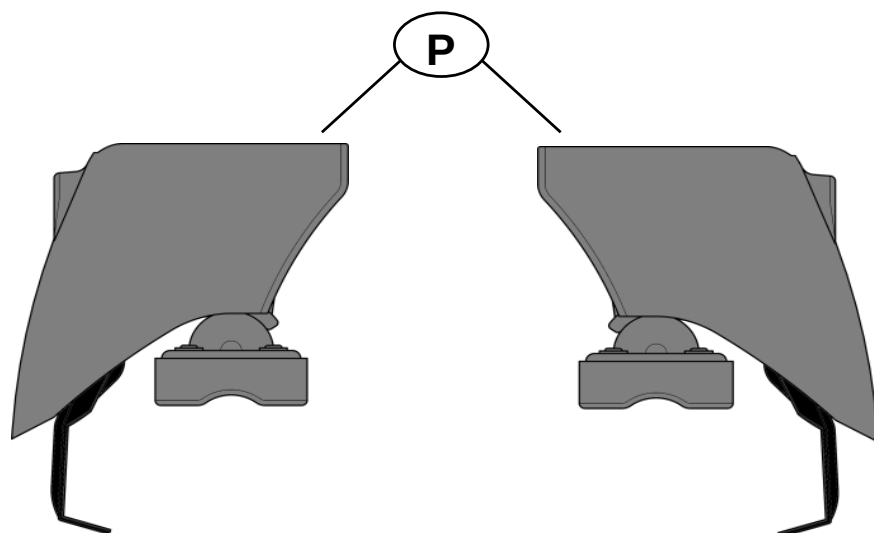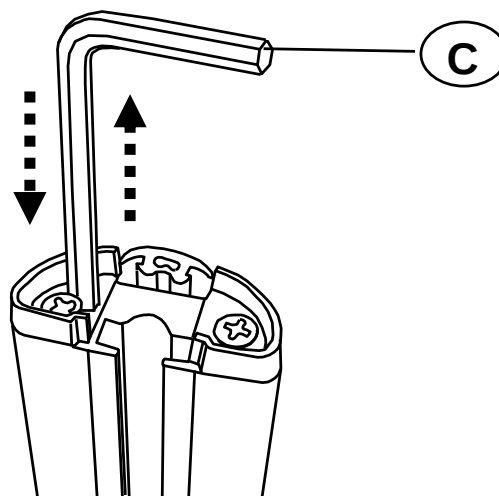
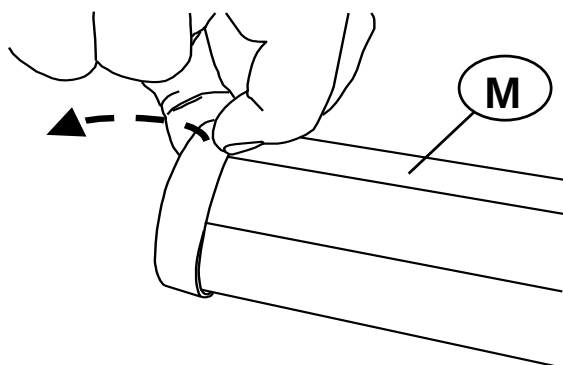








M

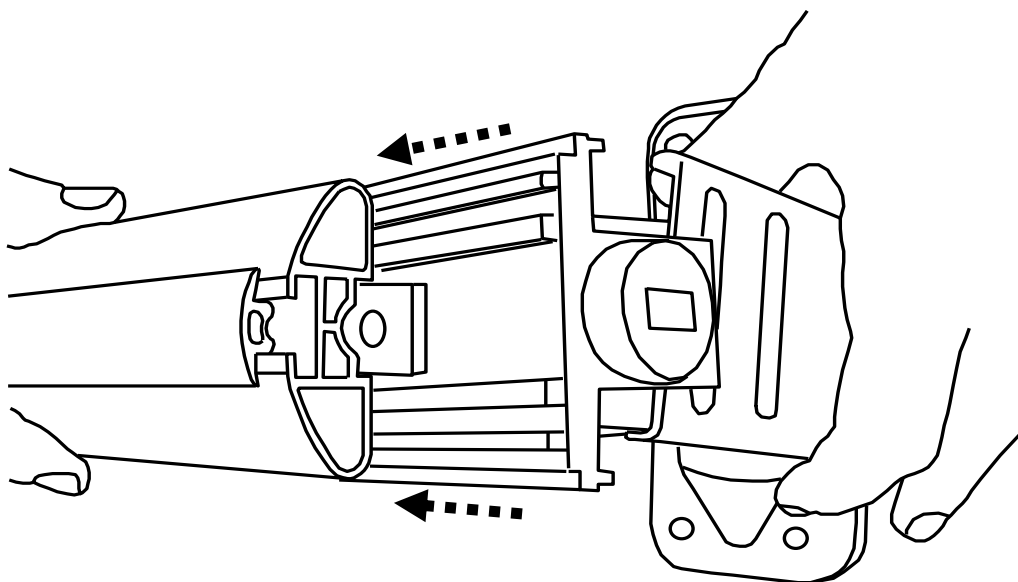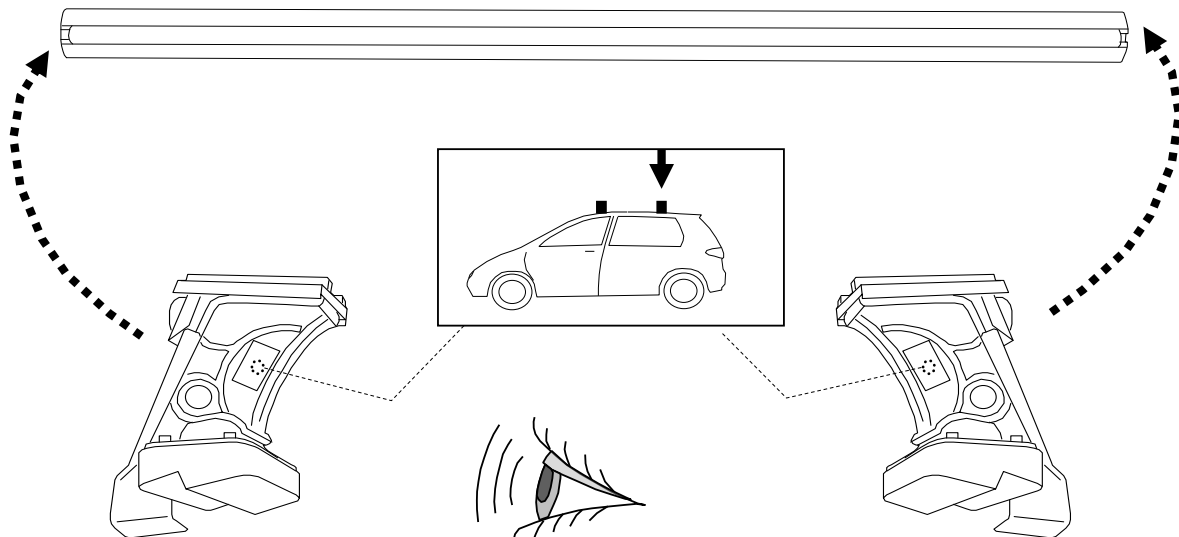




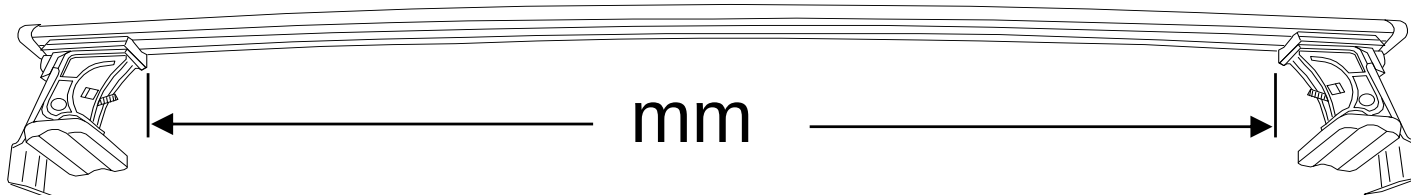


				R	mm
VW	PASSAT	5	2005-2010	R= 37	1045
VW	PASSAT	5	2010-2015	R= 37	1045


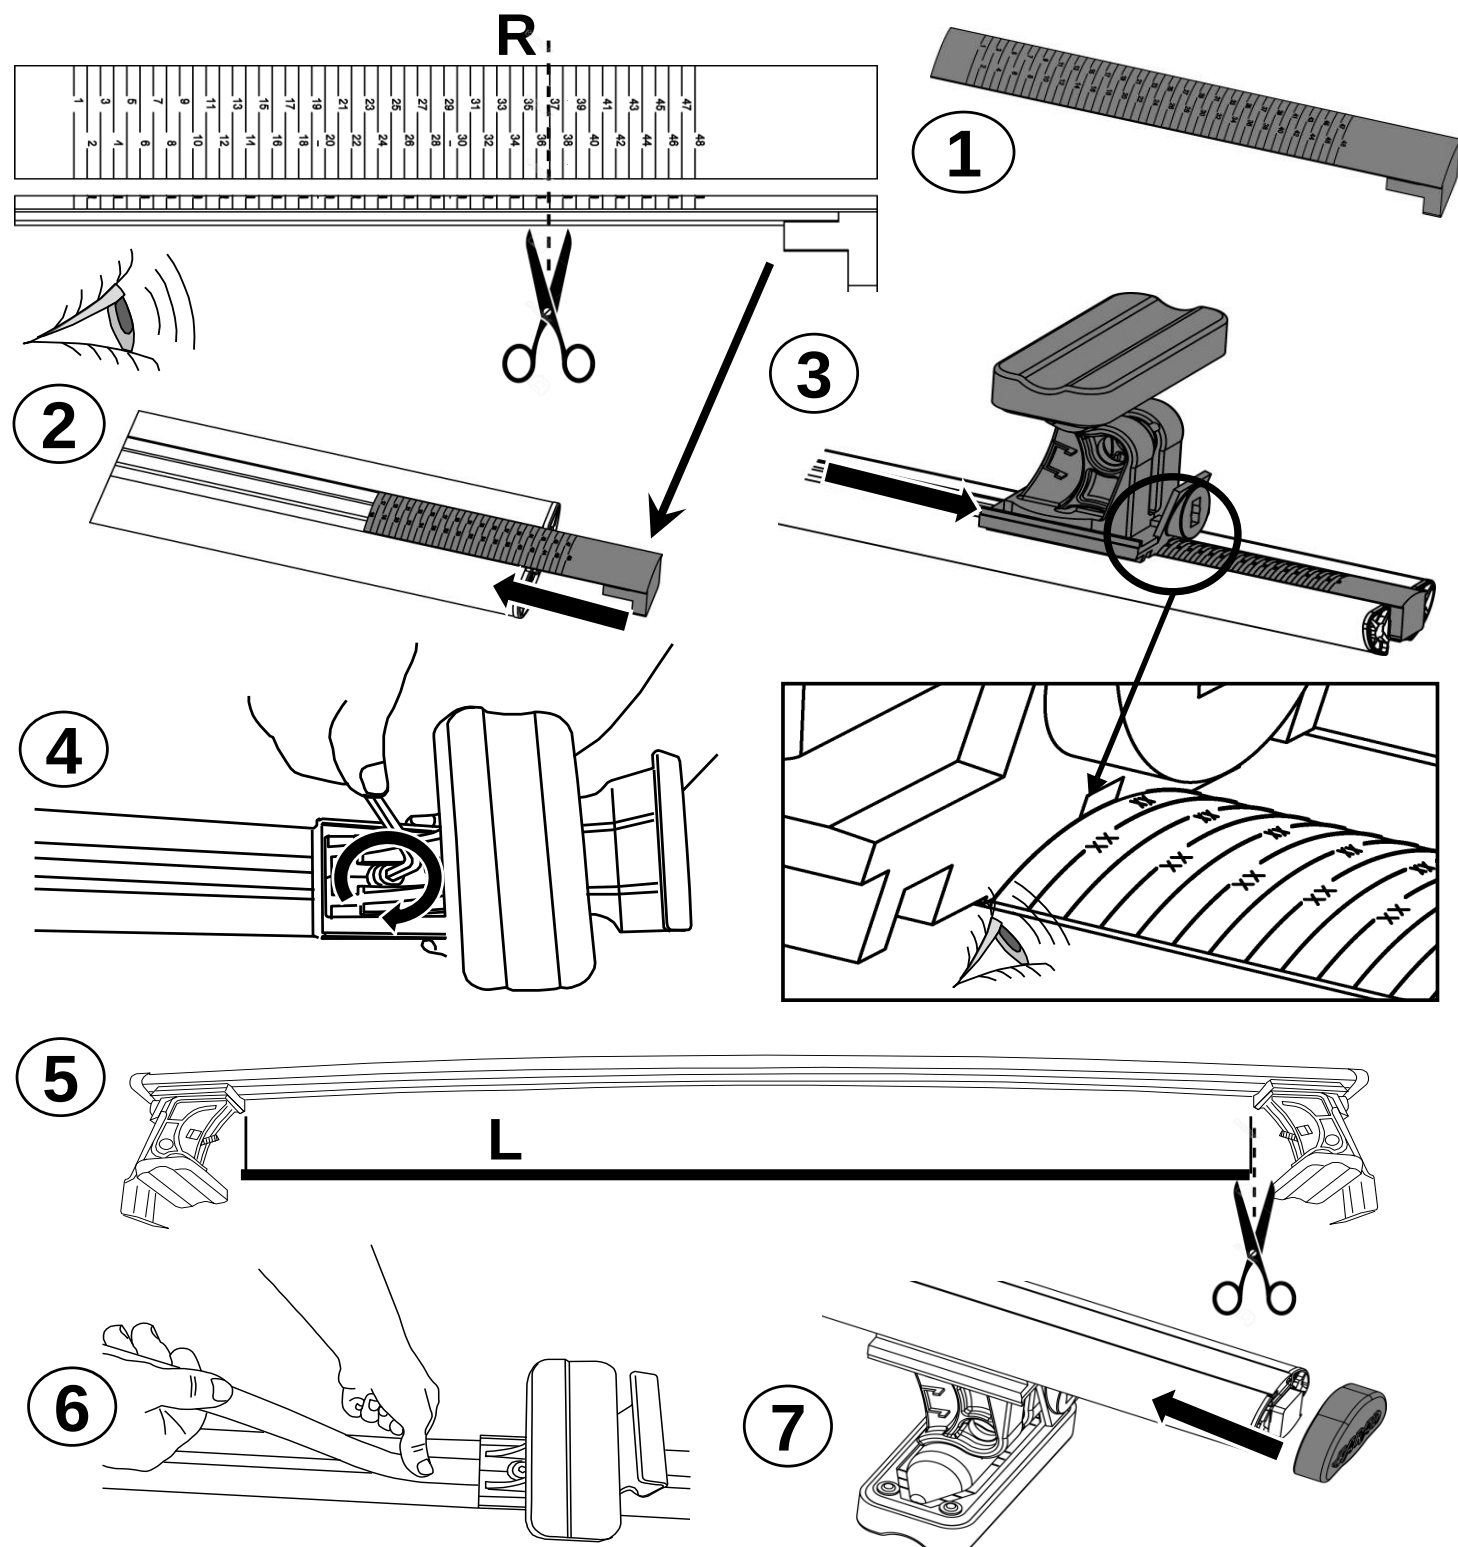


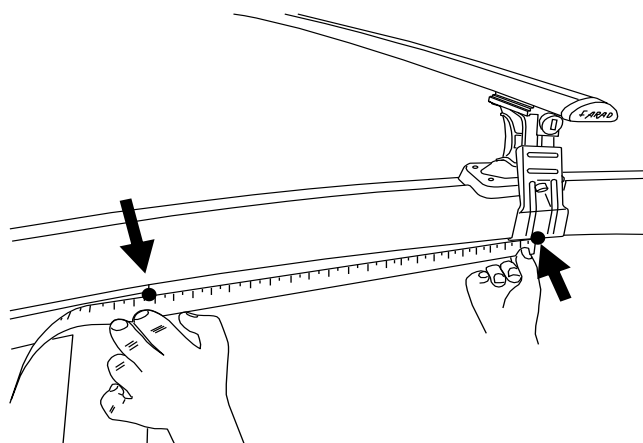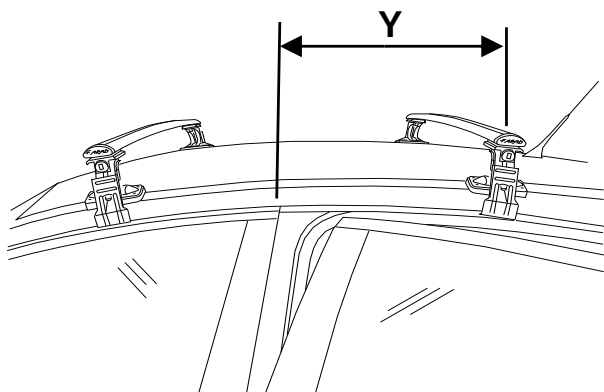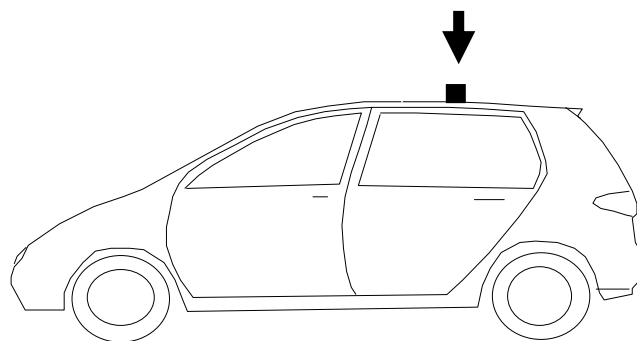


				Y
VW	PASSAT	5	2005-2010	Y= 480
VW	PASSAT	5	2010>	Y= 480

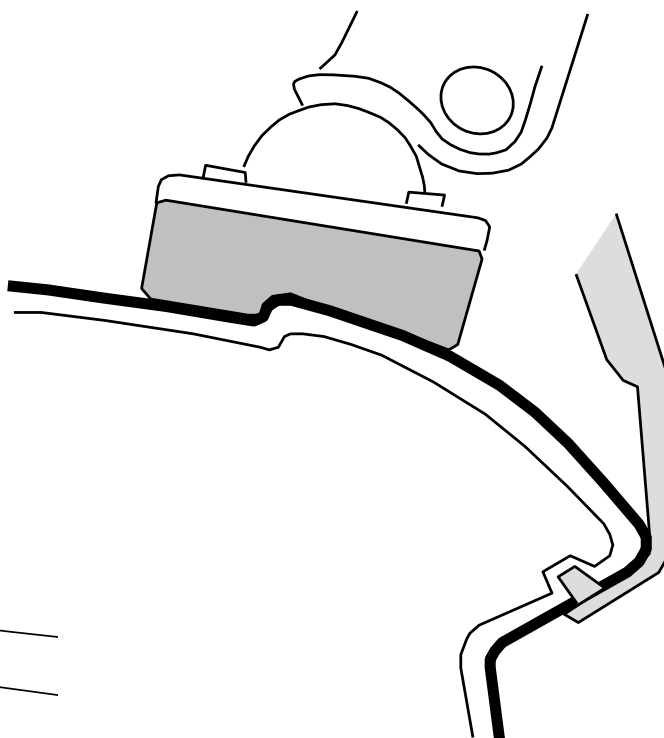
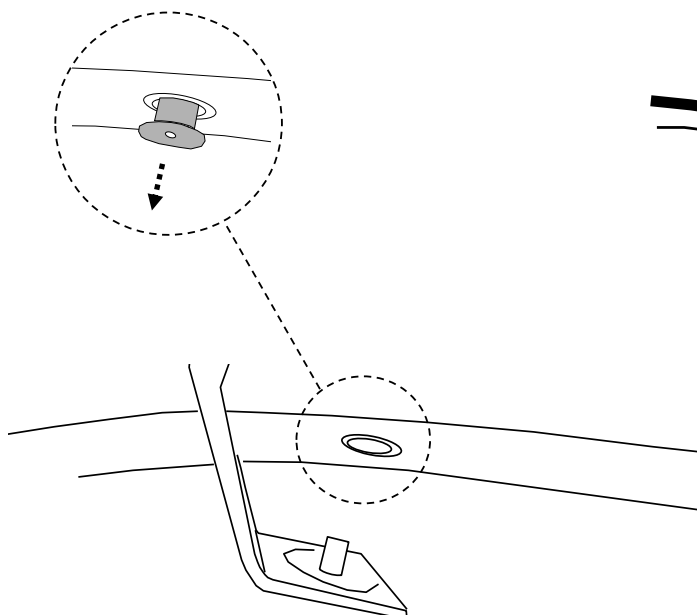




REV 000	10/05/2011	16 / 20
---------	------------	---------

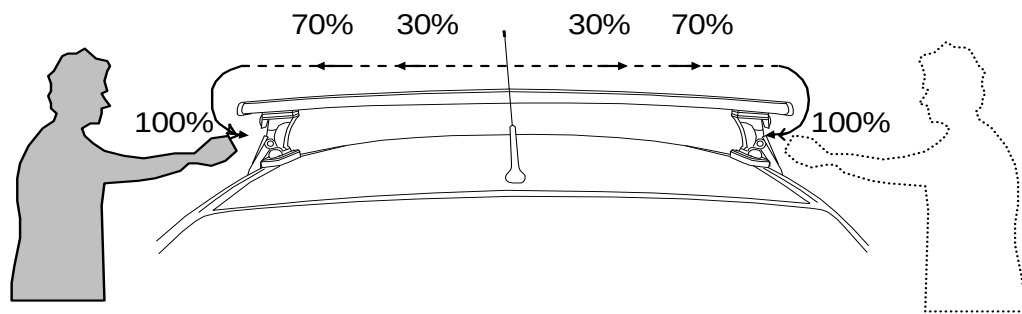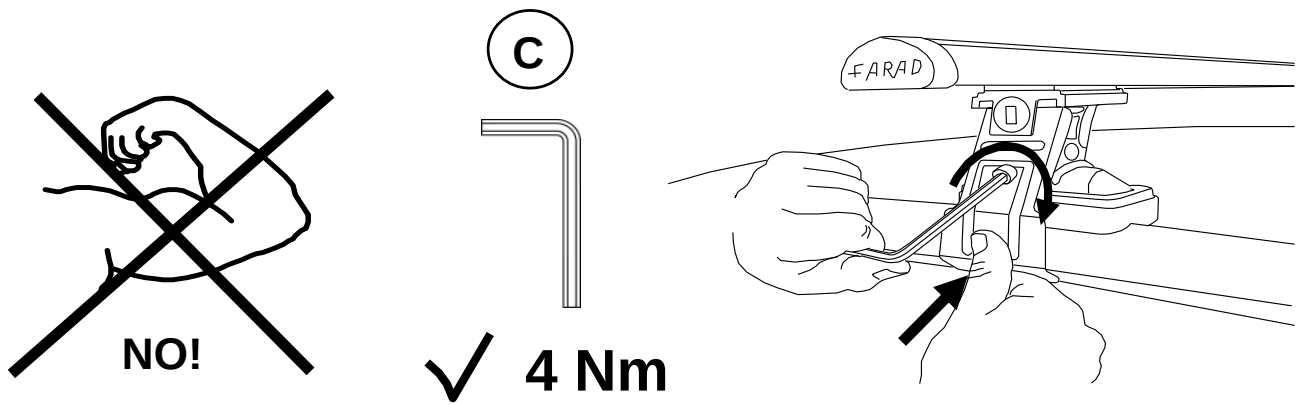

I	Alternare il fissaggio delle viti	F	Serrer alternativement chaque côté
PL	Śruby dokręcaj naprzemiennie	D	Die Schrauben abwechselnd anziehen
GB	Tighten alternately	E	Apretar alternativamente
NL	Afwisselend aan de linker- en de rechterkant aandraaien	SWE	Dra åt växelvis

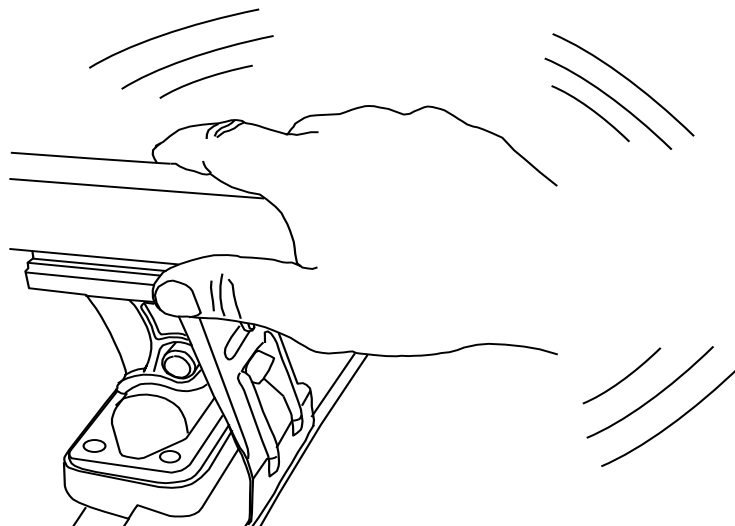

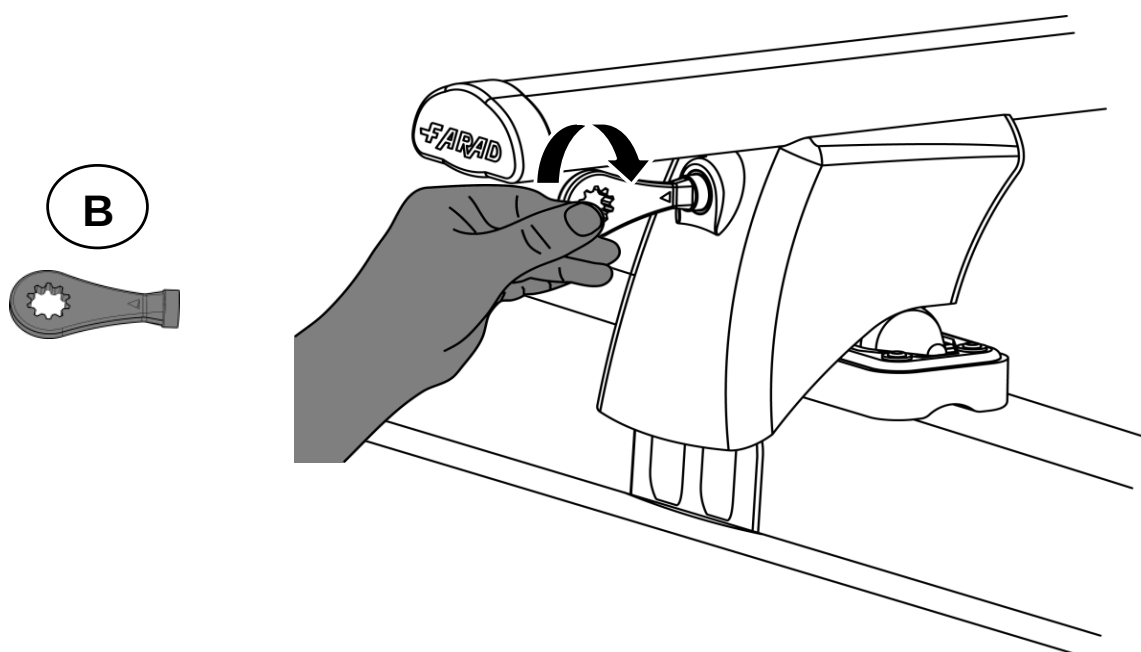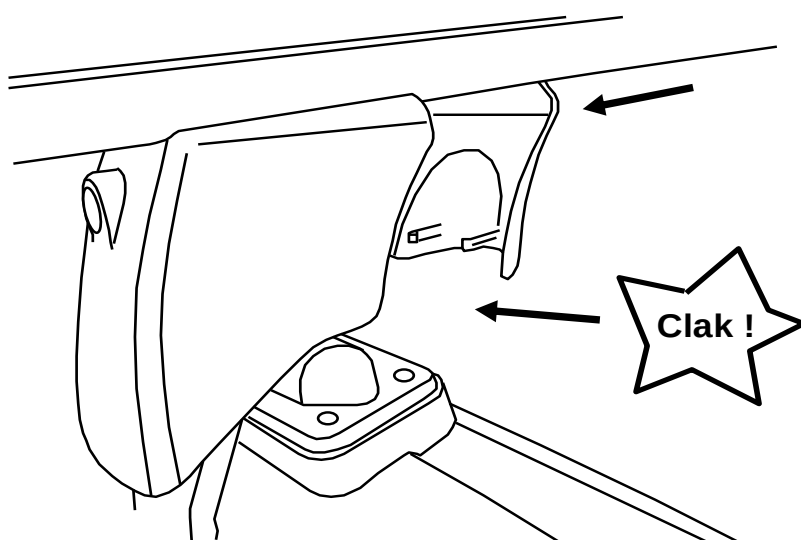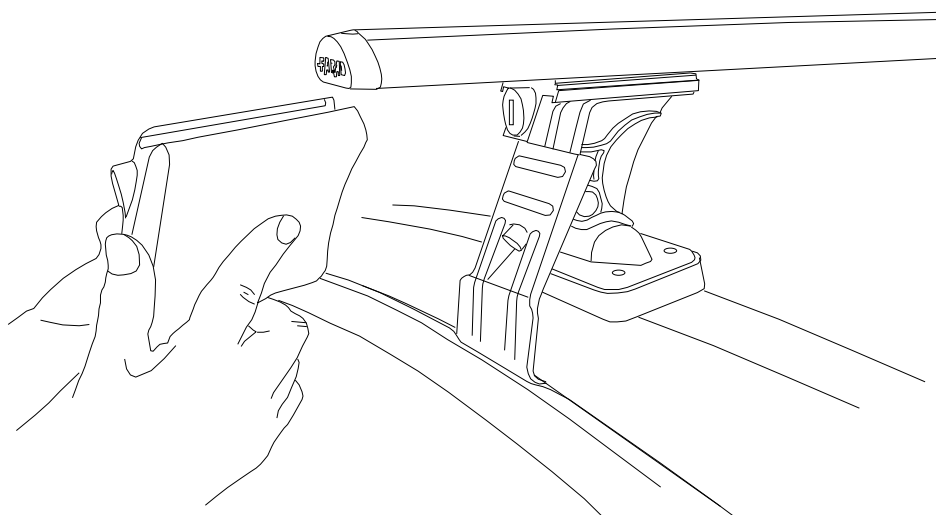

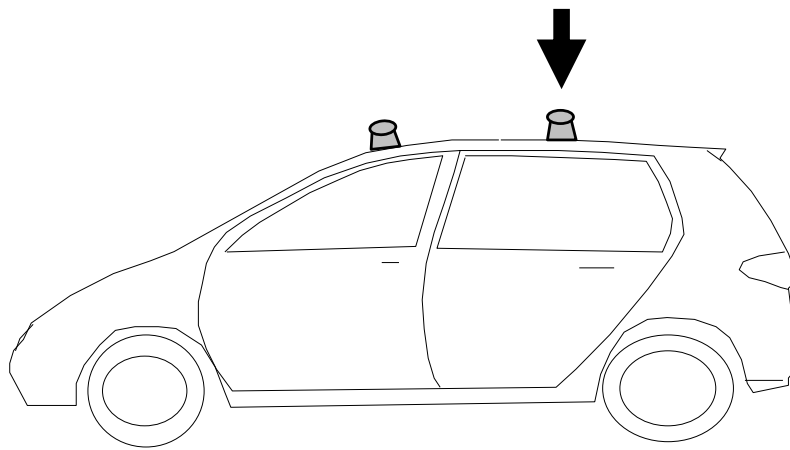


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

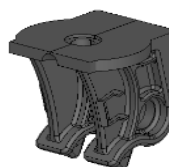

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

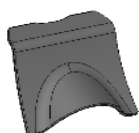


INVOLUCRO POST.
90341 / 9

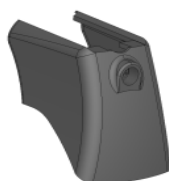

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

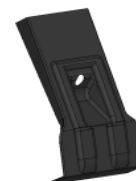

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



**GUARNIZIONE
NUMERICA**
91141 / 14

FARAD[®]
made in Italy

tel. 011 9713719 - n° verde 800984229
www.faradworld.com