

FARAD[®]

made in Italy

BS 035 - 1

HYUNDAI IX20 2010>
KIA VENGAR 2010>
TOYOTA AURIS 2007-2012
TOYOTA AURIS 2012>



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montaży

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

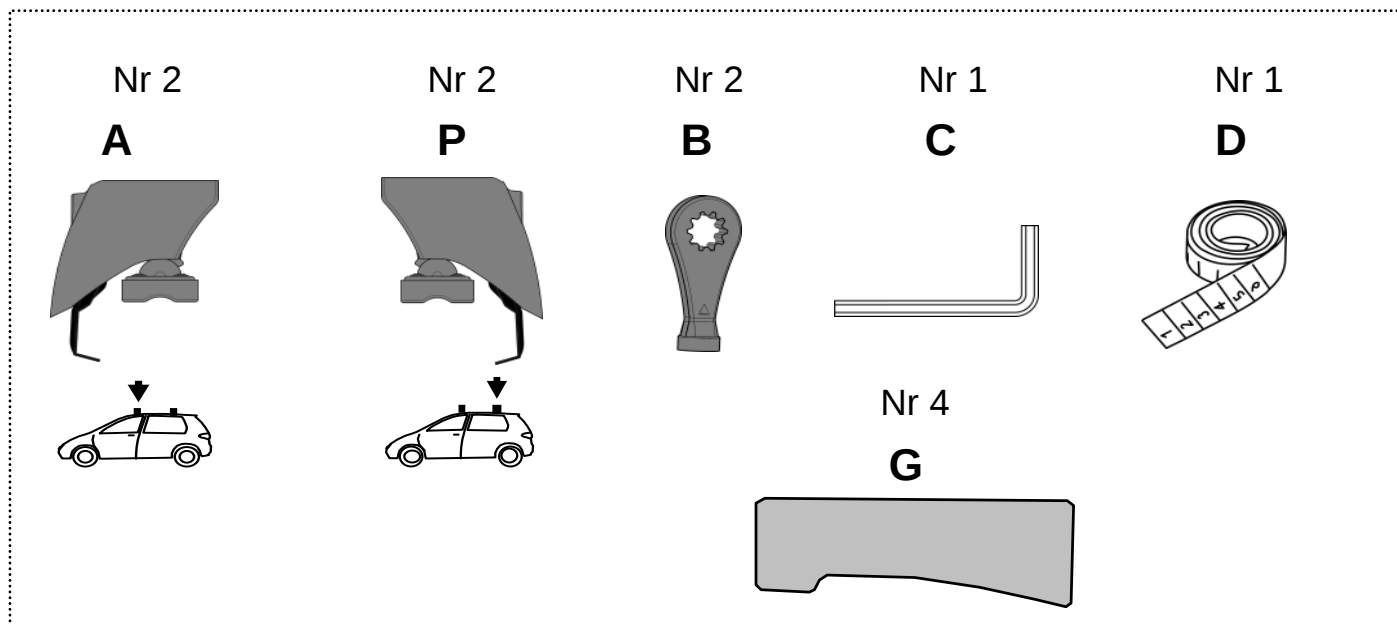












+


KIT ALU

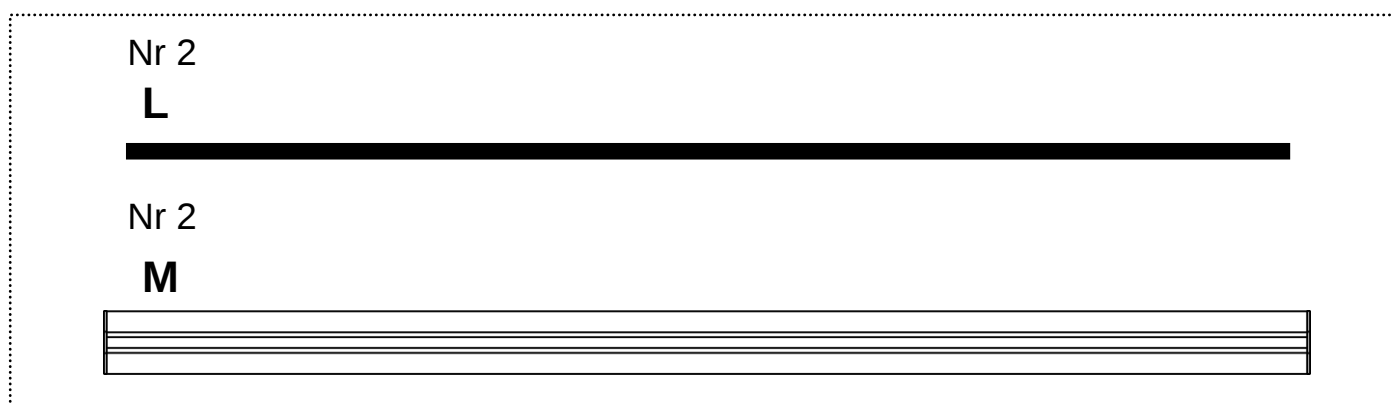




=


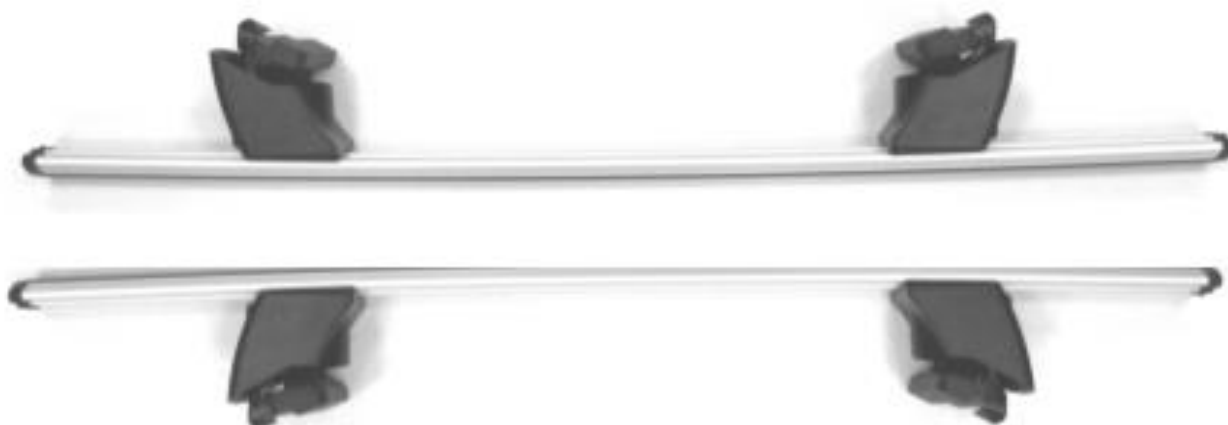


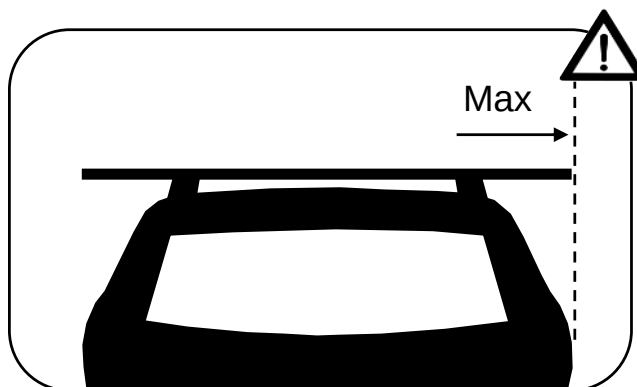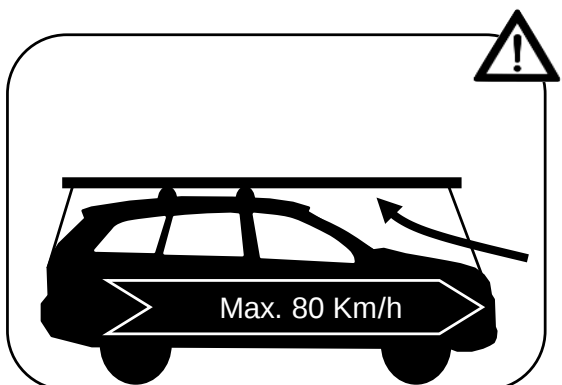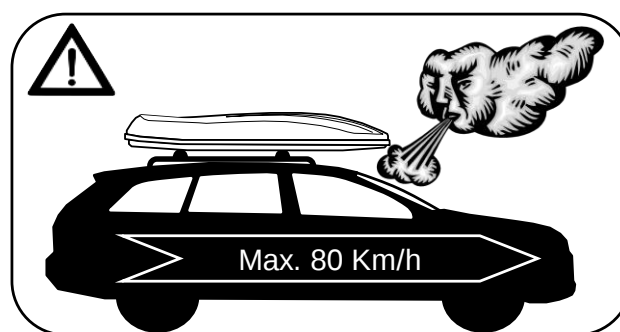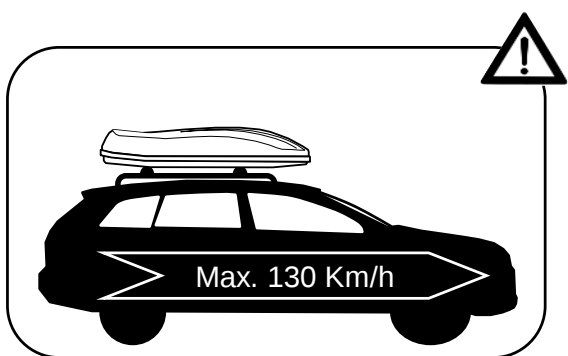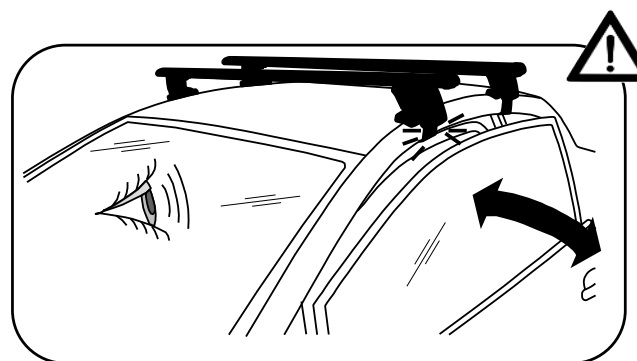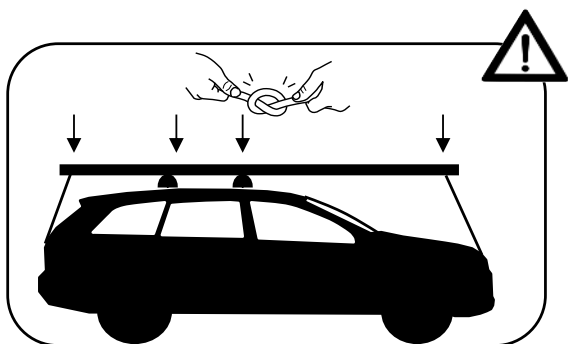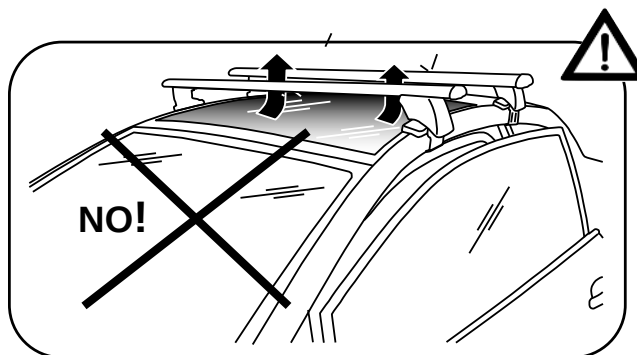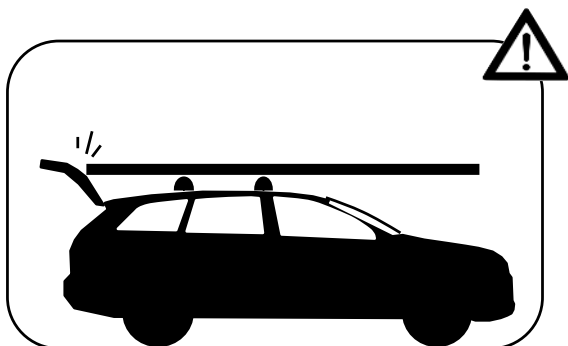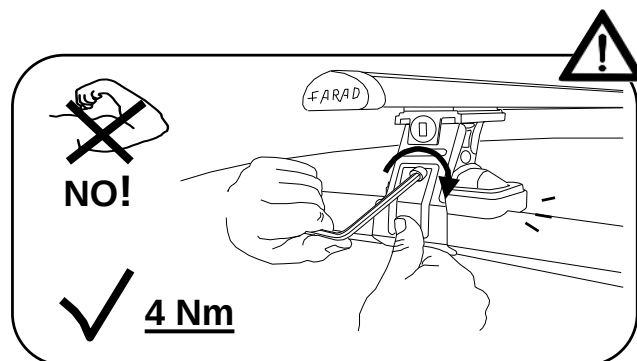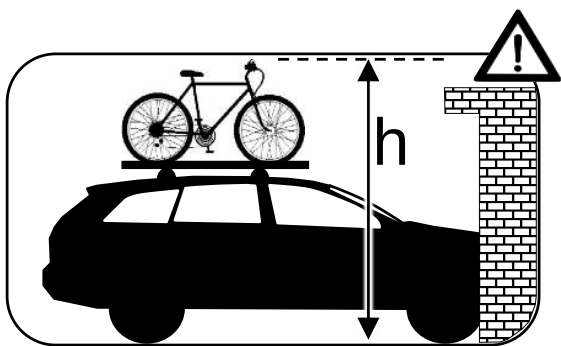

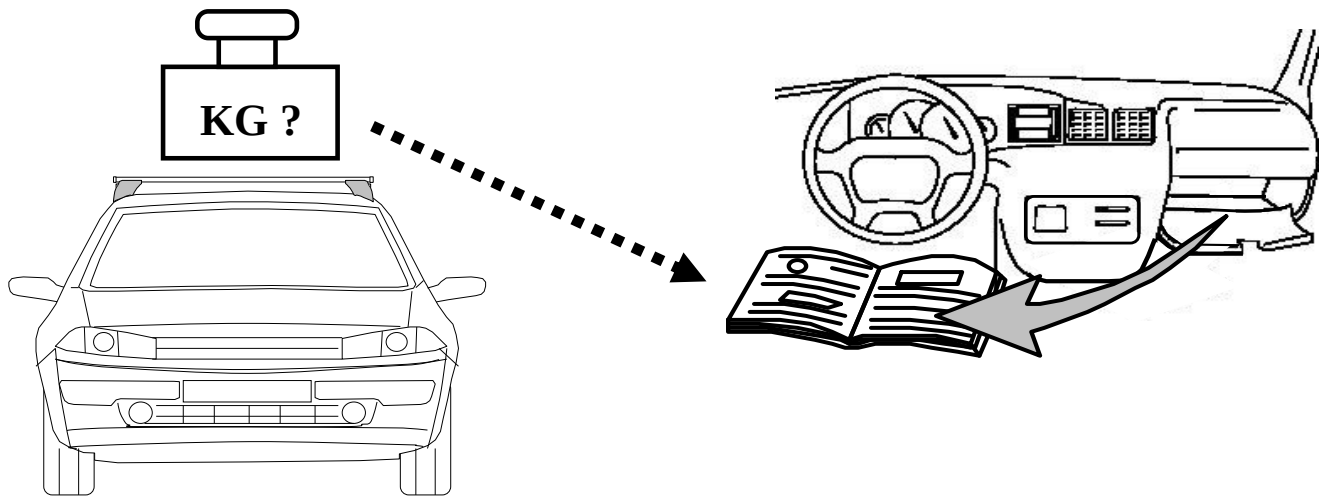


- I** Controllare carico del tetto sul manuale dell'auto
- PL** Sprawdz ładowność dachu w instrukcji
- GB** Check roof load capacity in car instruction
- NL** check de handleiding belasting van het dak van de auto
- F** vérifier le chargement manuel du toit de la voiture
- D** überprüfen Sie die manuelle Beladung der Autodach
- E** comprobar la carga manual del techo del coche
- SWE** kontrollera manuell inläggning på taket av bilen

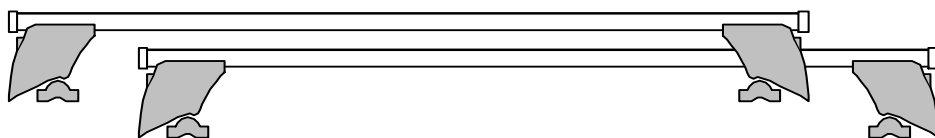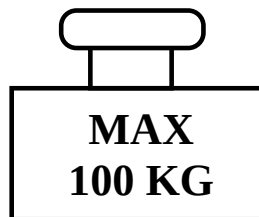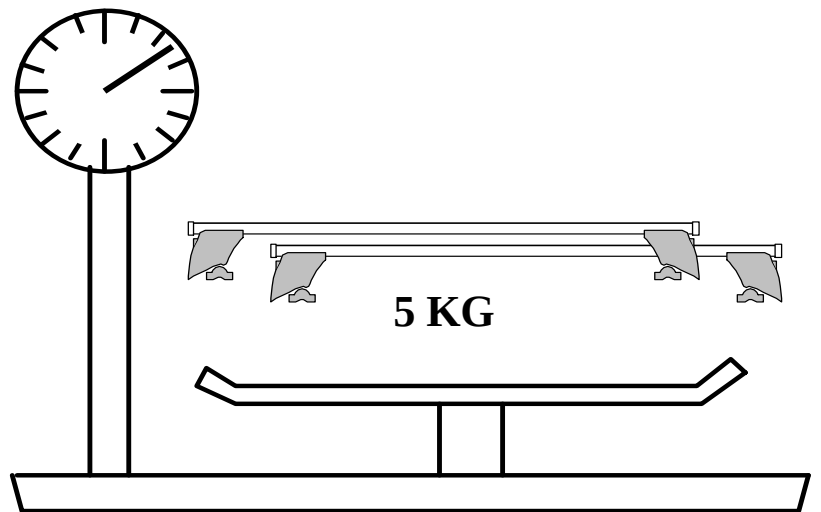

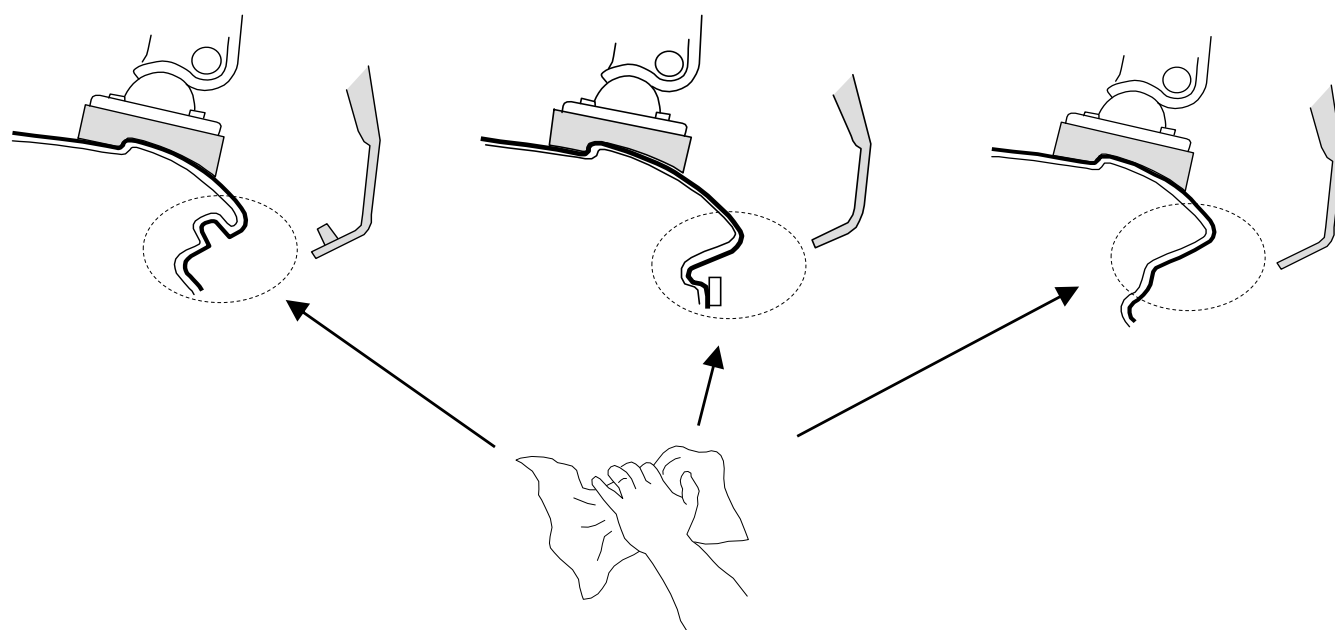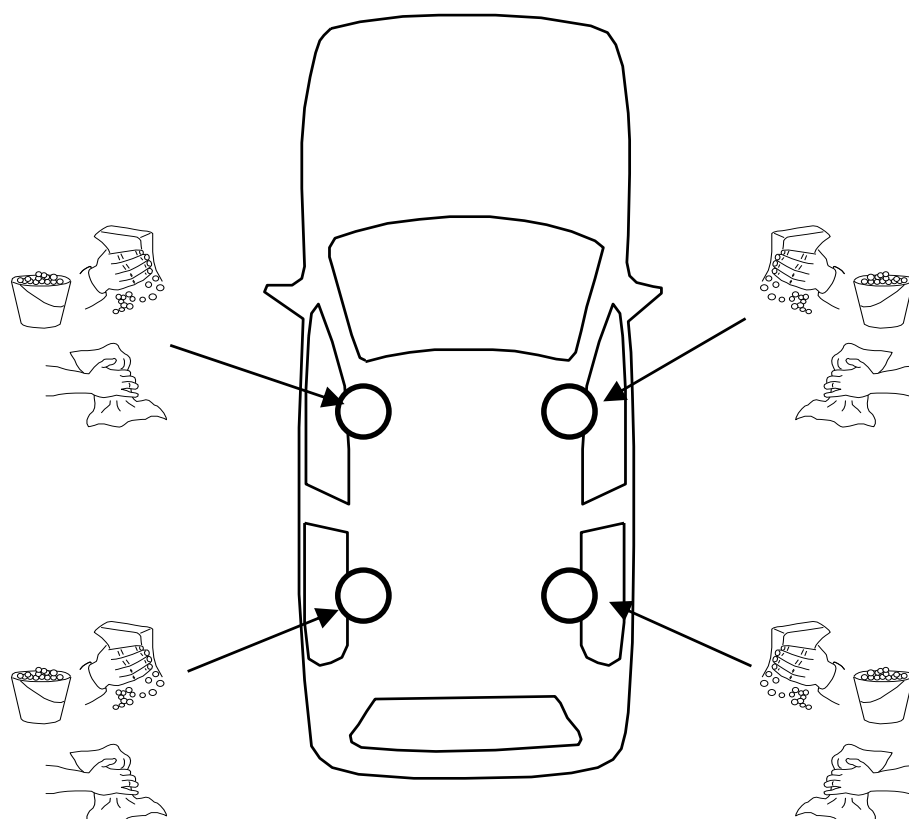



I **Montaggio Barra Anteriore**
PL **Montaż Bagażnika Bazowego Tylnego**
D **Montage Vorderes Dachträgers**
SWE **Montering Av Främre Lasthållaren**


F **Fixation Barre Avant**
GB **Fitting Front Roof Bar**
NL **Montage Voorste Dakdrager**
E **Fijación Barra Frontal**


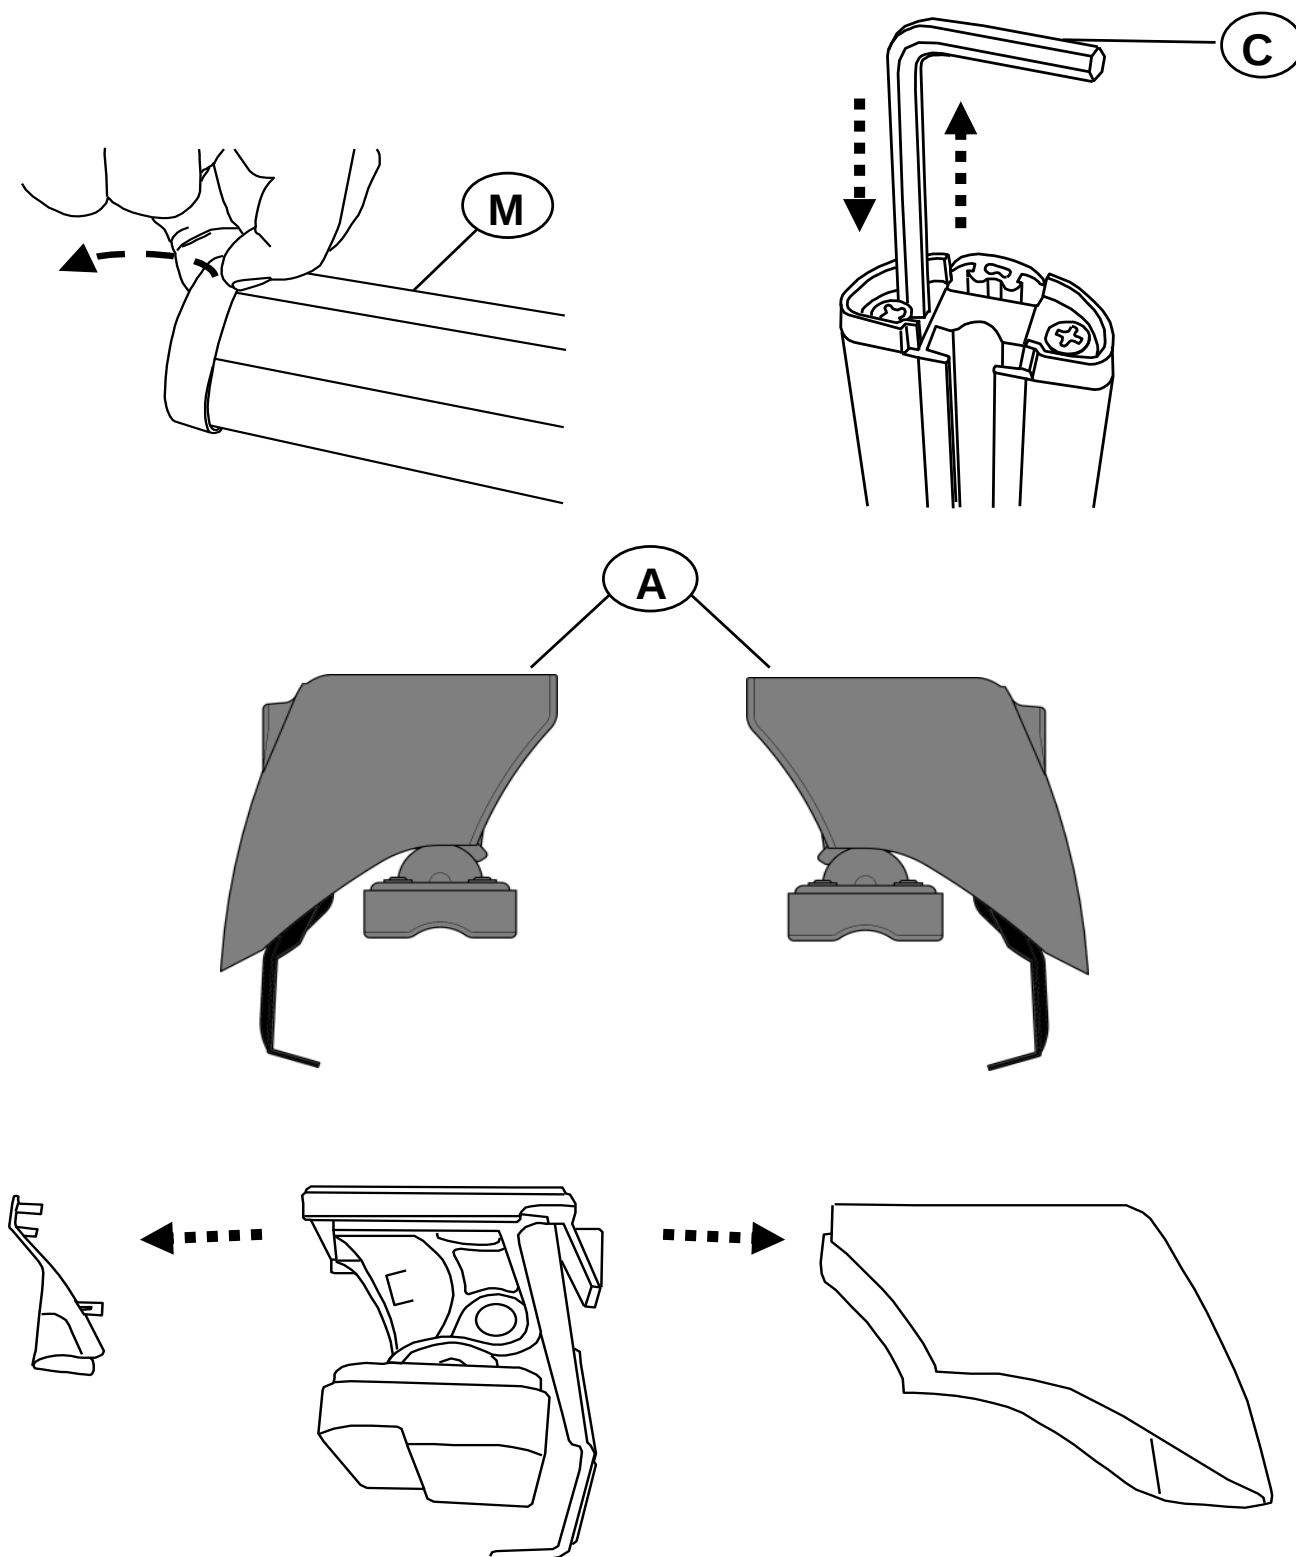





M

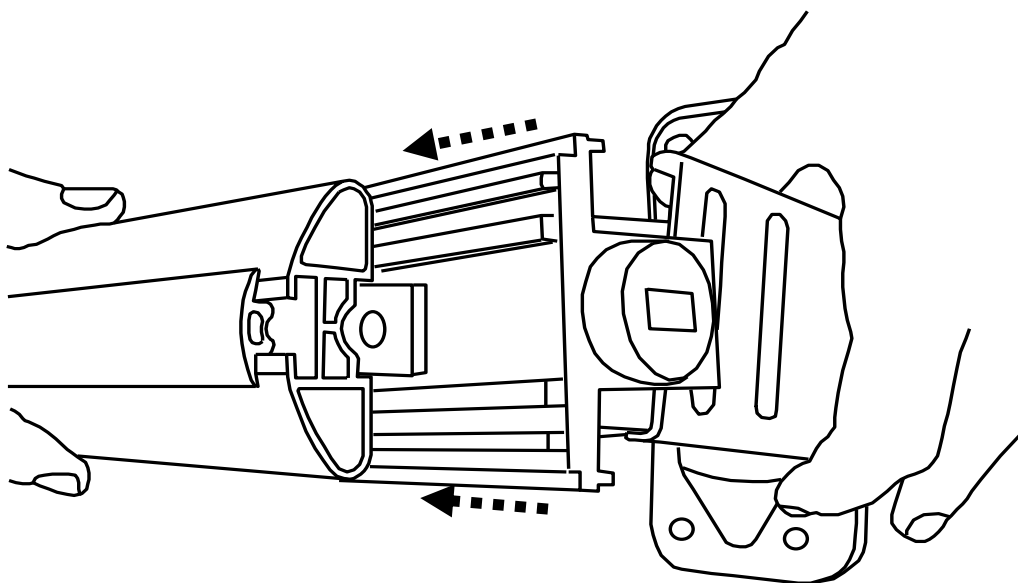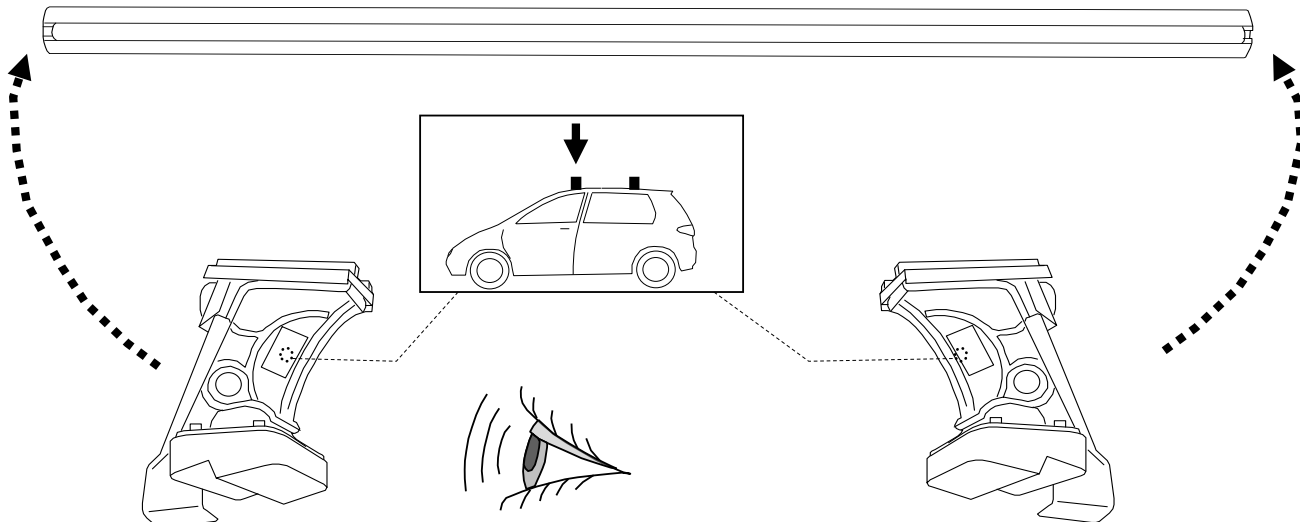


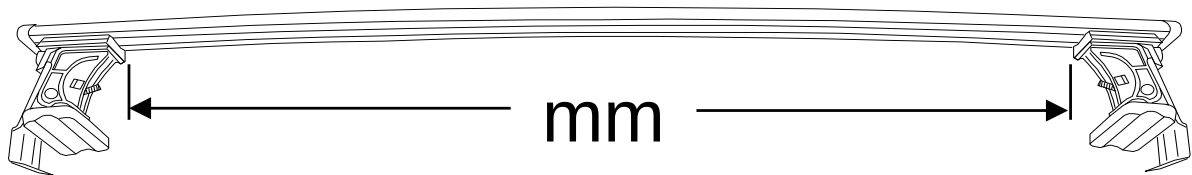


				R	mm
HYUNDAI	IX20	5	2010 >	R= 37	1045
KIA	VENGA	5	2010 >	R= 37	1045
TOYOTA	AURIS	5	2007-2012	R= 44	985
TOYOTA	AURIS	5	2012 >	R= 43	980


R . R ..

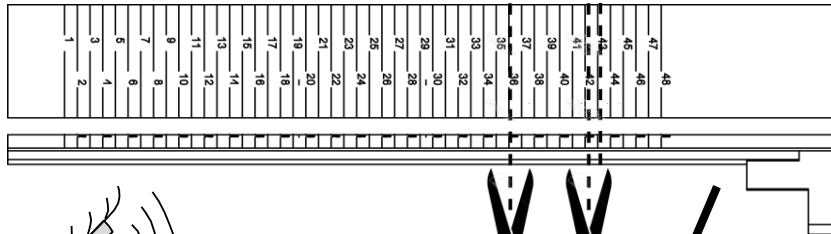


1

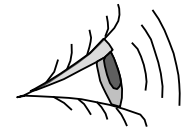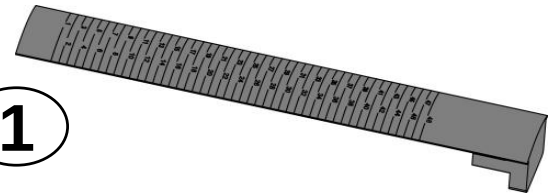



2

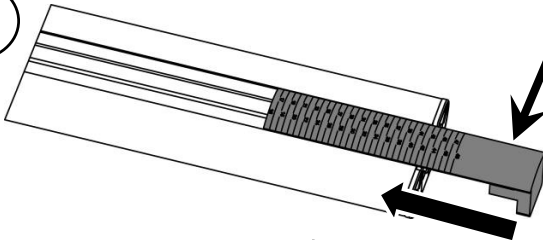


3

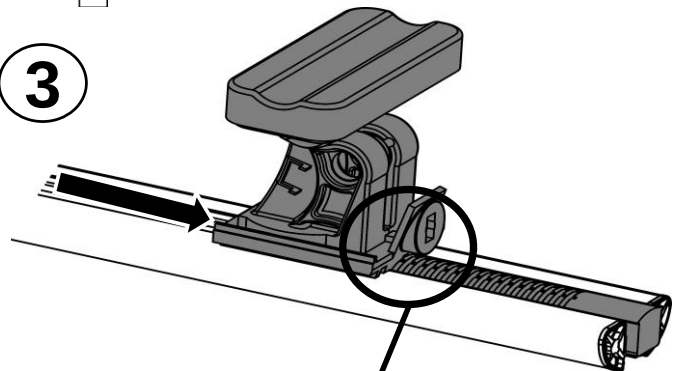


4

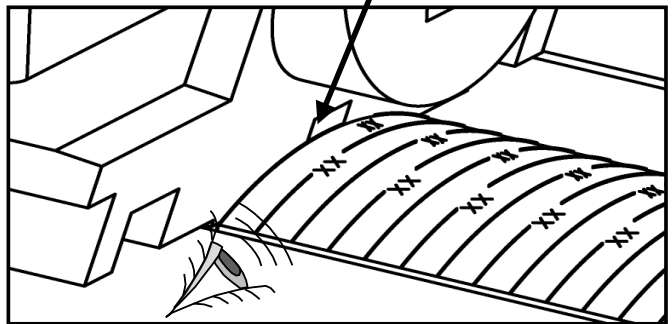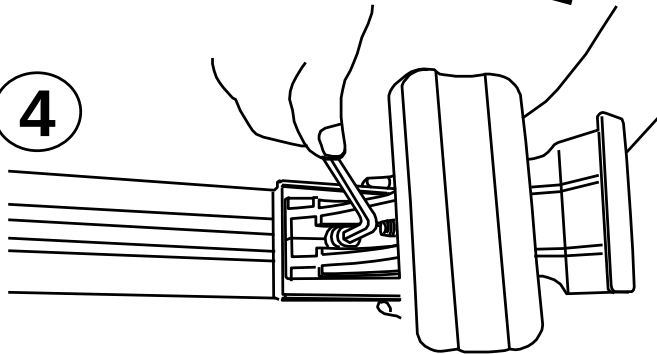


5



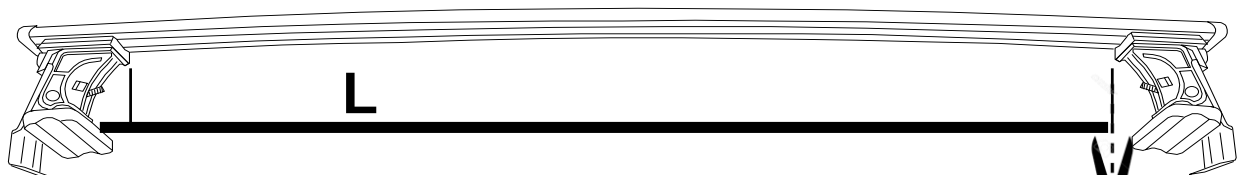


6


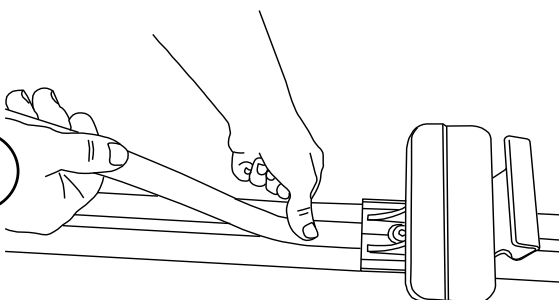


7


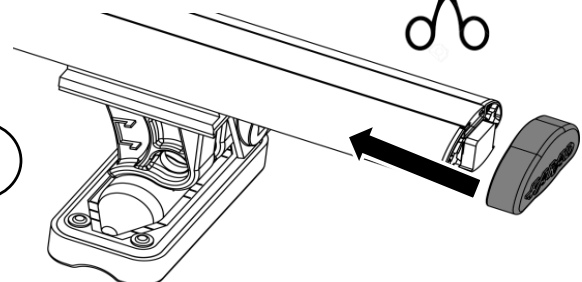


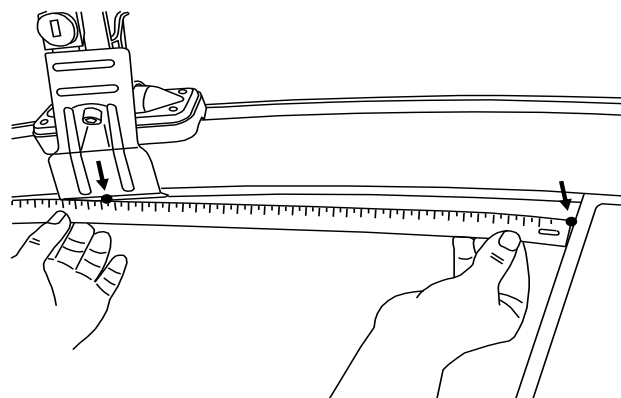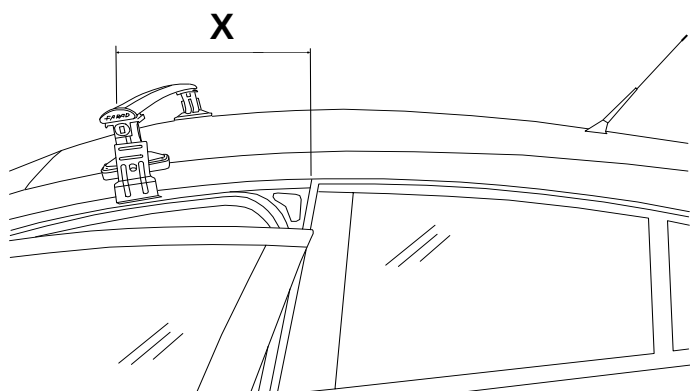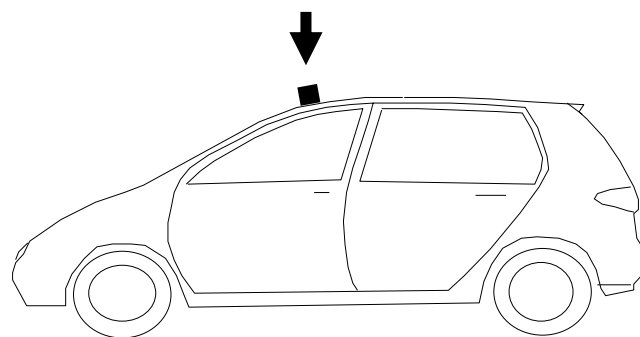


				X
HYUNDAI	IX20	5	2010 >	X= 310
KIA	VENGA	5	2010 >	X= 310
TOYOTA	AURIS	5	2007-2012	X= 260
TOYOTA	AURIS	5	2012>	X= 320

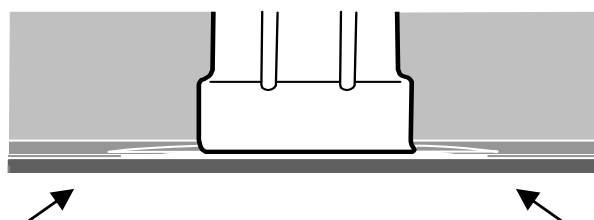

✓ 4 Nm

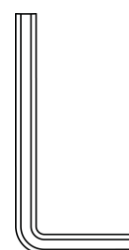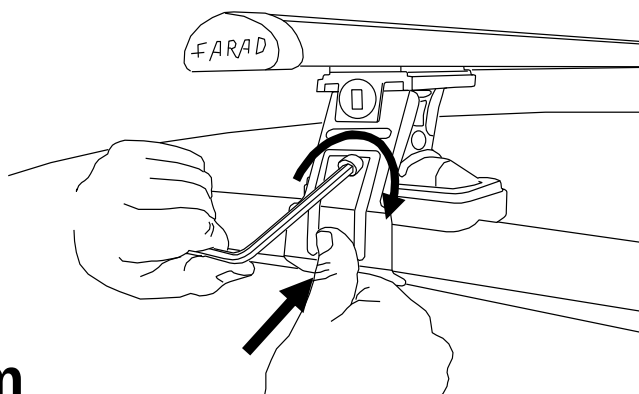


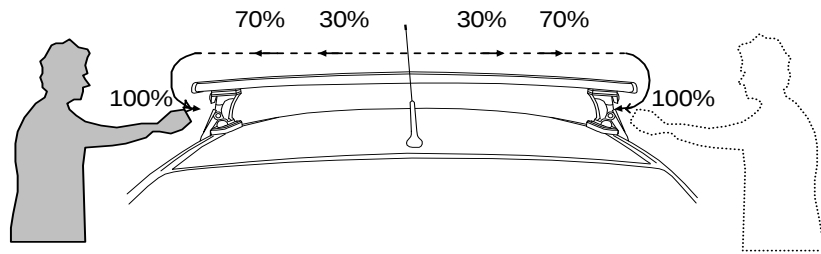



- I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien




- F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis


HYUNDAI IX20 2010> KIA VENG 2010> TOYOTA AURIS 2007-2012

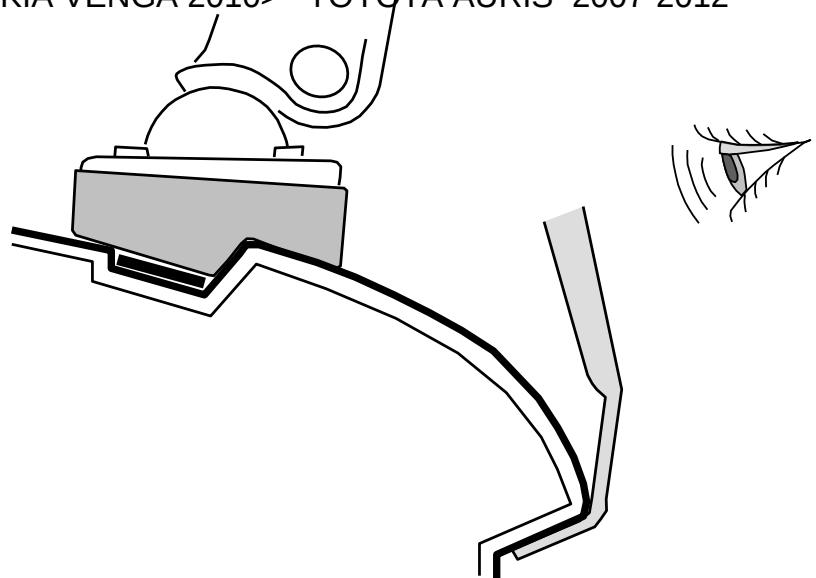

TOYOTA AURIS 2012>

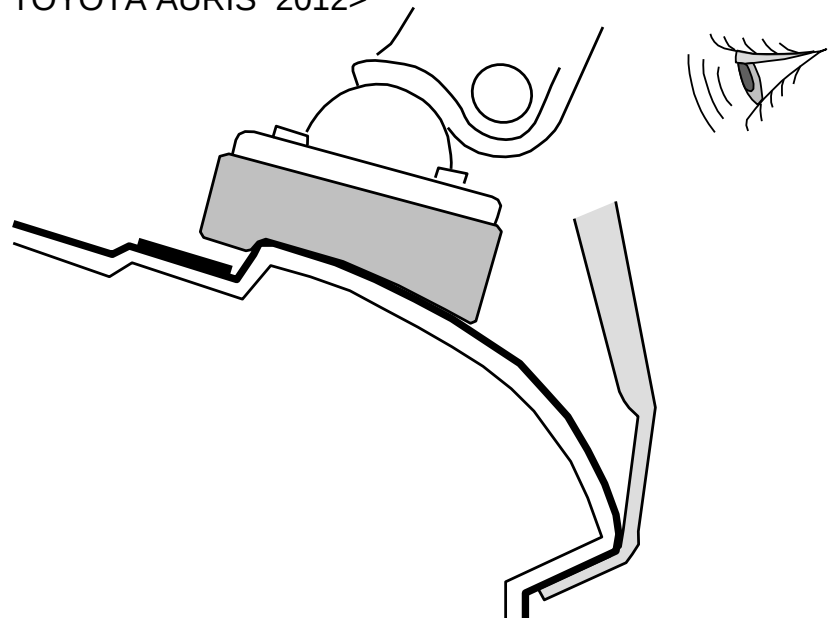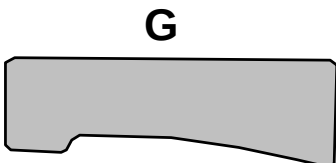

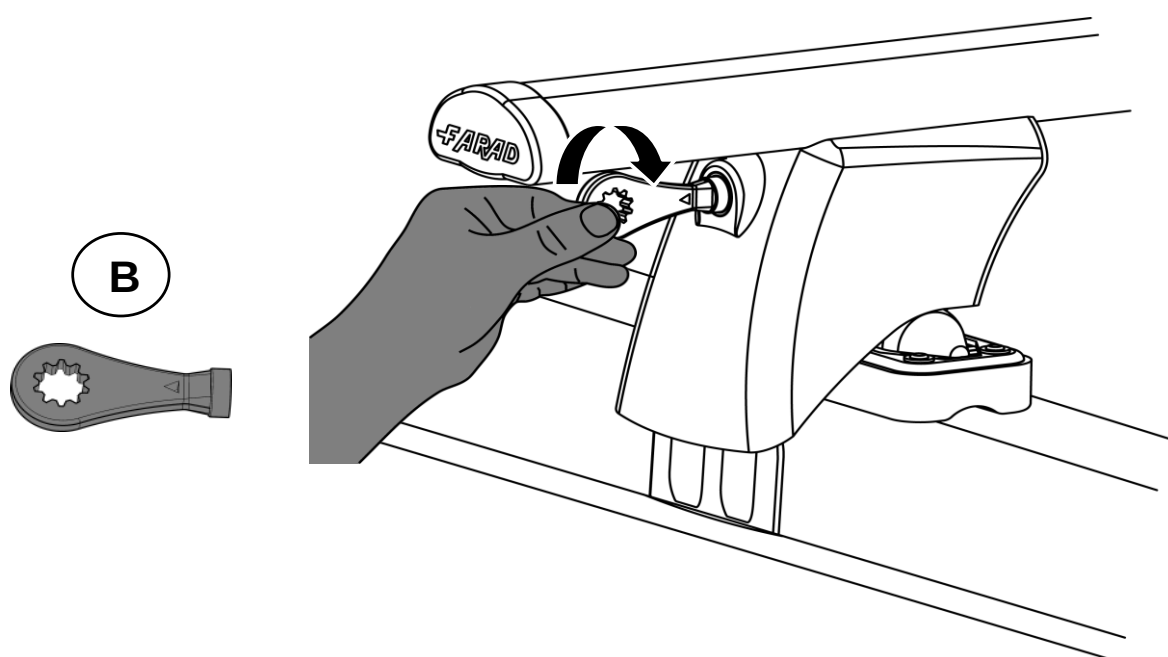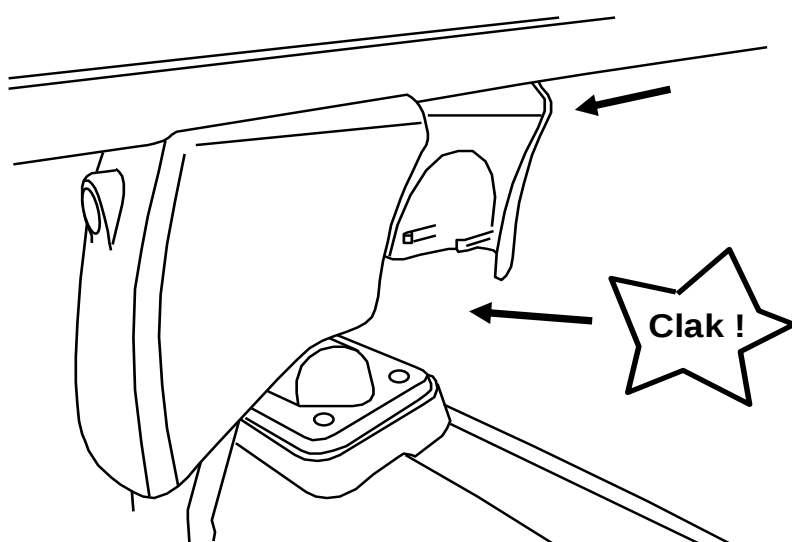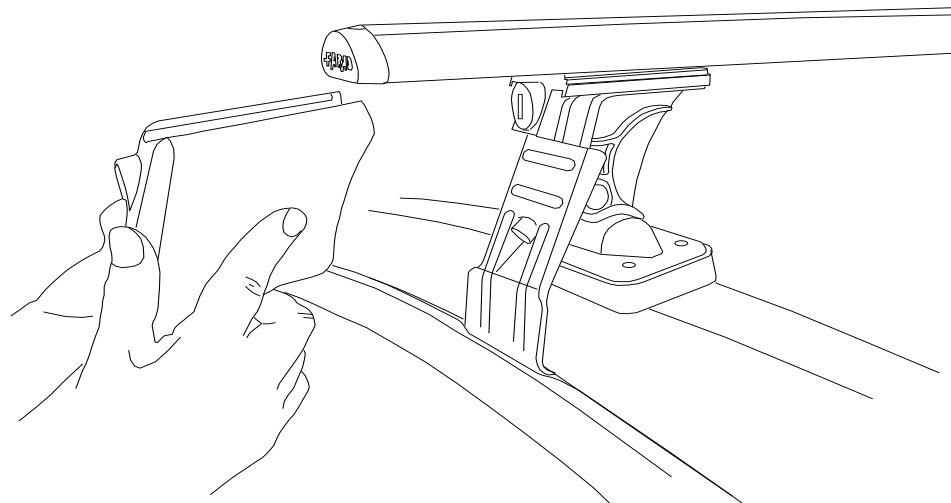

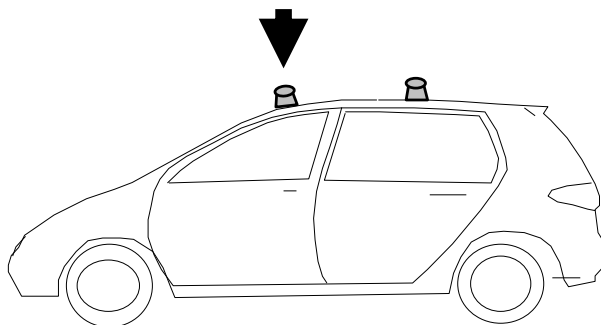

HYUNDAI IX20 2010> KIA VENG 2010> TOYOTA AURIS 2007-2012



TOYOTA AURIS 2012>



- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I **Montaggio barra posteriore**

PL **Montaż Bagażnika Bazowego Przedniego**

SWE **Montering Främre Lasthållaren**


NL **Montage Achterste Dakdrager**

F **Fixation Barre Arriere**

GB **Fitting Rear Roof Bar**



E **Fijación Barra Trasera**


D **Montage Heckdachträgers**

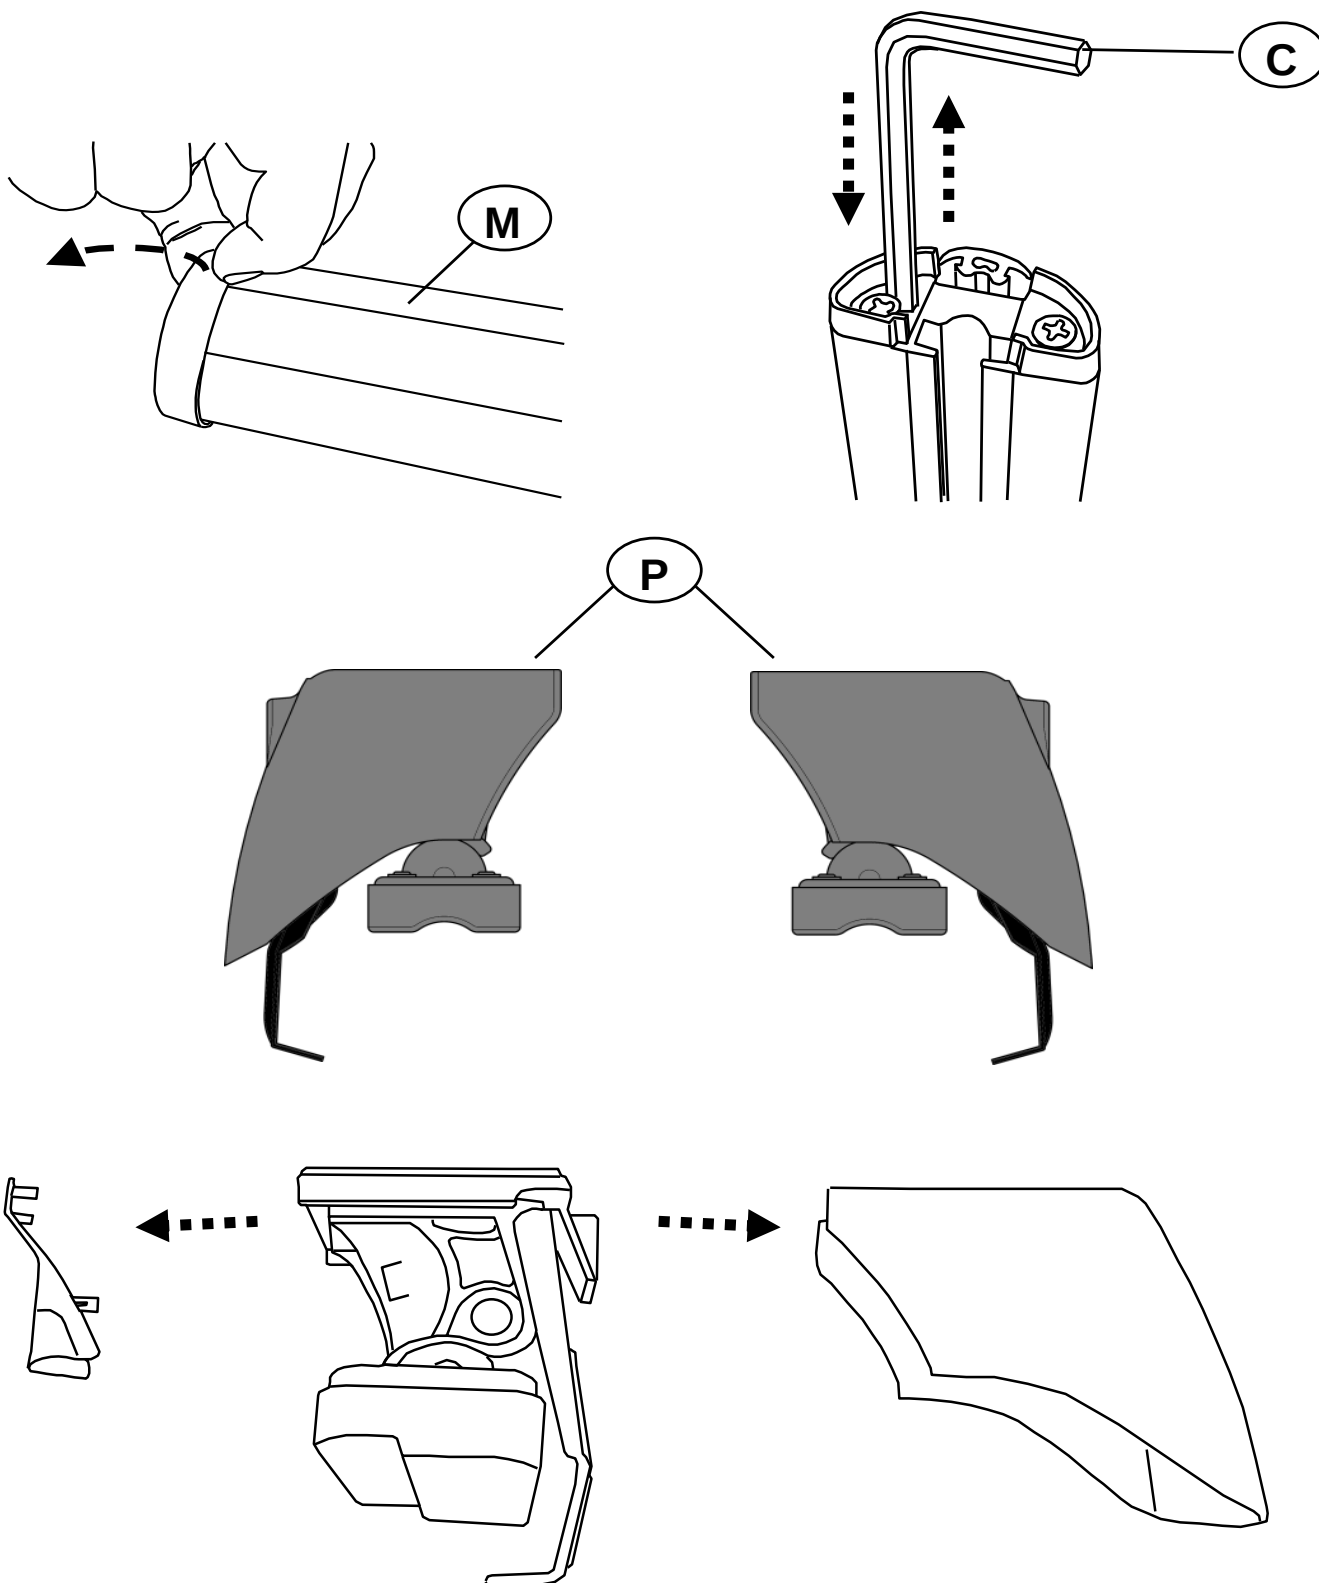







M

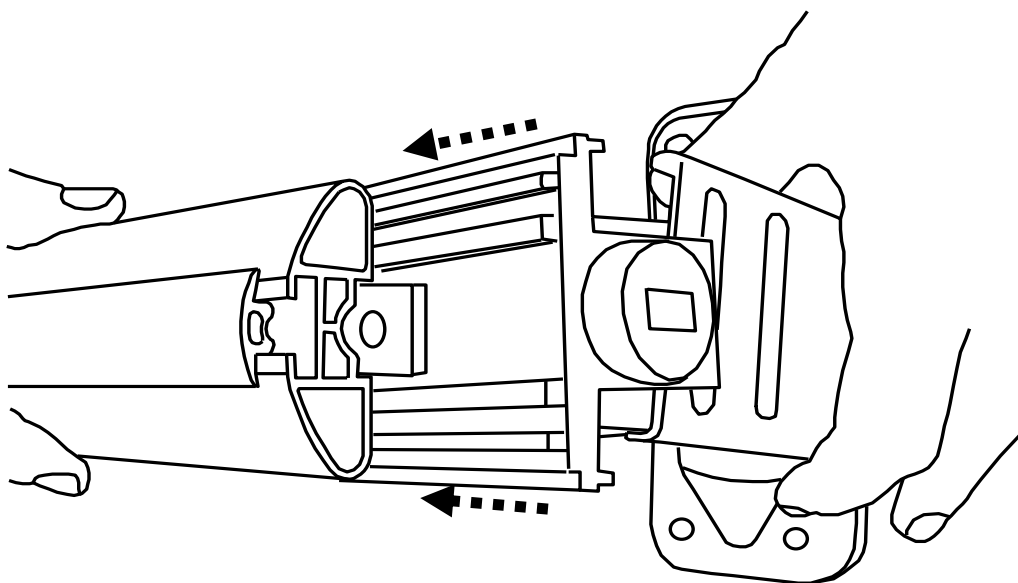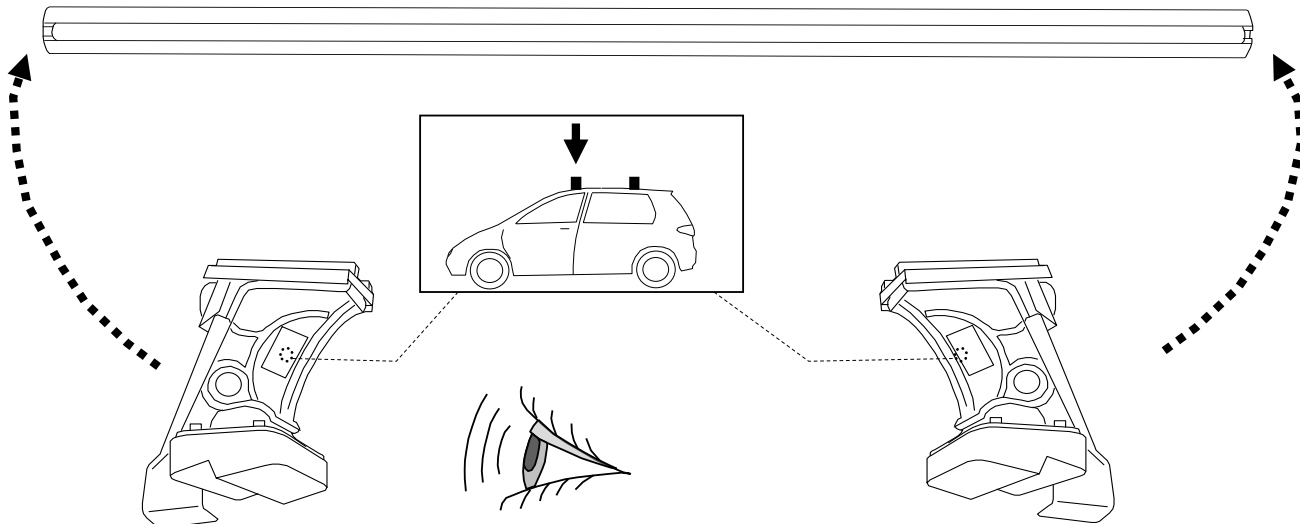



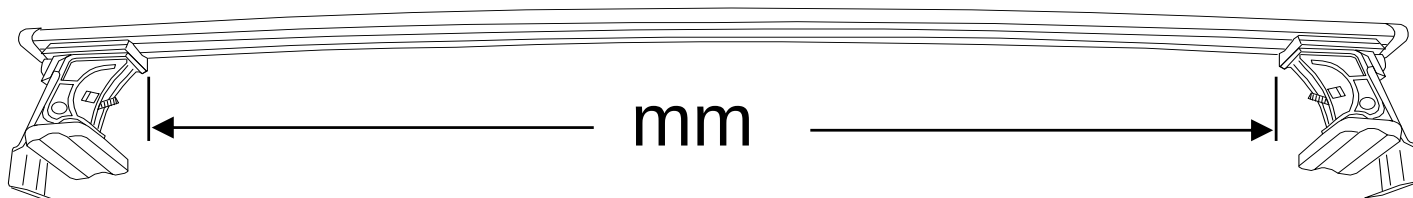


				R	mm
HYUNDAI	IX20	5	2010 >	R= 27	995
KIA	VENGA	5	2010 >	R= 25	985
TOYOTA	AURIS	5	2007-2012	R= 39	960
TOYOTA	AURIS	5	2012 >	R= 37	950

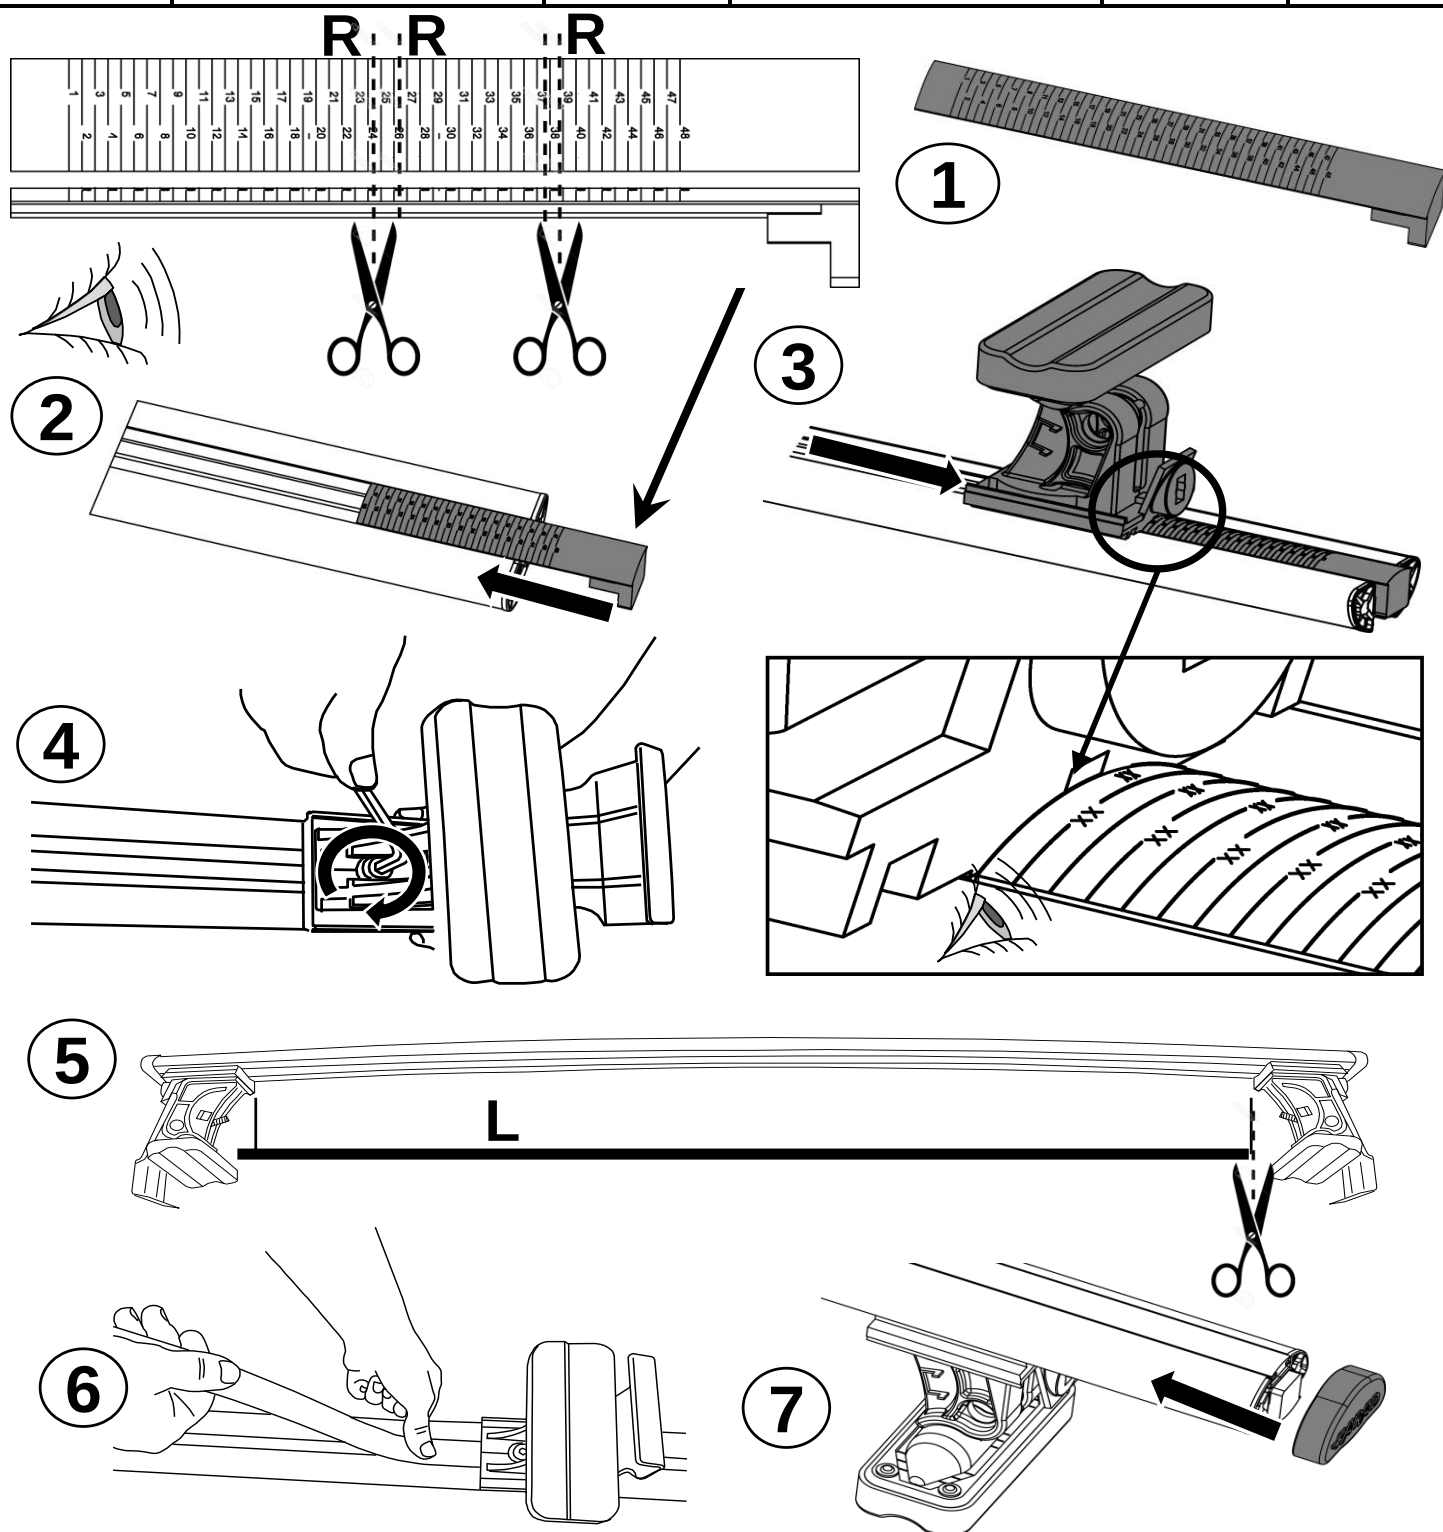


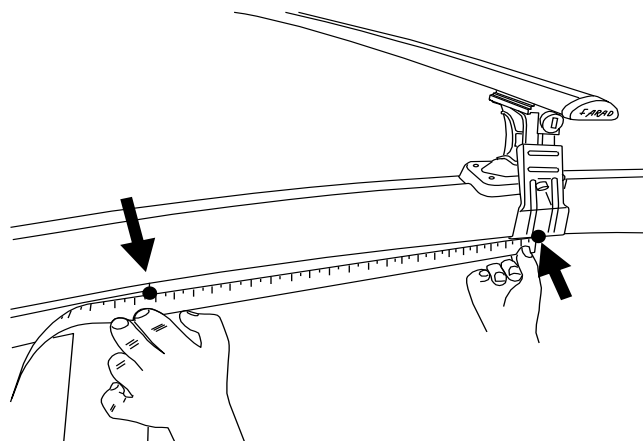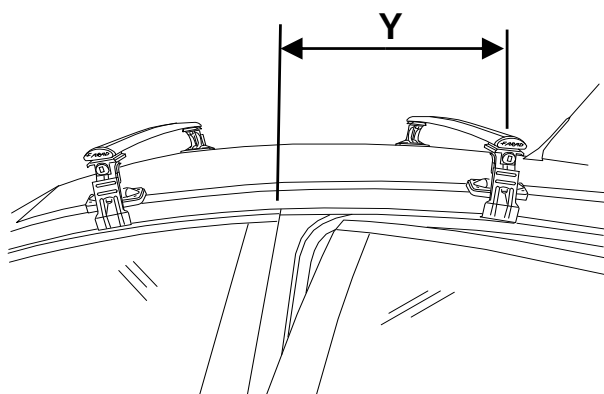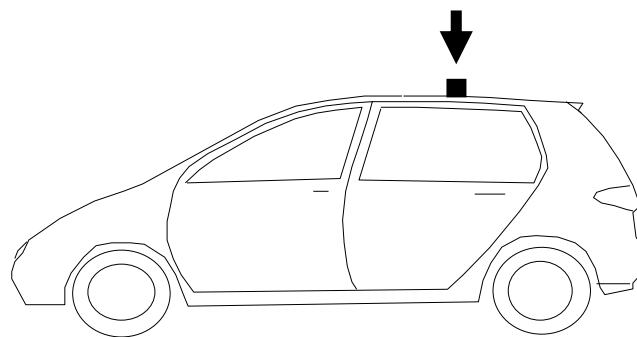


				Y
HYUNDAI	IX20	5	2010 >	Y= 290
KIA	VENGA	5	2010 >	Y= 290
TOYOTA	AURIS	5	2007-2012	Y= 440
TOYOTA	AURIS	5	2012 >	Y= 430

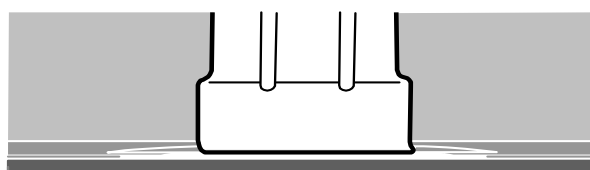


✓ 4 Nm

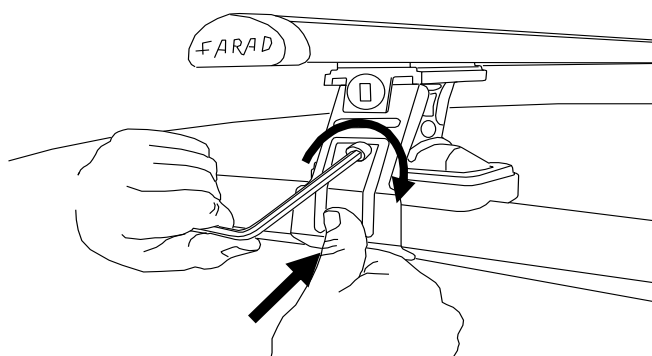

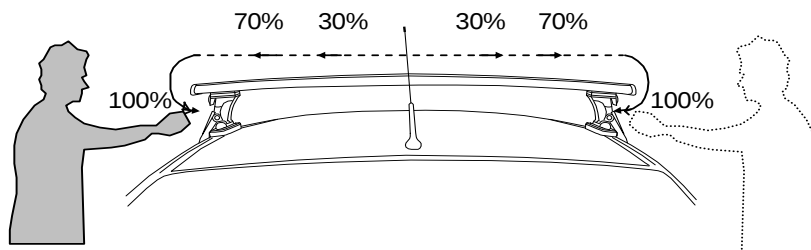

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |



HYUNDAI IX20 2010> KIA VENGU 2010> TOYOTA AURIS 2007-2012



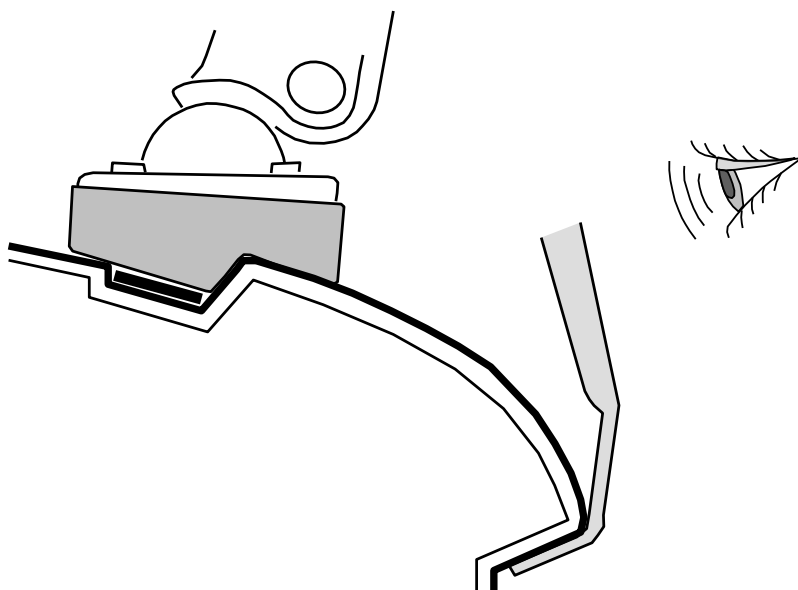



TOYOTA AURIS 2012>



G

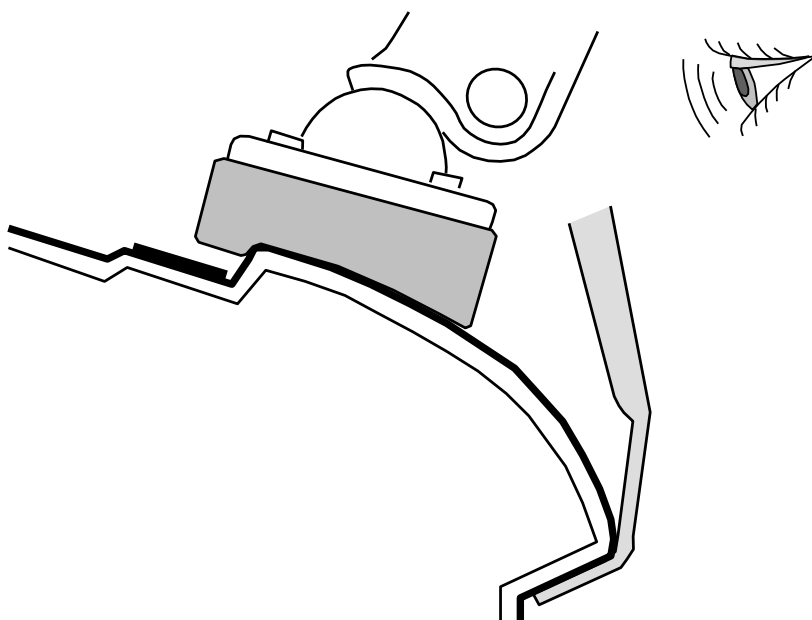

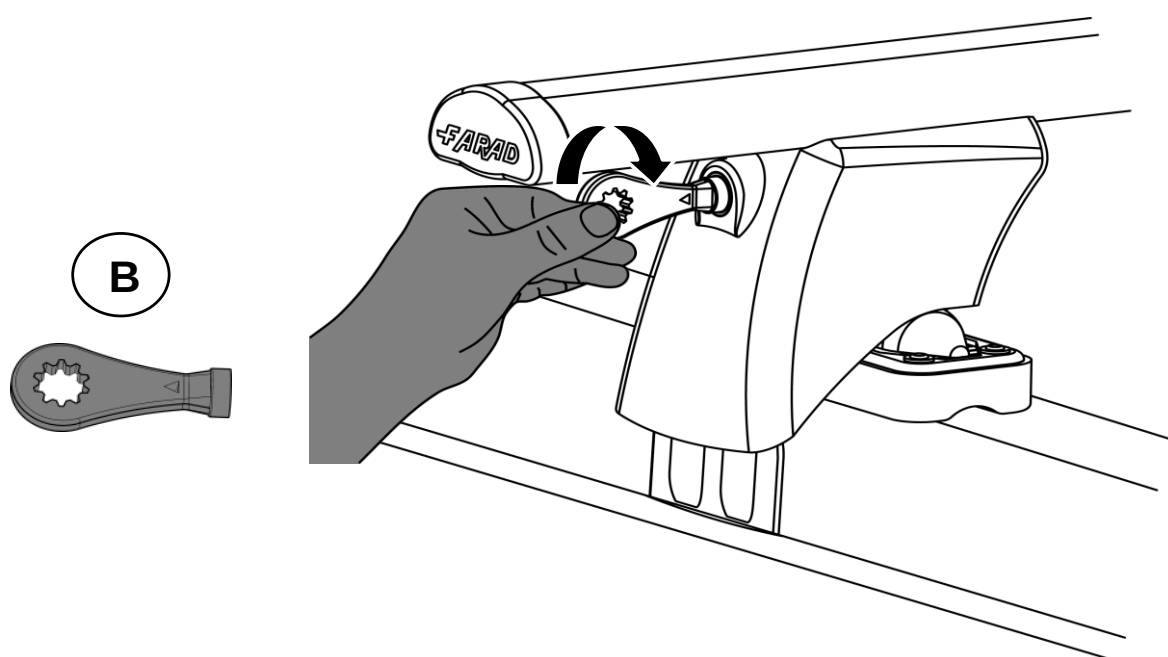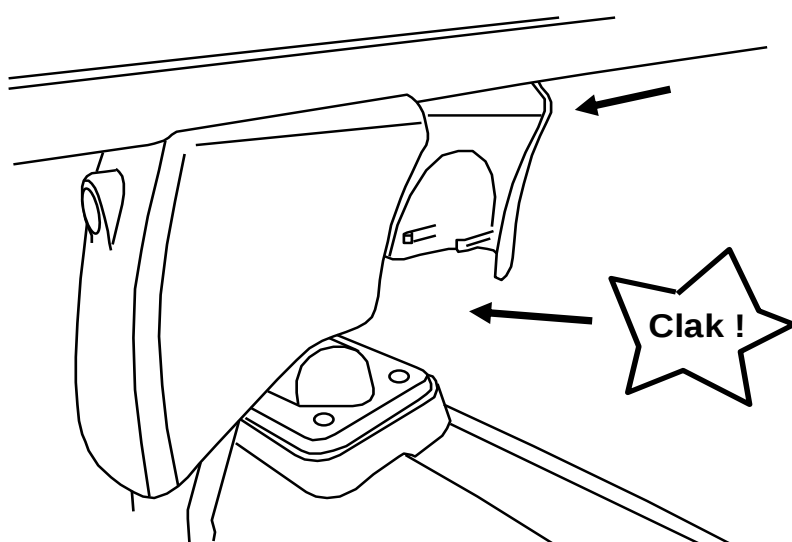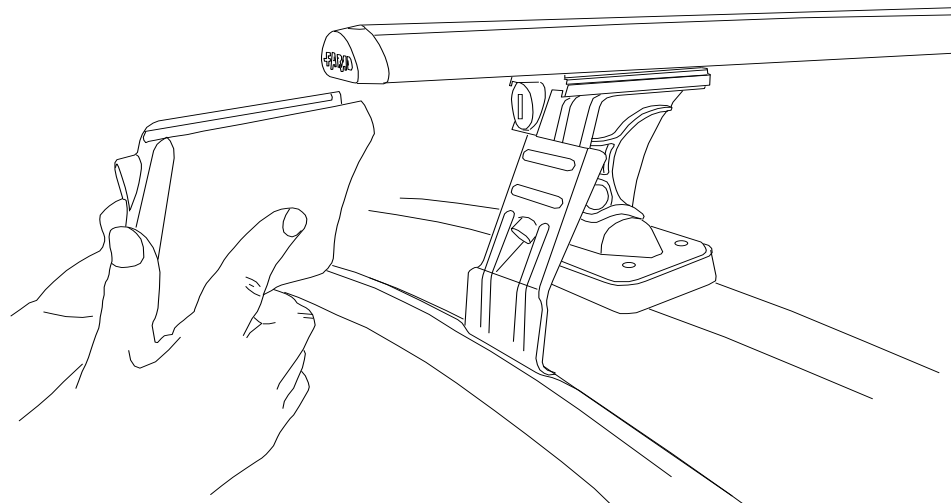

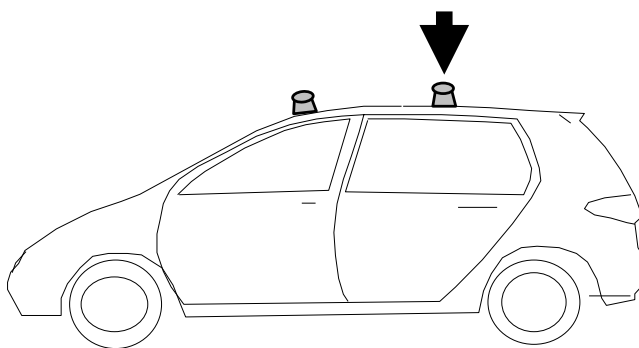

HYUNDAI IX20 2010> KIA VENG 2010> TOYOTA AURIS 2007-2012



TOYOTA AURIS 2012>




- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
PL OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
GB CHECK THE SCREW FASTENING PERIODICALLY
D REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
SWE REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
F VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

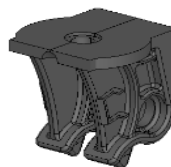

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

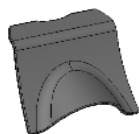


INVOLUCRO POST.
90341 / 9

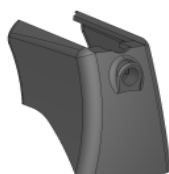

INVOLUCRO ANTERIORE
90341 / 8




CHIAVE + N° COMB
90341 / 7

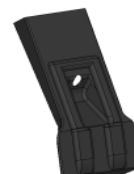

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7

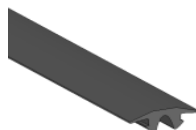


GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in Italy

tel. 011 9713719 - n° verde 800984229
www.faradworld.com