


***FARAD*BARS[®]**

made in Italy

BS 165 - 1

*FORD FOCUS 2018 >
RENAULT CLIO V 2019 >*

5



I Istruzioni di montaggio

F Instructions de montage

P Instrukcja montażu

D Einbauanleitung


G Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

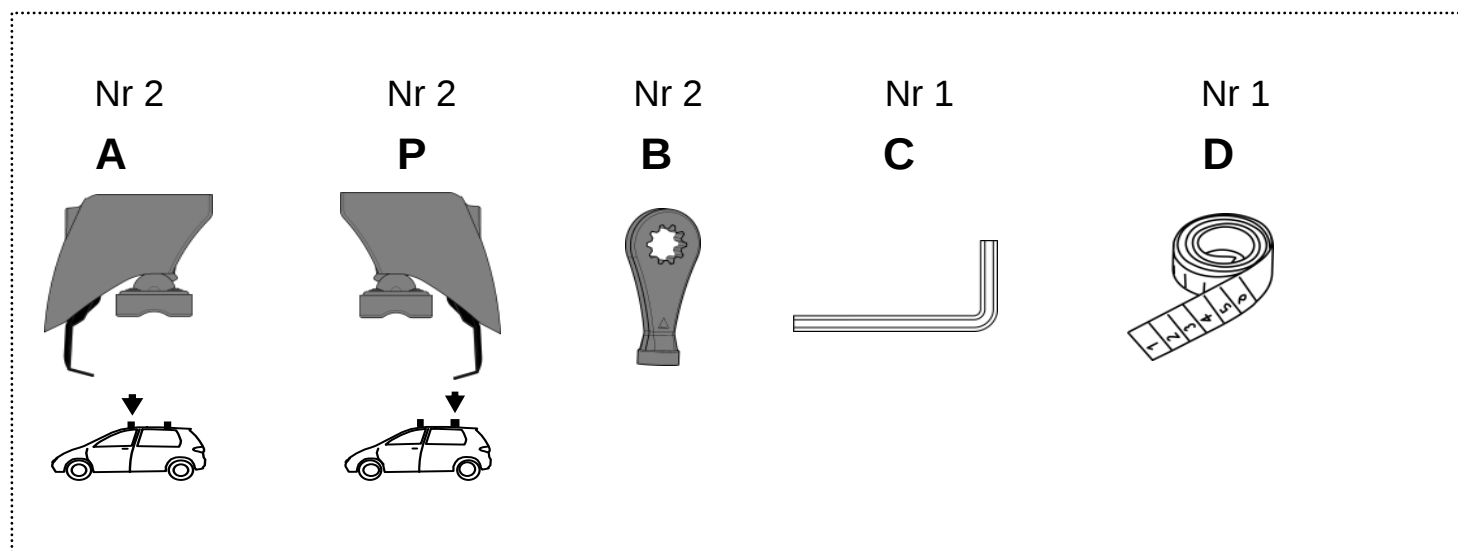












+


KIT ALU

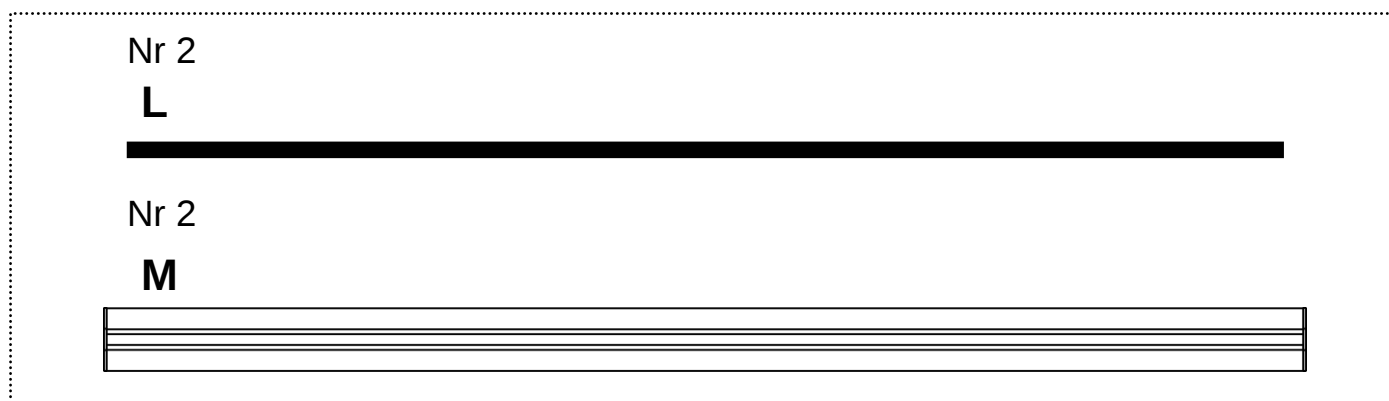




=


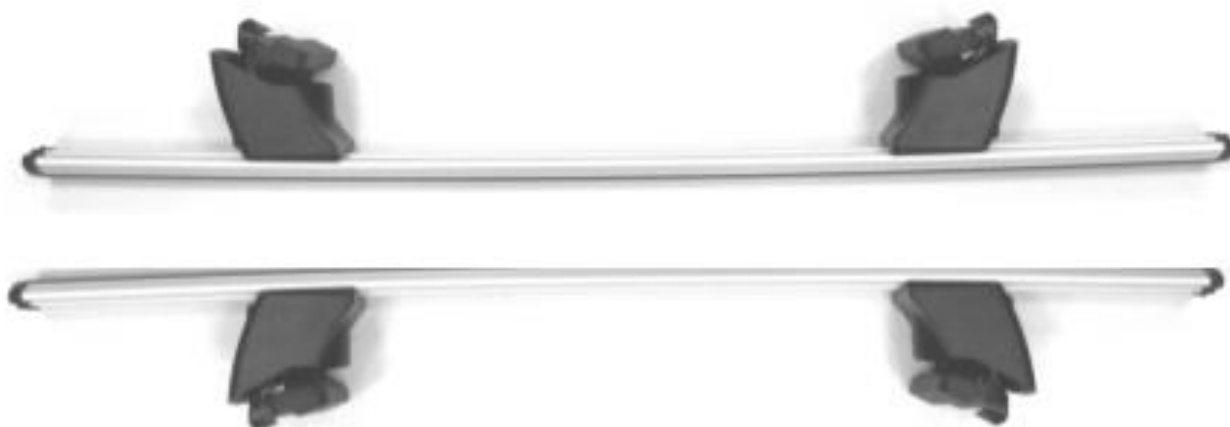


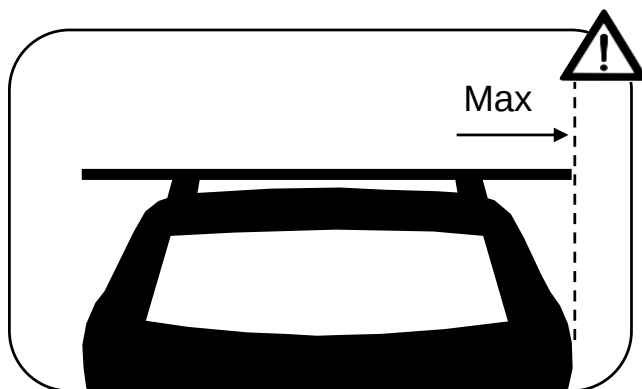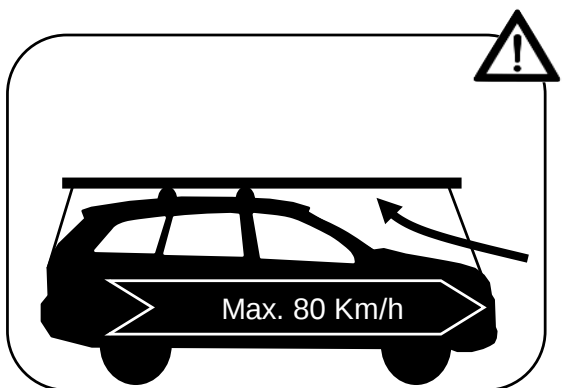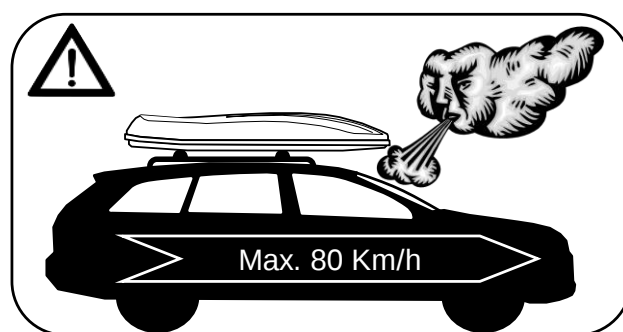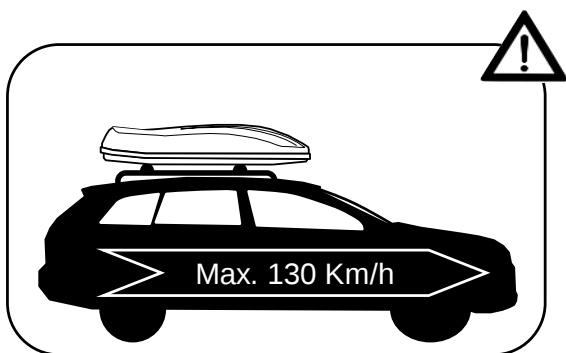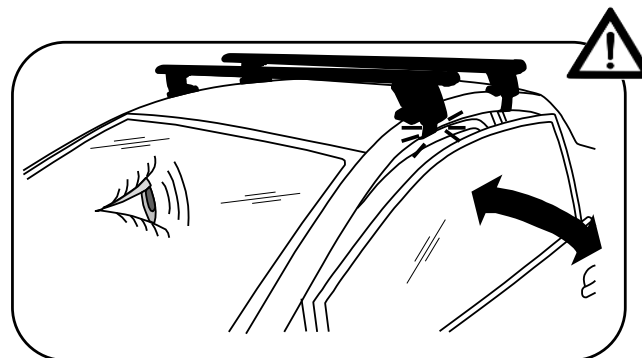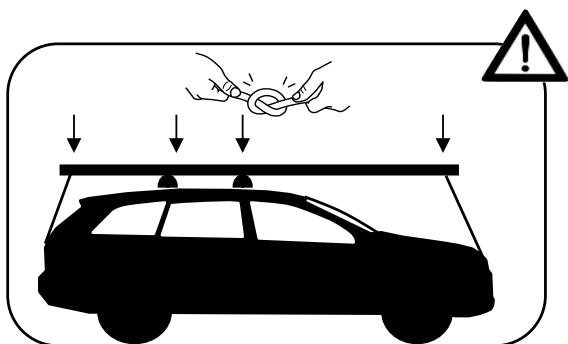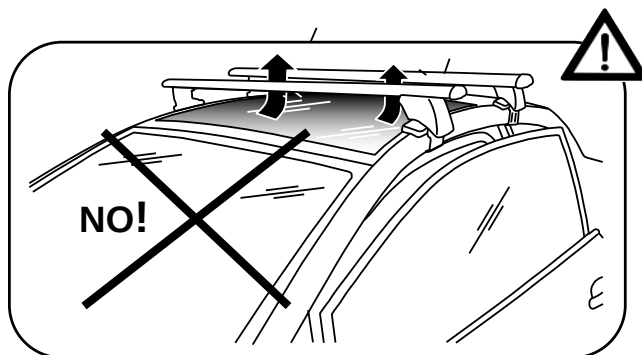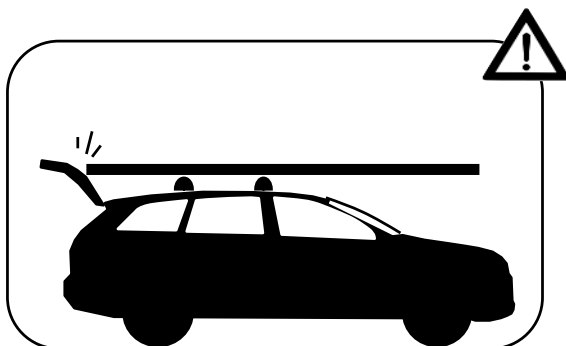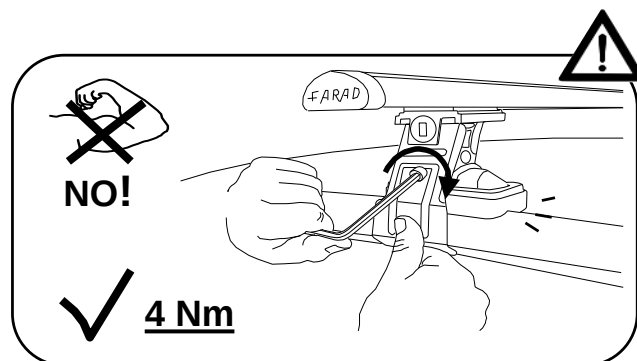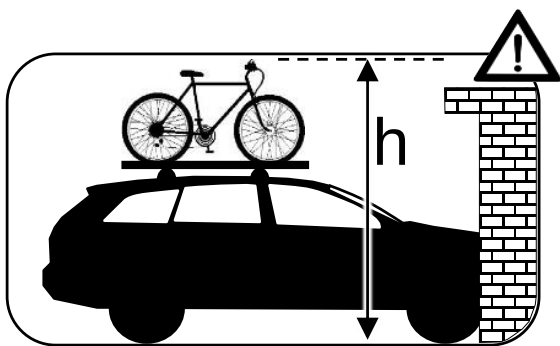

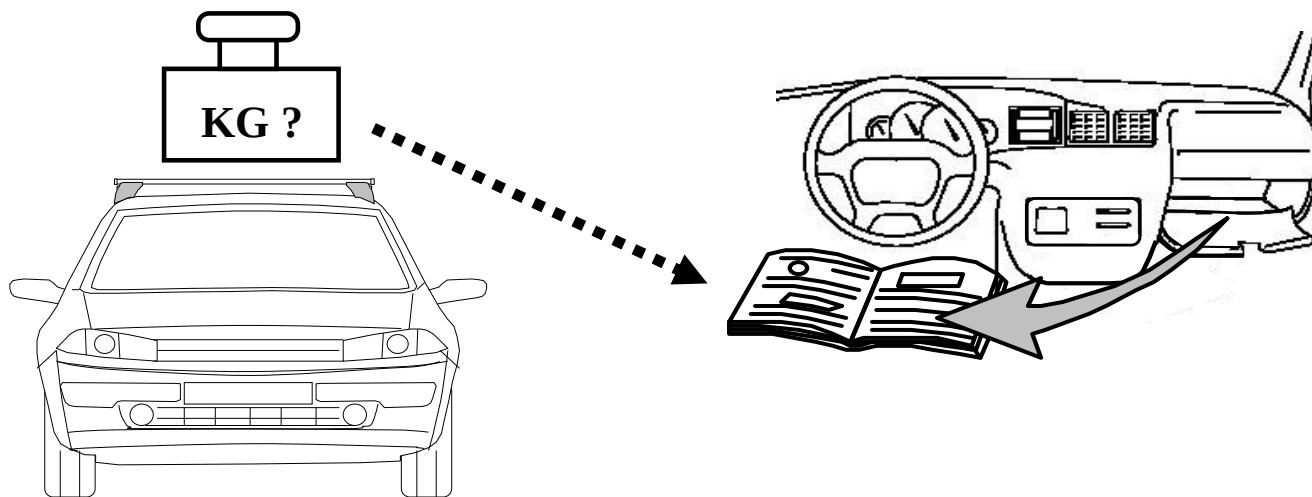


- | | |
|--|--|
| I Controllare carico del tetto sul manuale dell'auto | F vérifier le chargement manuel du toit de la voiture |
| PL Sprawdzić ładowność dachu w instrukcji | D überprüfen Sie die manuelle Beladung der Autodach |
| GB Check roof load capacity in car instruction | E comprobar la carga manual del techo del coche |
| NL check de handleiding belasting van het dak van de auto | SWE kontrollera manuell inläggning på taket av bilen |

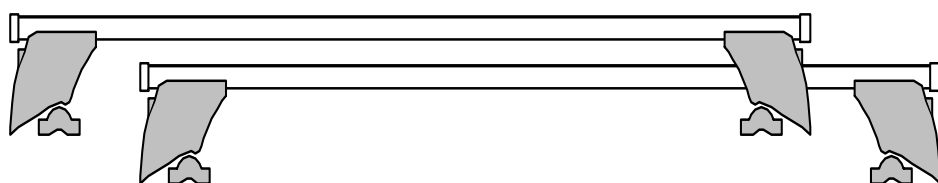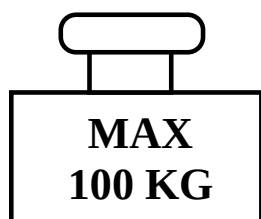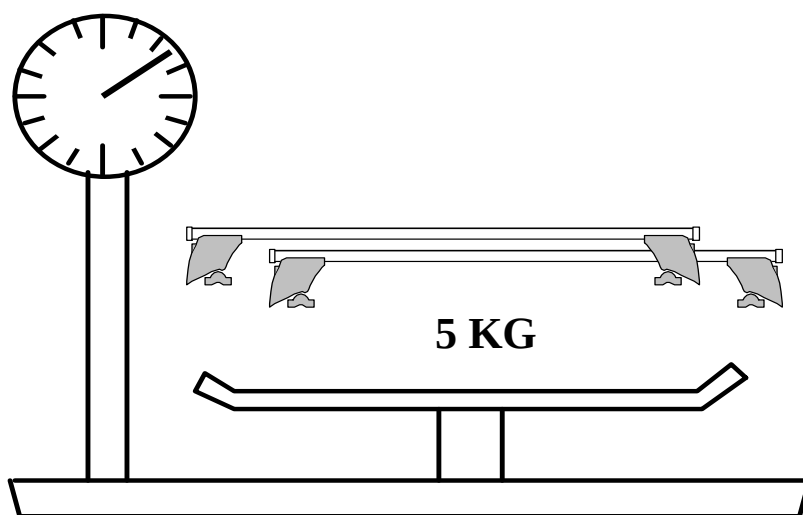

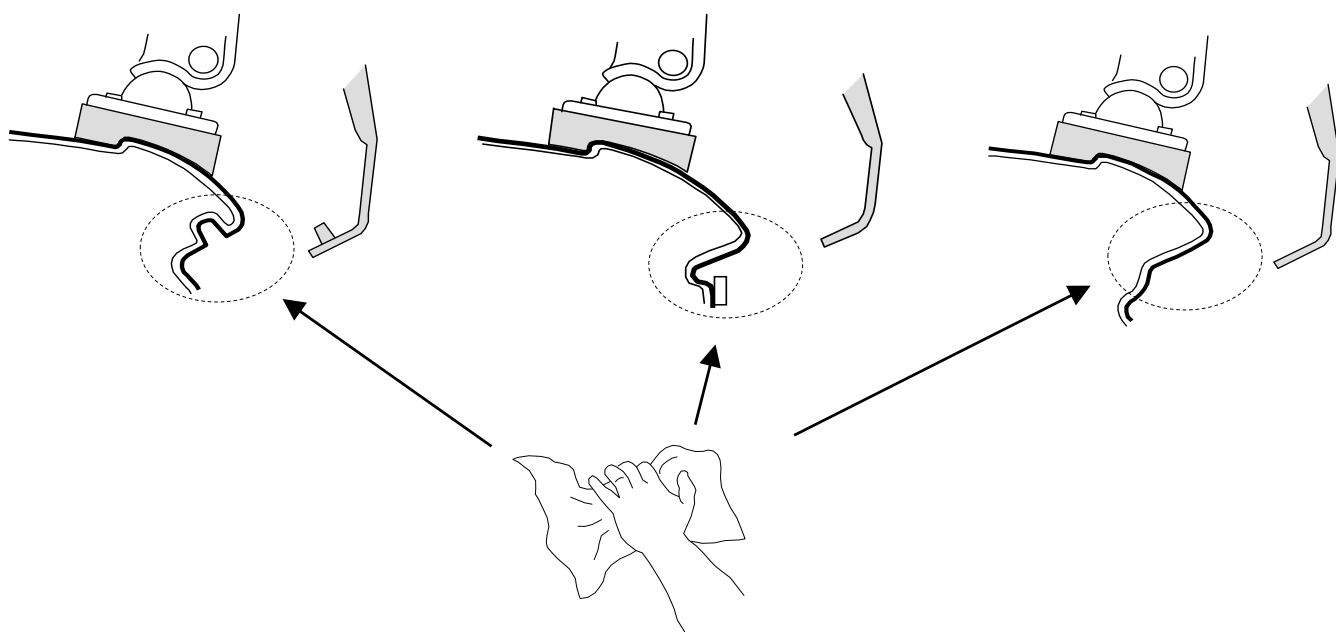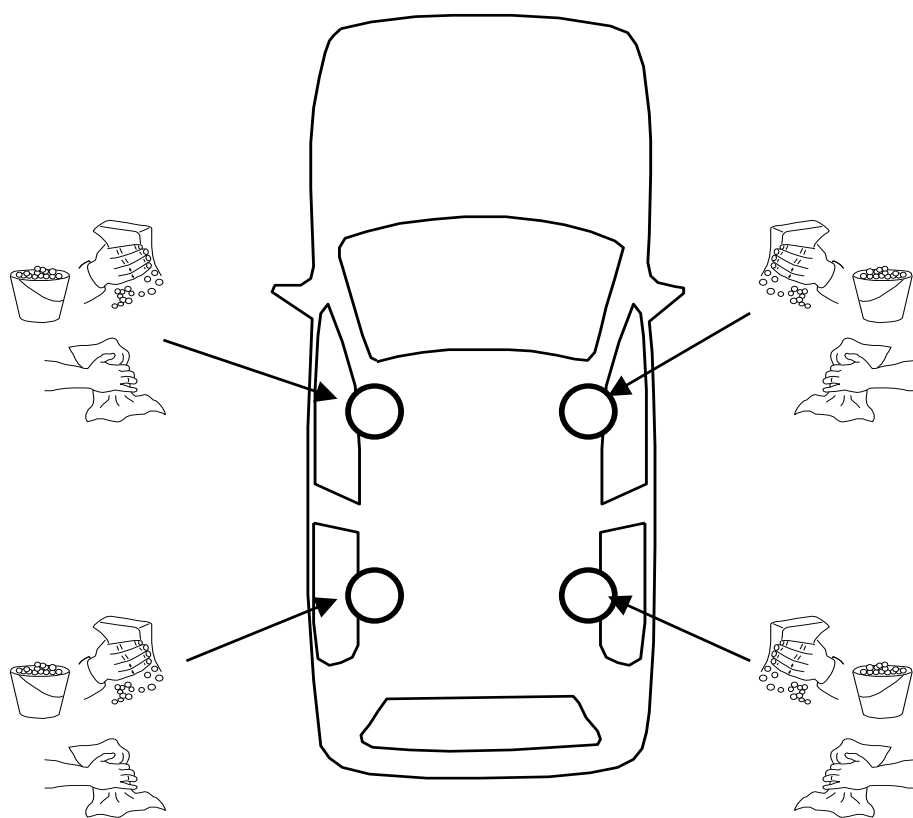



I Montaggio Barra Anteriore
PL Montaż Bagażnika Bazowego Tylnego
D Montage Vorderes Dachträgers
SWE Montering Av Främre Lasthållaren


F Fixation Barre Avant
GB Fitting Front Roof Bar
NL Montage Voorste Dakdrager
E Fijación Barra Frontal


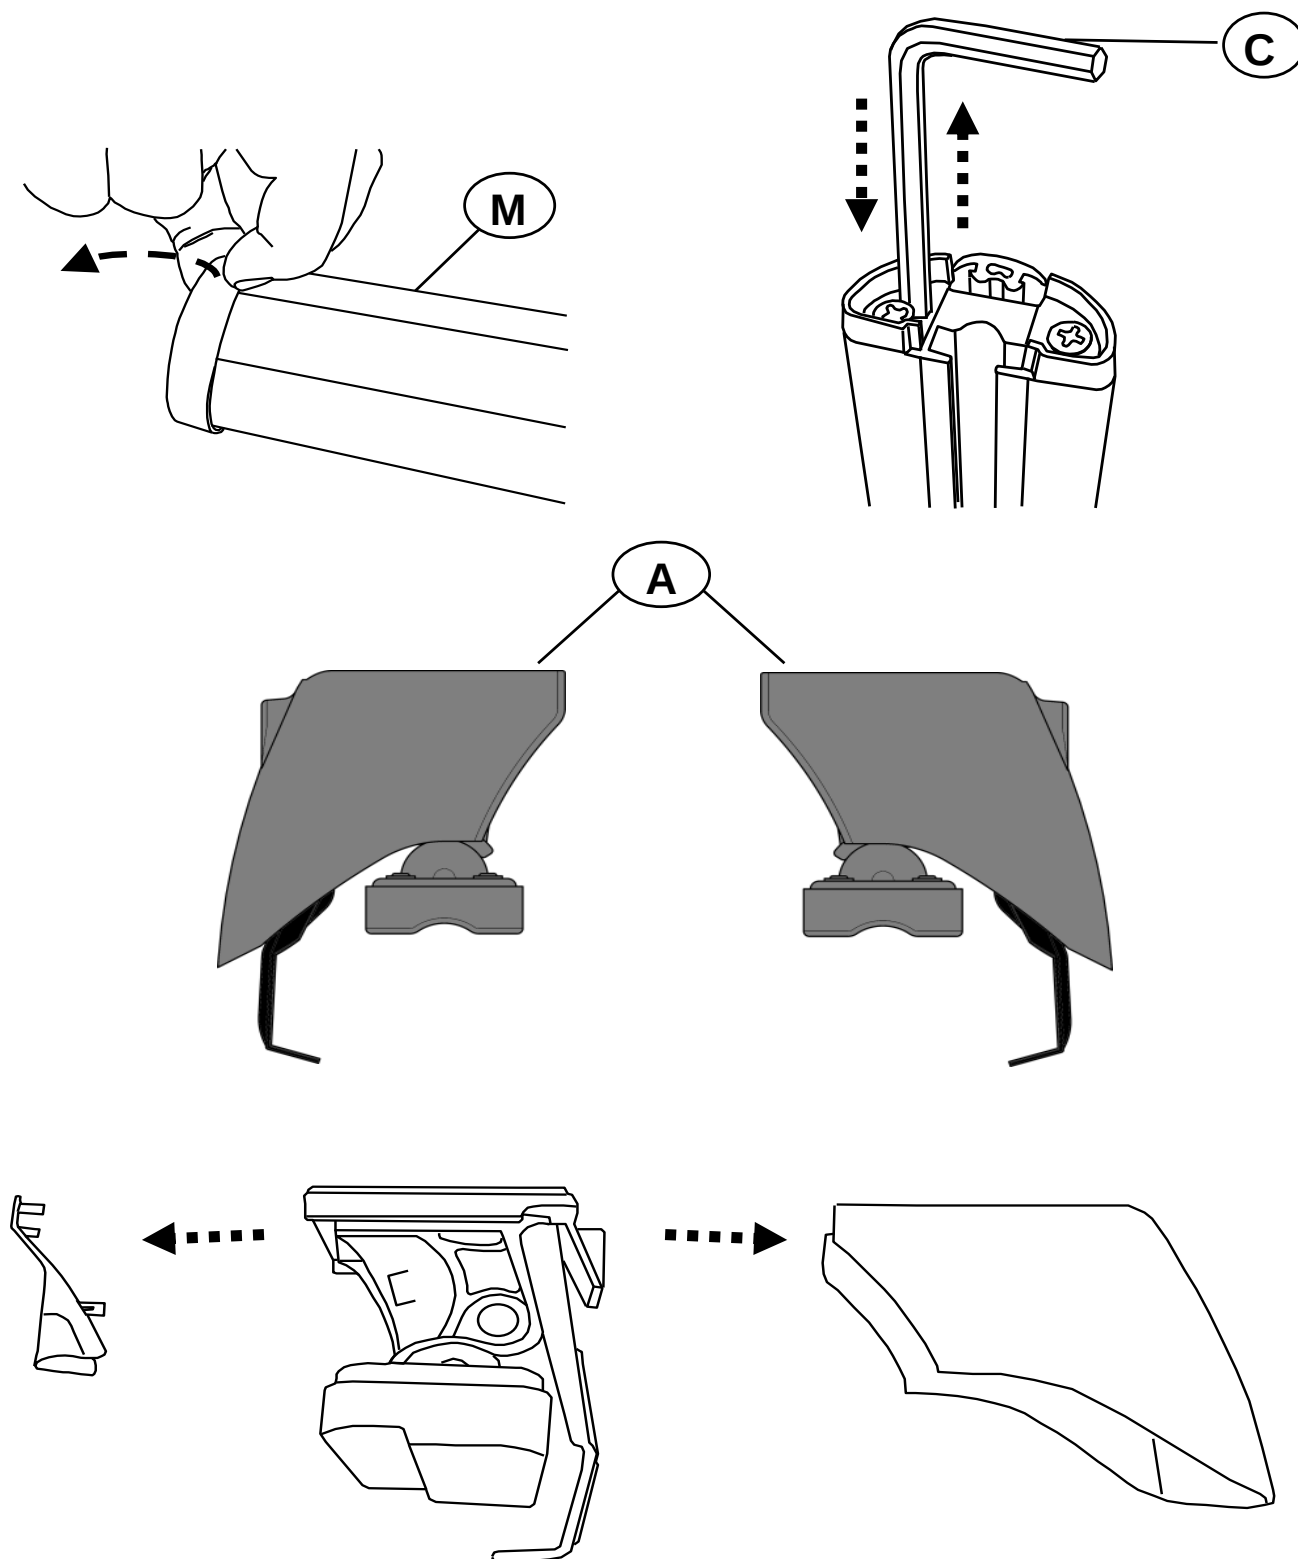






M

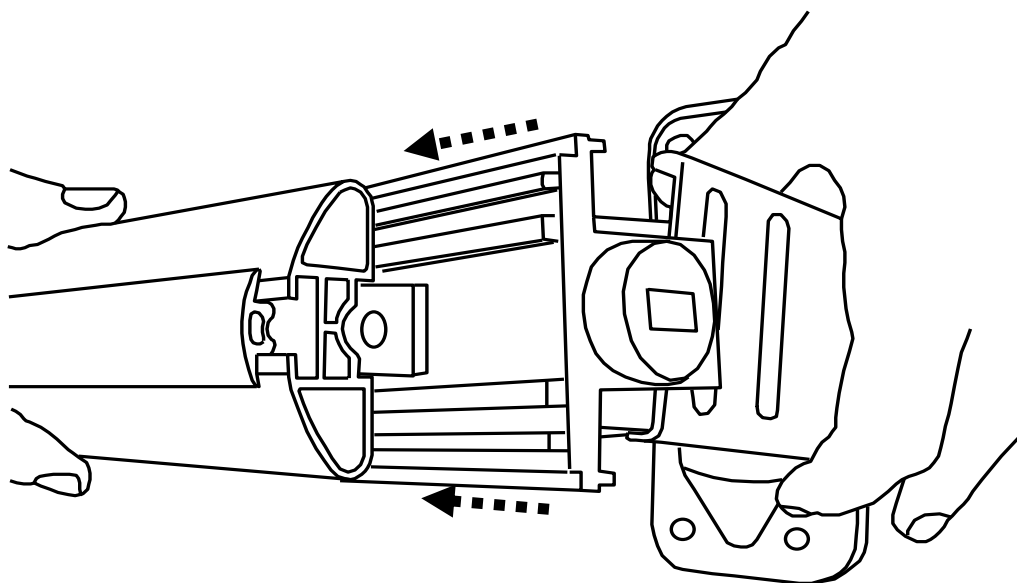
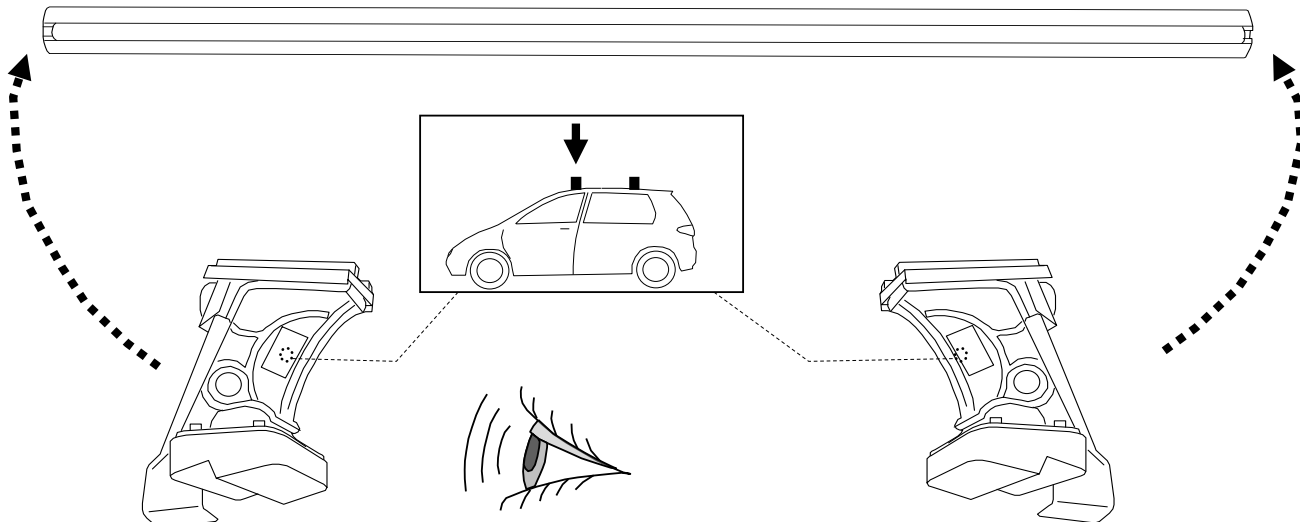


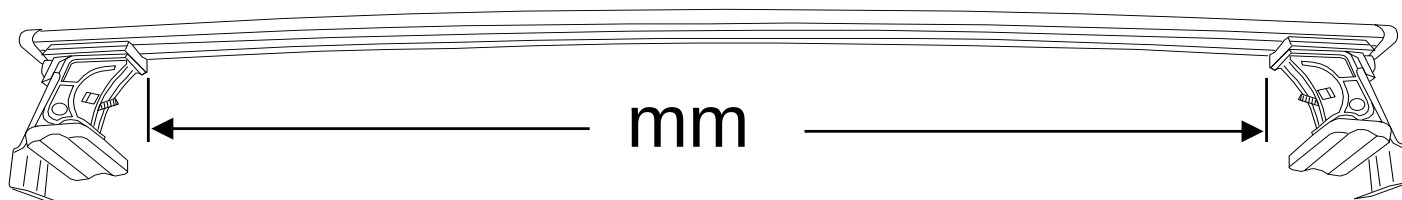


			R	mm
FORD	FOCUS	5	2018 >	R= 36 1045
RENAULT	CLIO V	5	2019 >	R= 31 1020

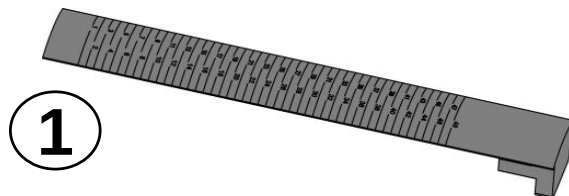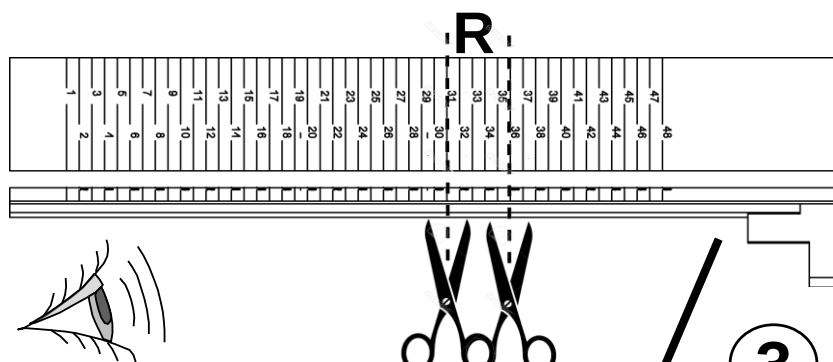


3

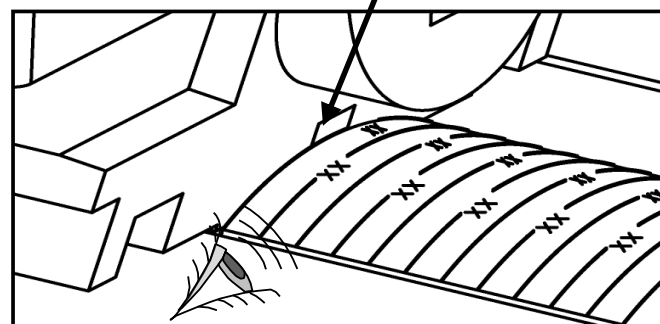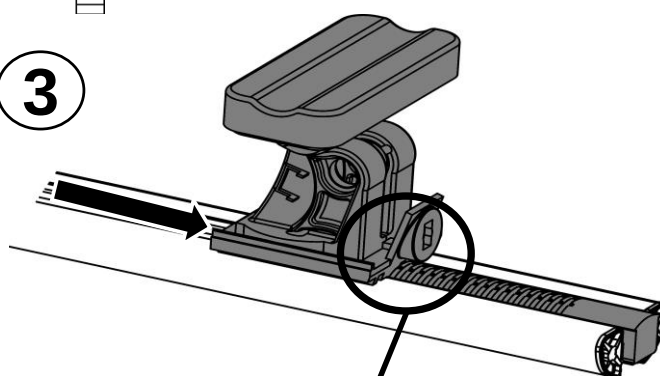


2

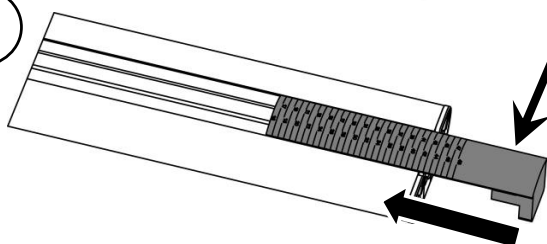


4

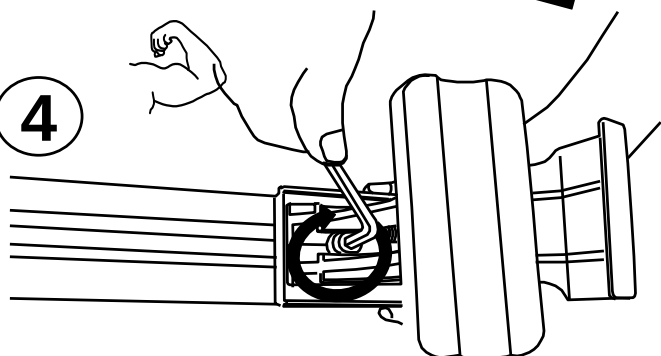


5

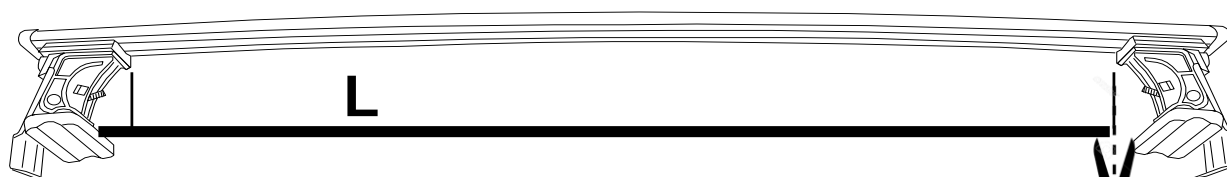


6


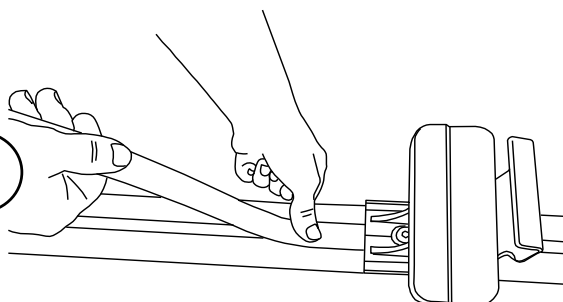



7

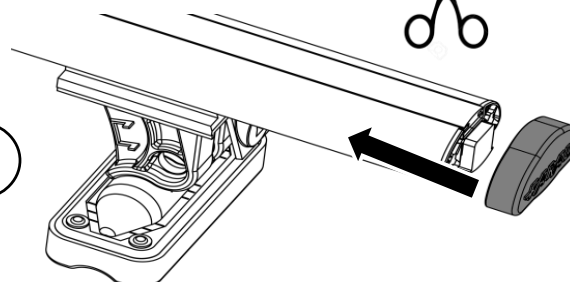

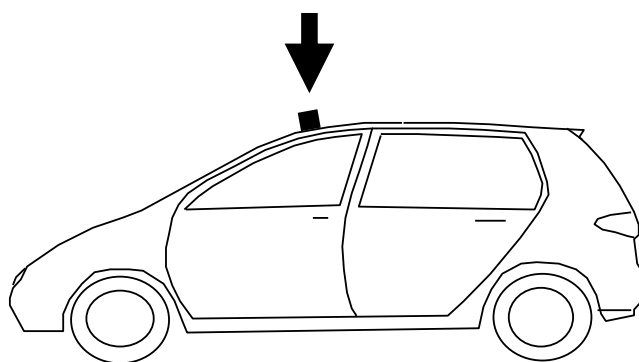

D

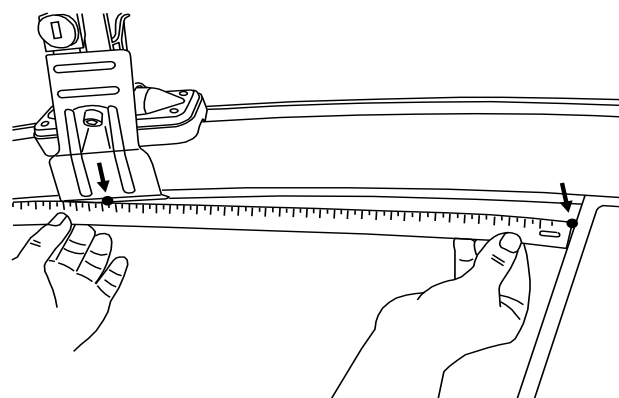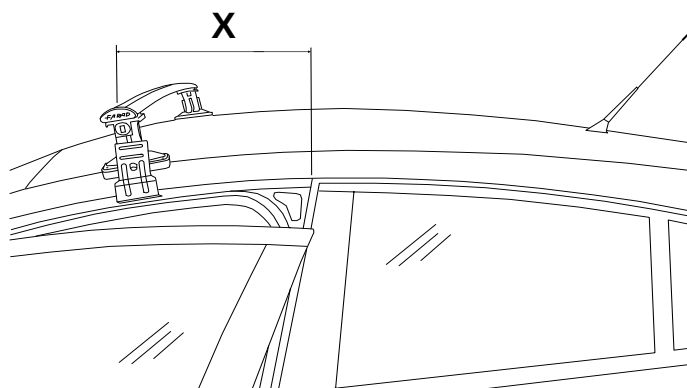


				X
FORD	FOCUS	5	2018 >	X= 290
RENAULT	CLIO V	5	2019 >	X= 300





NO!

✓ 4 Nm

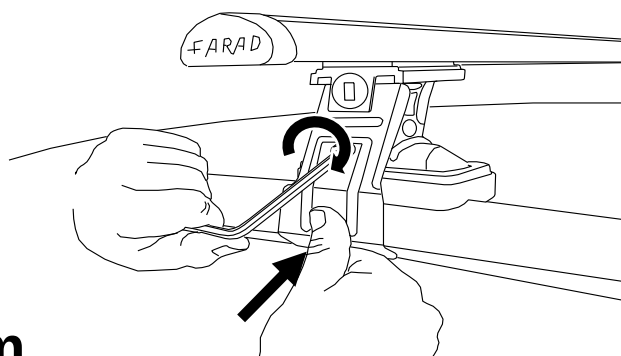



C



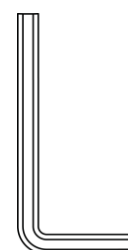


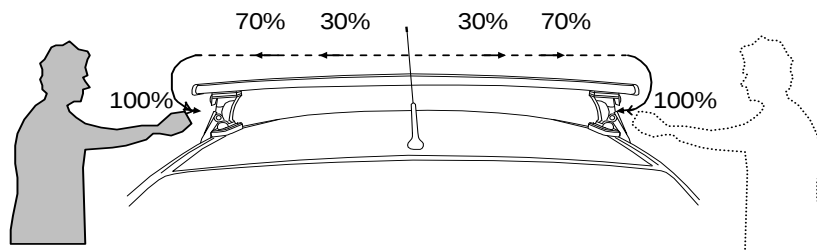


I Alternare il fissaggio delle viti
PL Śruby dokręcaj naprzemiennie
GB Tighten alternately
NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
D Die Schrauben abwechselnd anziehen
E Apretar alternativamente
SWE Dra åt växelvis

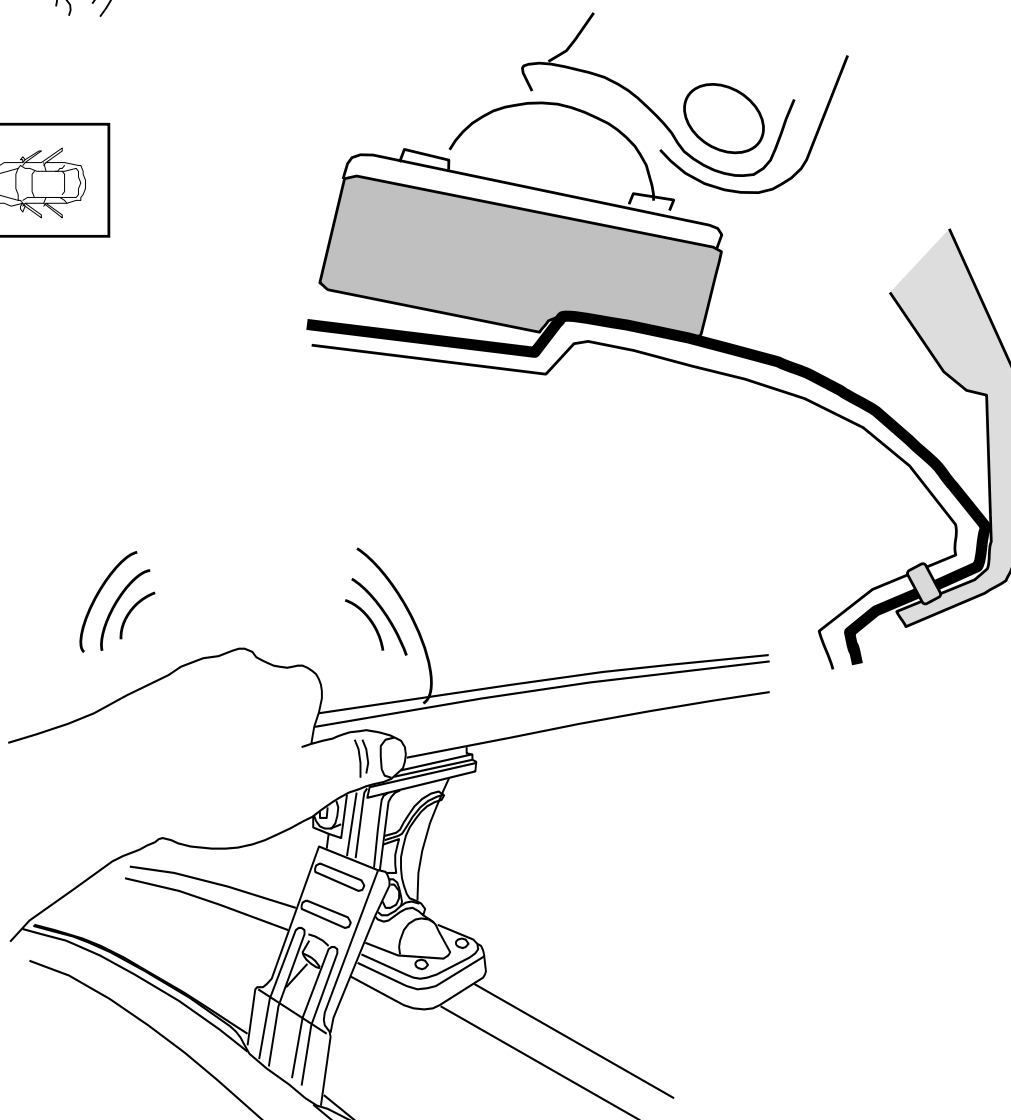

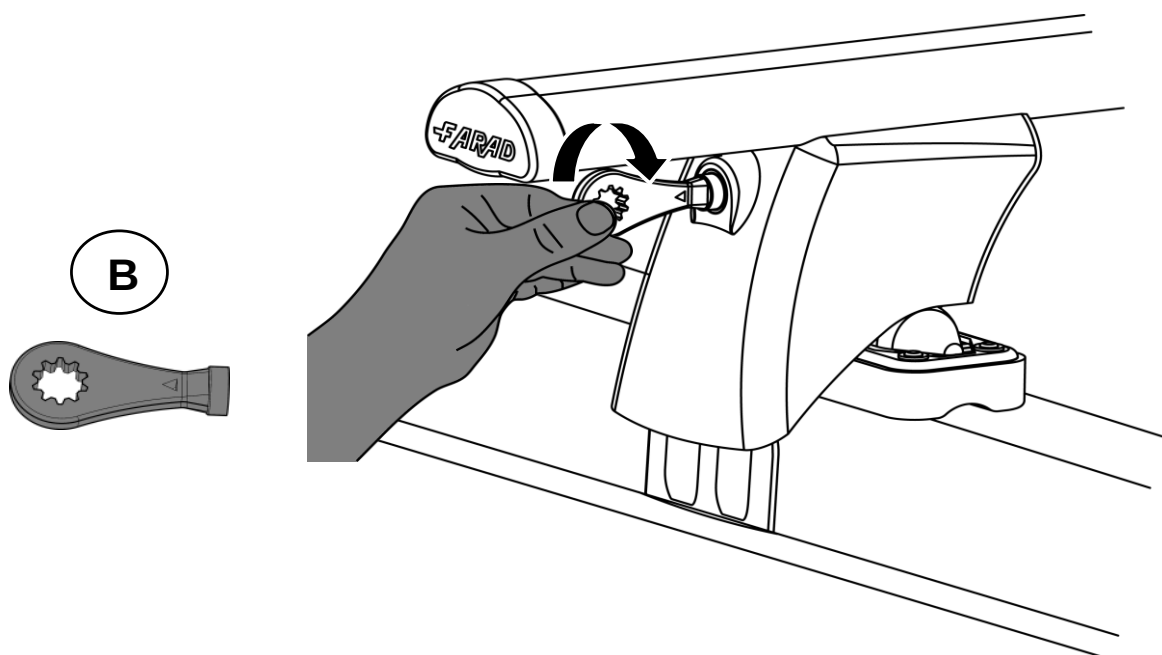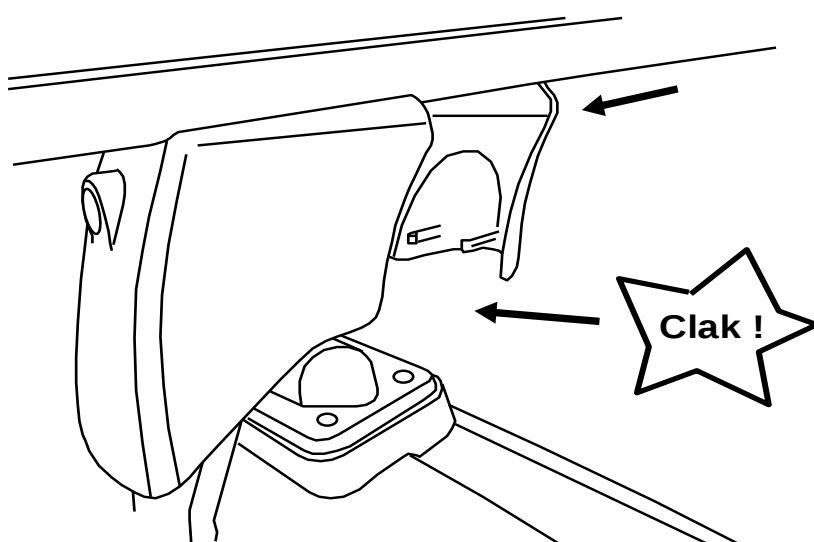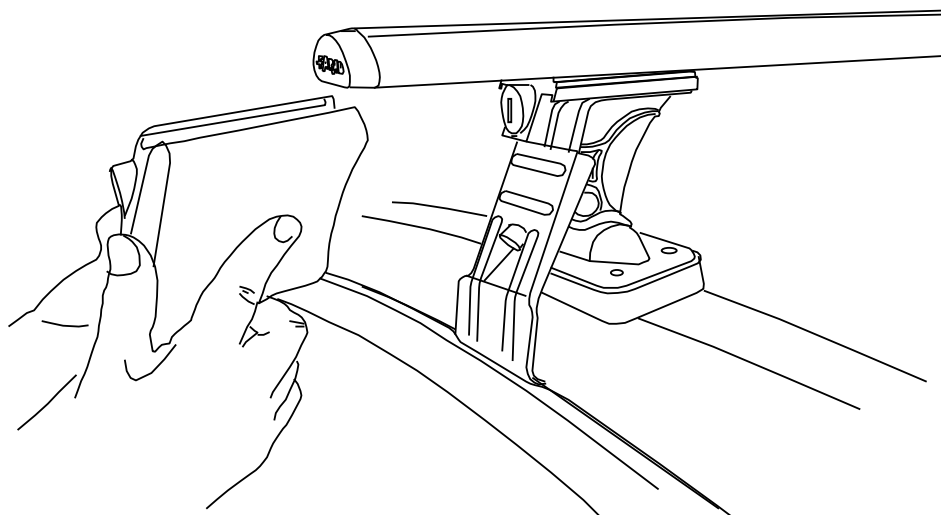

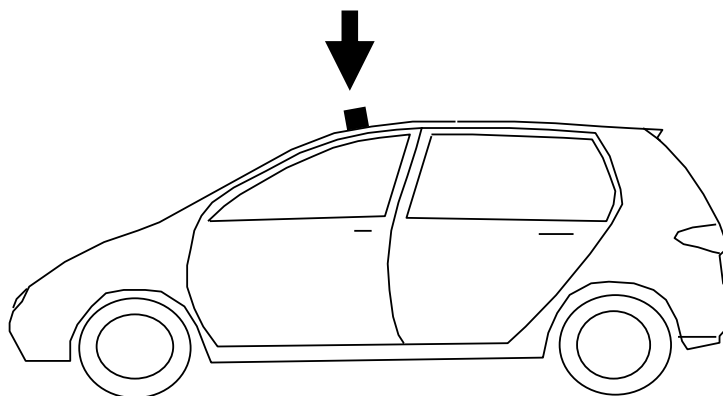

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar



E Fijación Barra Trasera










D Montage Heckdachträgers




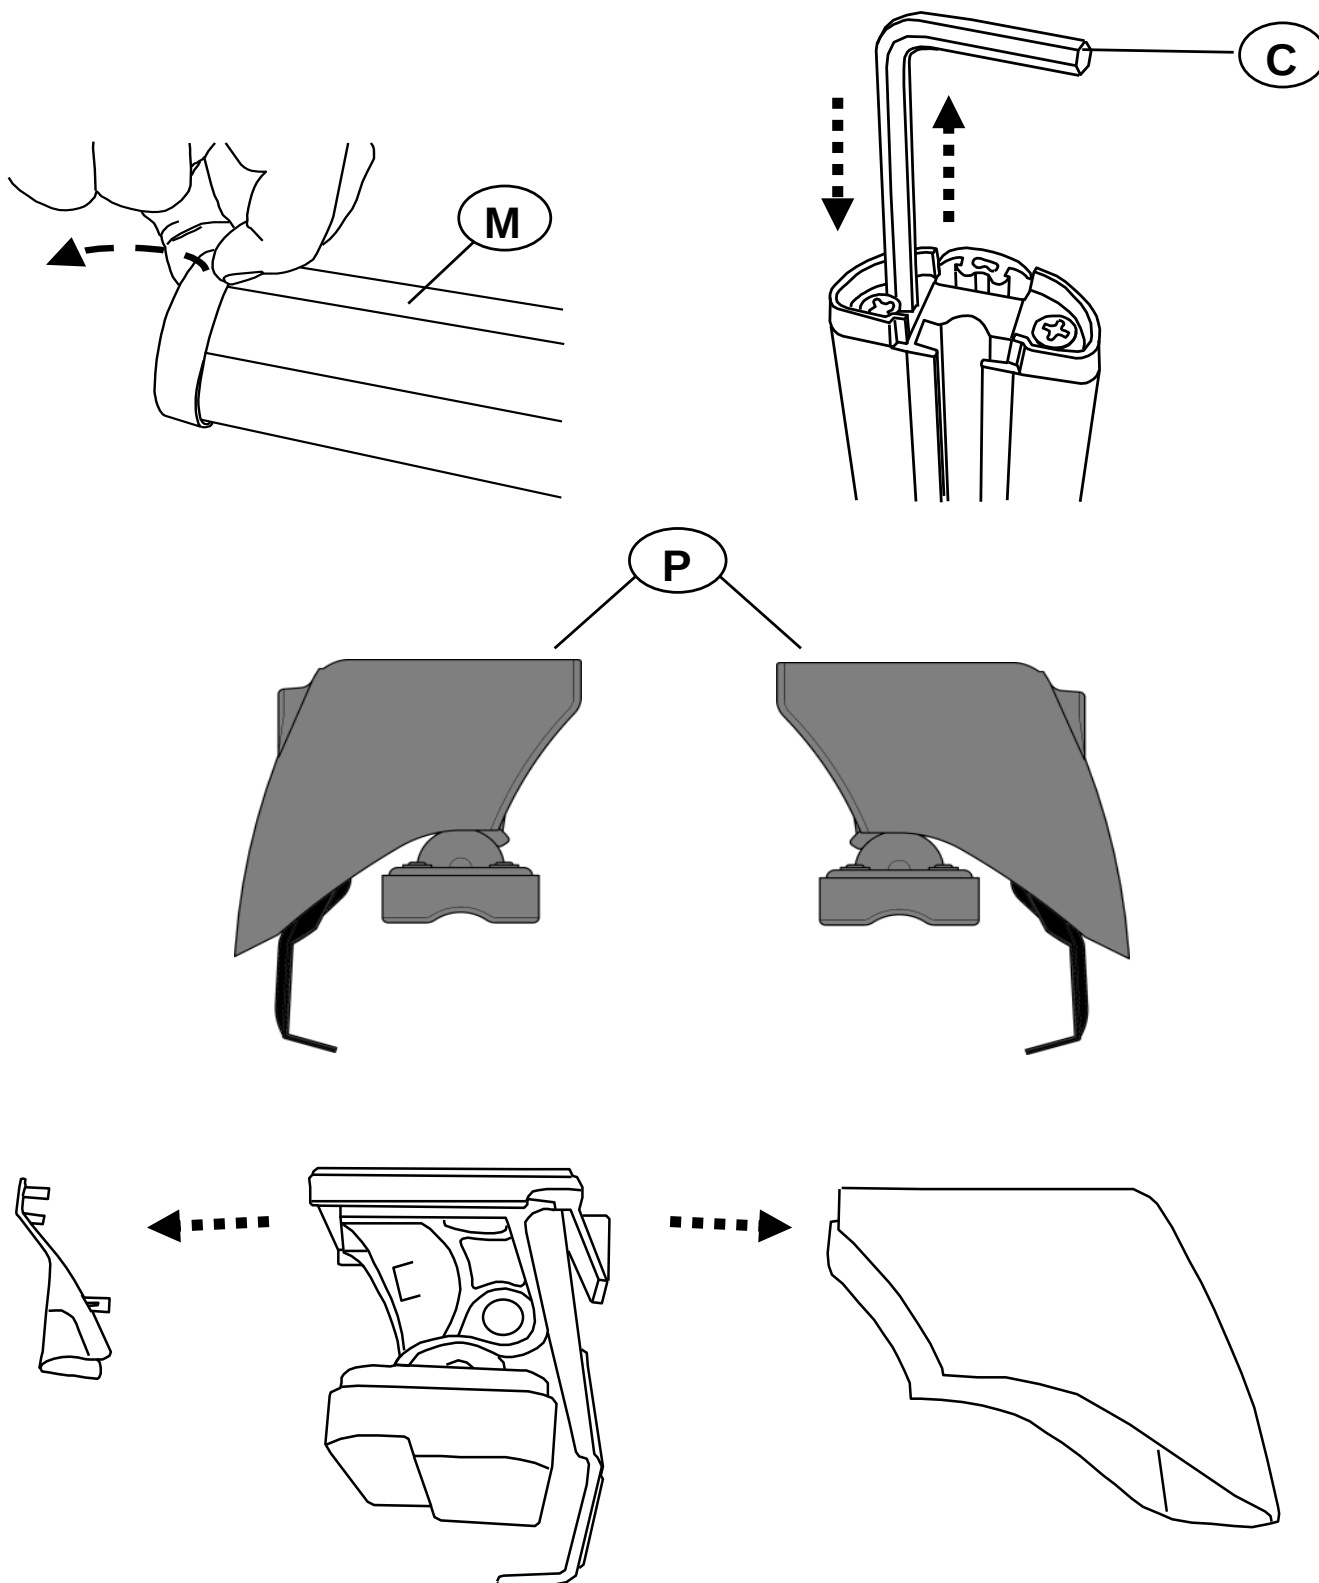


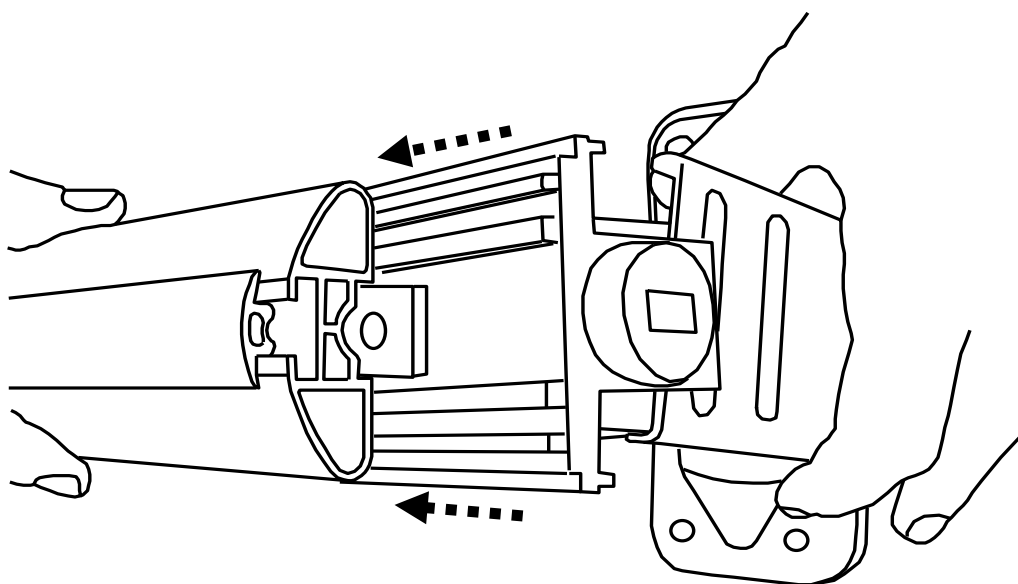
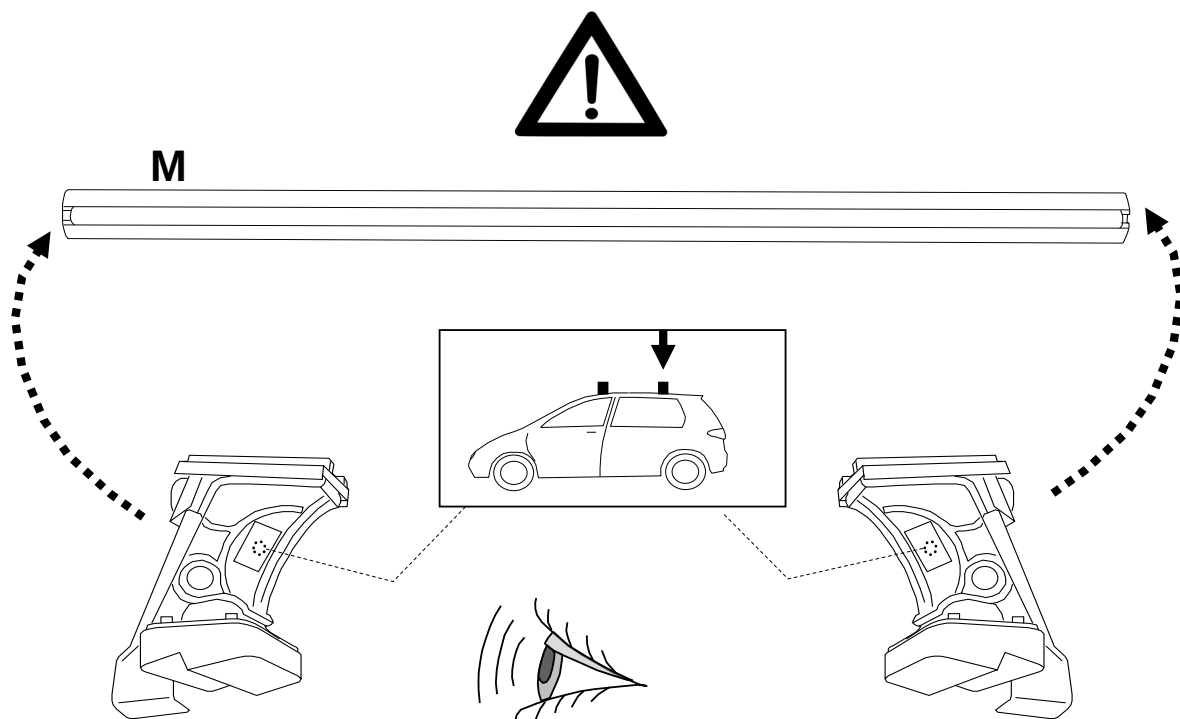


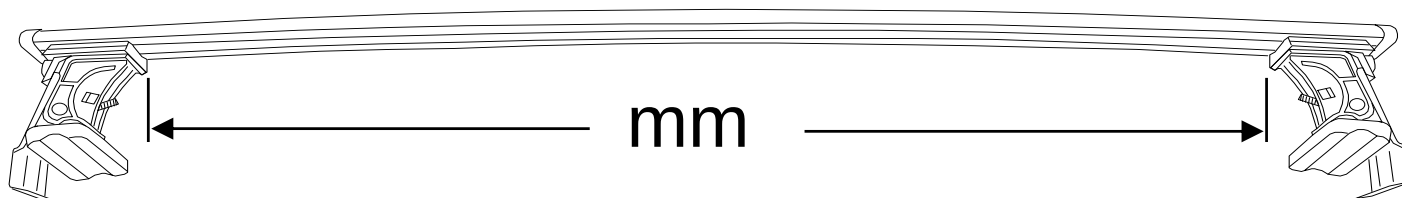

			R	mm
FORD	FOCUS	5	2018 >	R= 31 1020
RENAULT	CLIO V	5	2019 >	R= 21 970

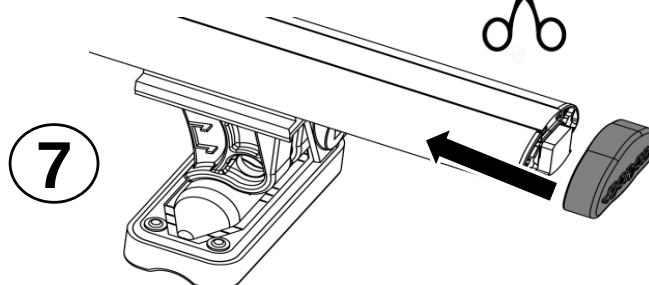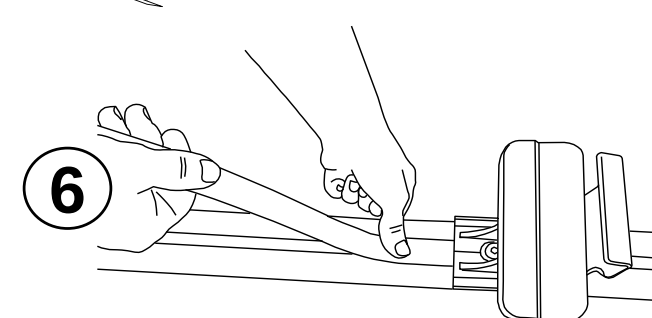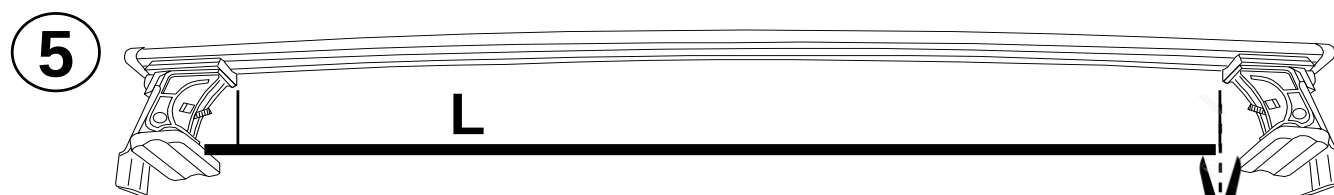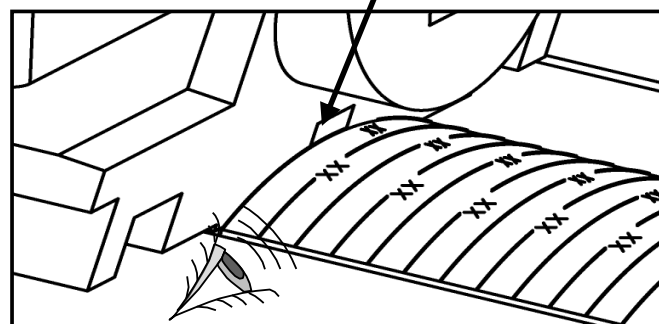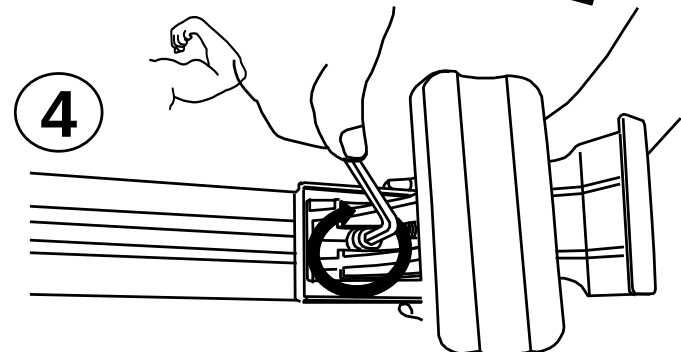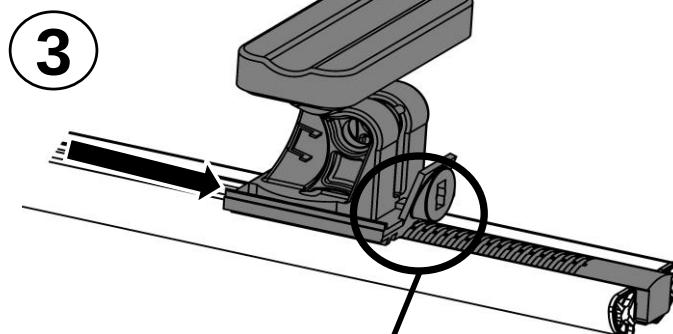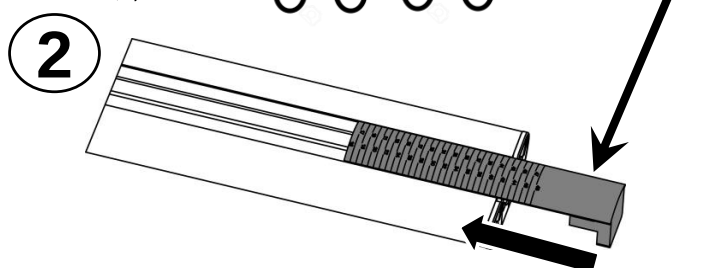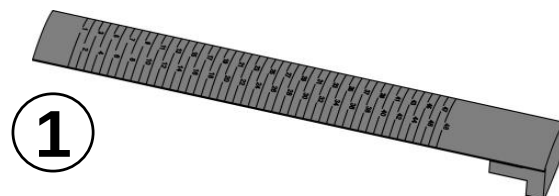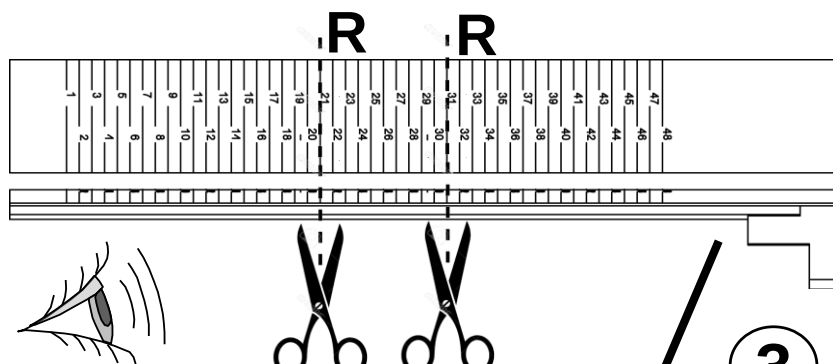

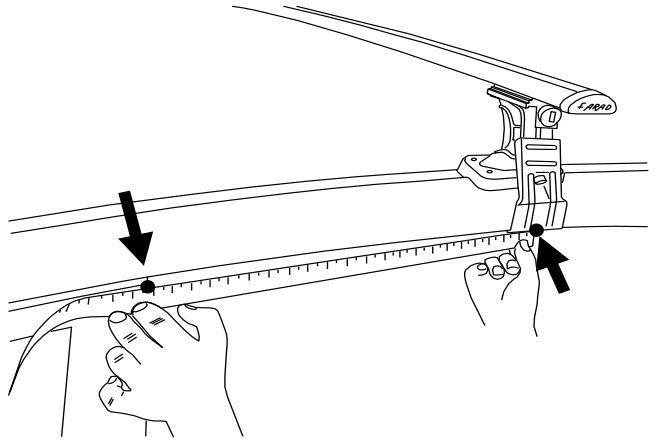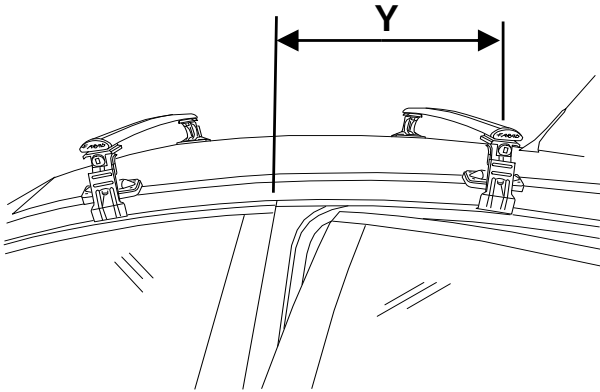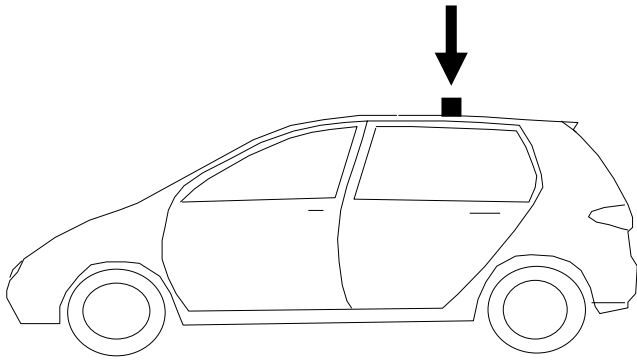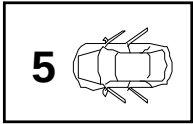


				Y
FORD	FOCUS	5	2018 >	Y= 465
RENAULT	CLIO V	5	2019 >	Y= 400




NO!









4 Nm

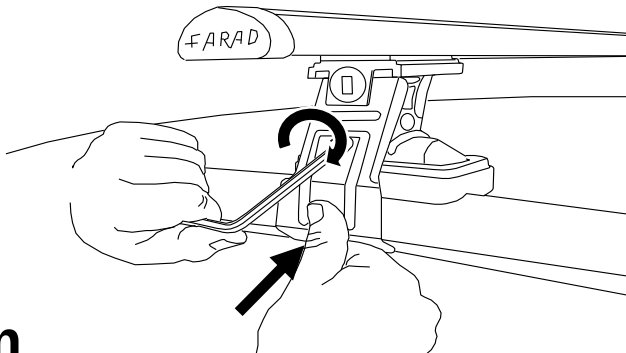


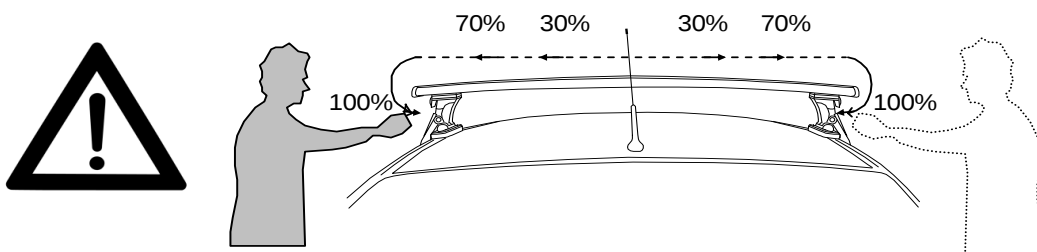

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

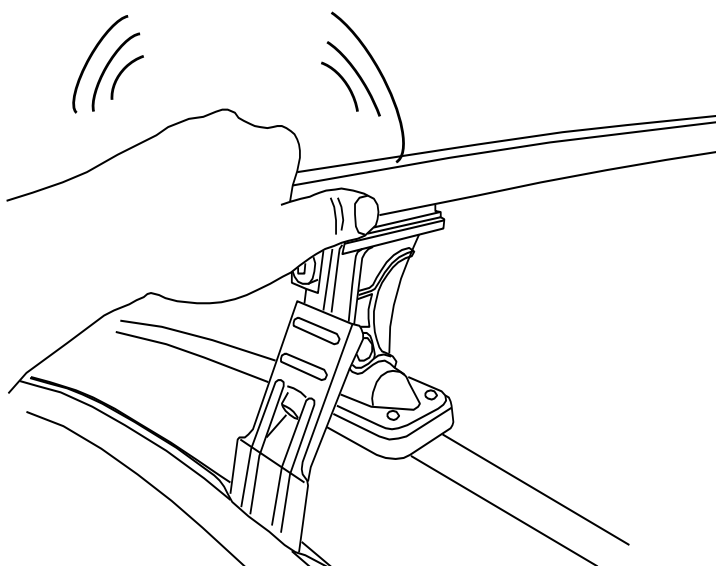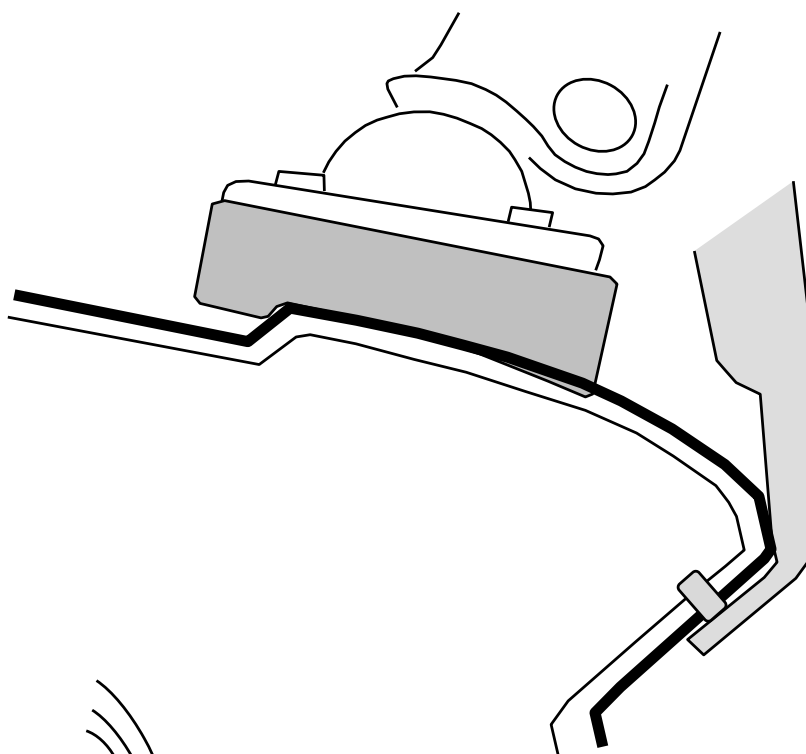

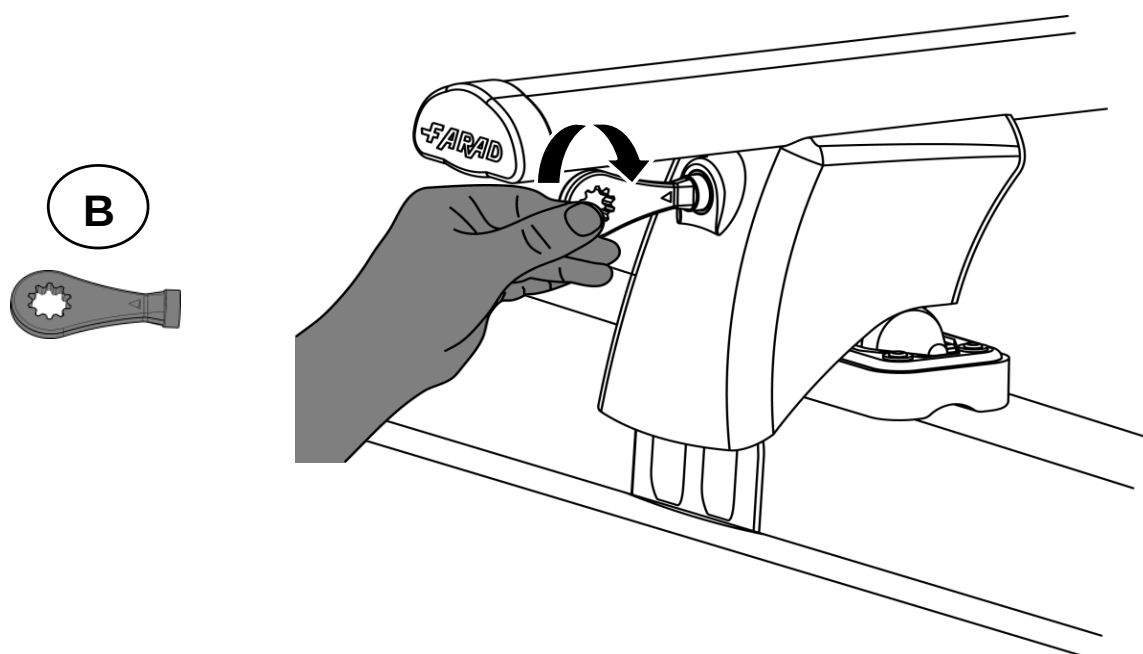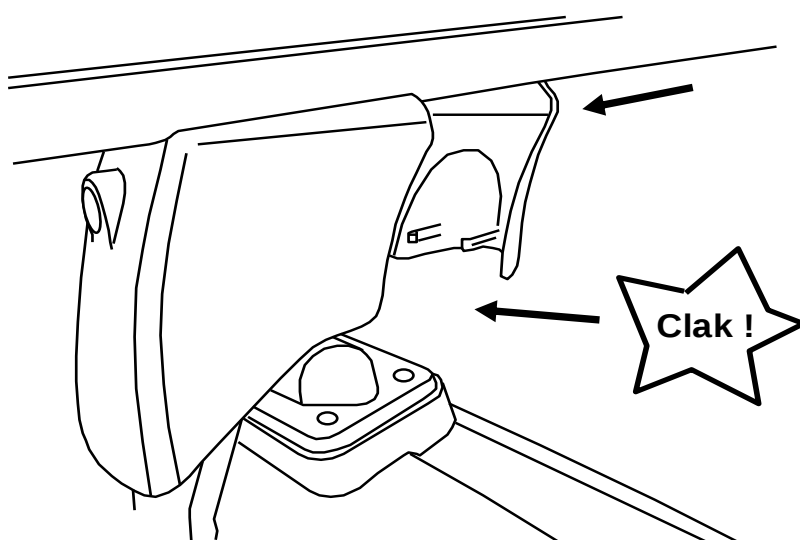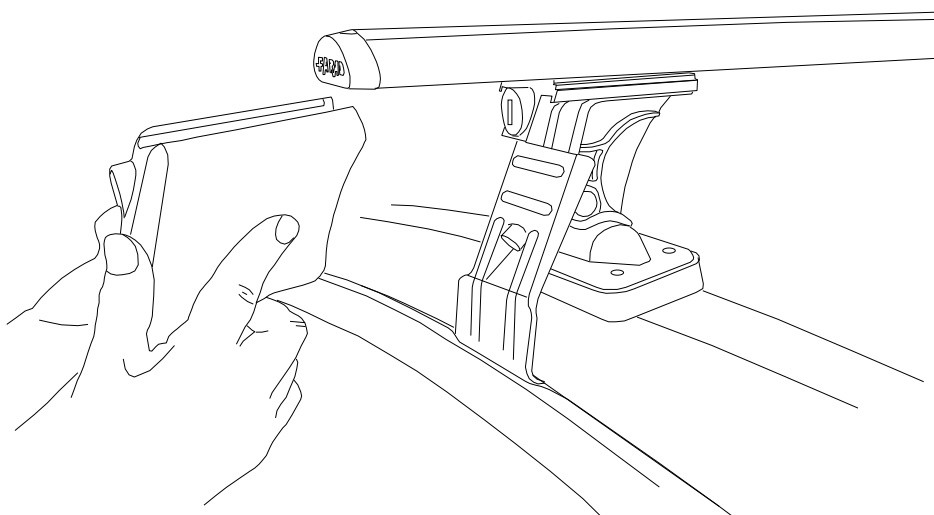

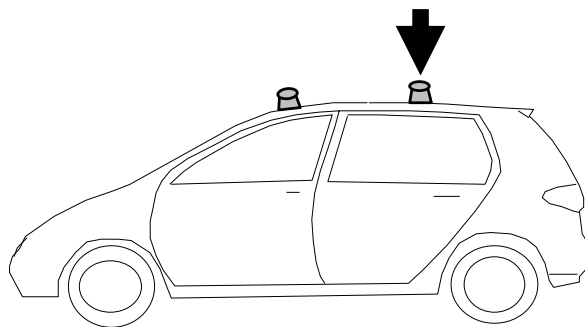


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

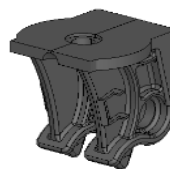

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

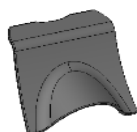


INVOLUCRO POST.
90341 / 9

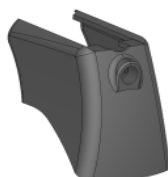

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

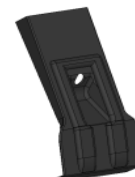

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in Italy

tel. 011 9713719 - n° verde 800984229
www.faradworld.com