

FARAD[®] BARS

made in italy

BS 170 - 1

BMW X2 2018 >
KIA CEE'D 2019>

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung

GB Fitting instructions

E Instrucciones de montaje


NL Inbouwhandleiding

SWE Montageanvisnin

KIT BS


Nr 2

A

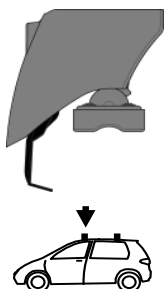

Nr 2

P

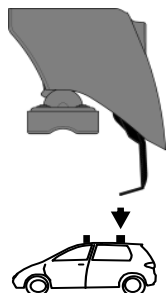

Nr 2

B



Nr 1

C



Nr 1

D



+

KIT ALU


Nr 2

L














Nr 2


M






=


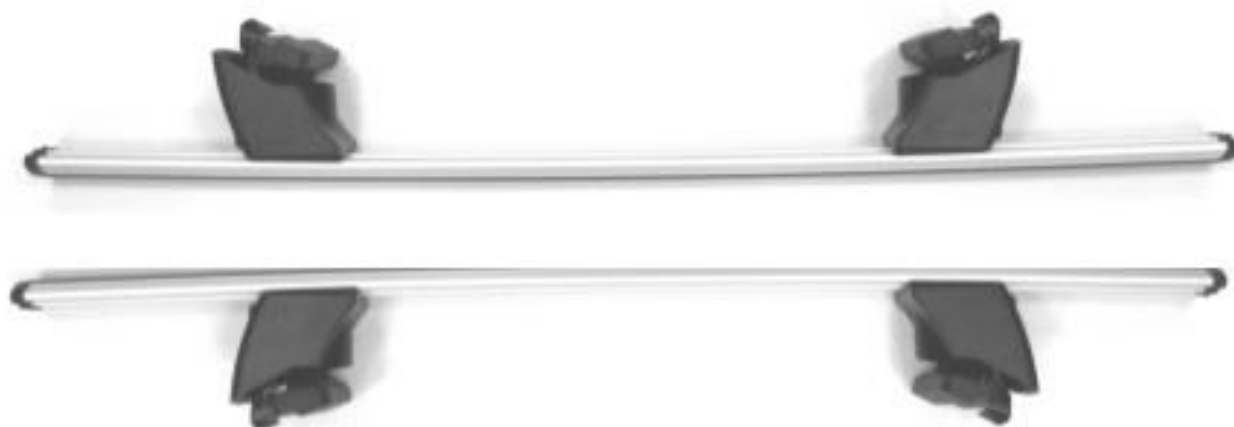


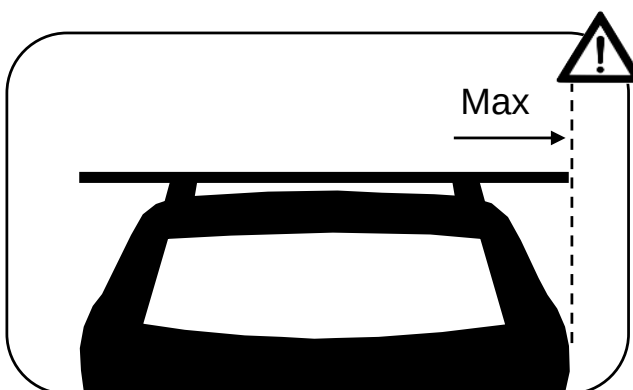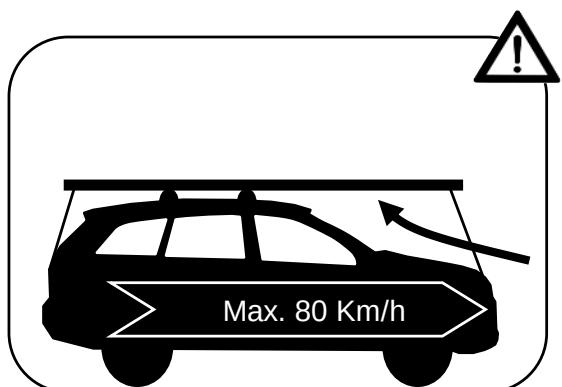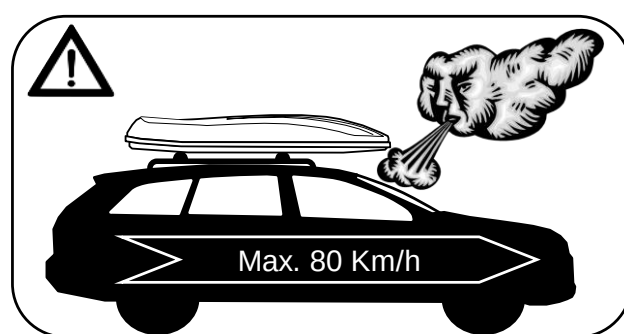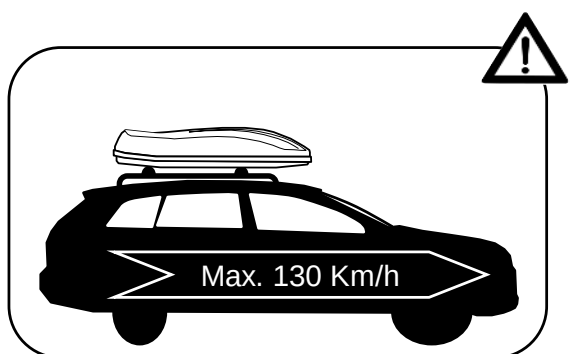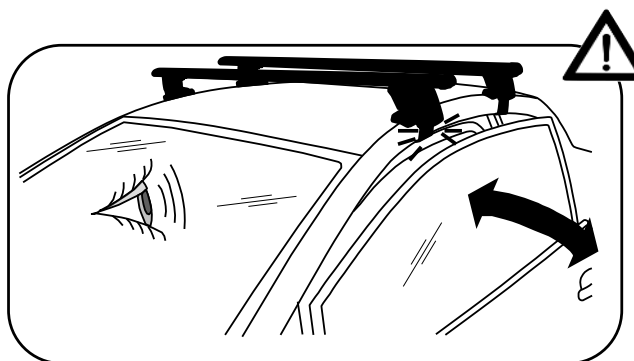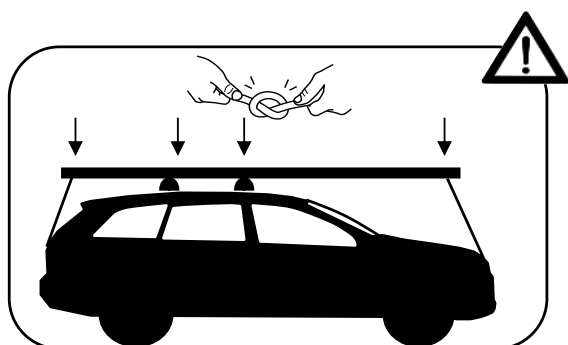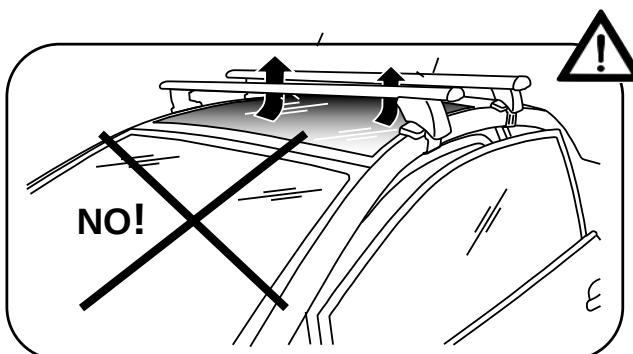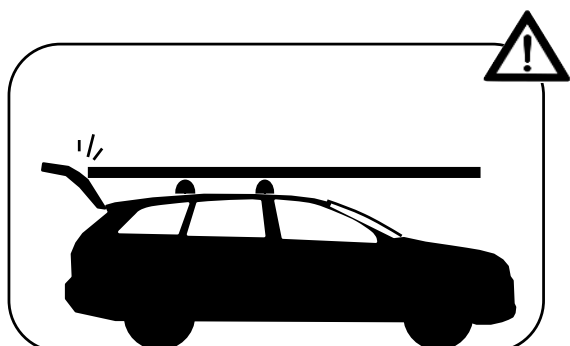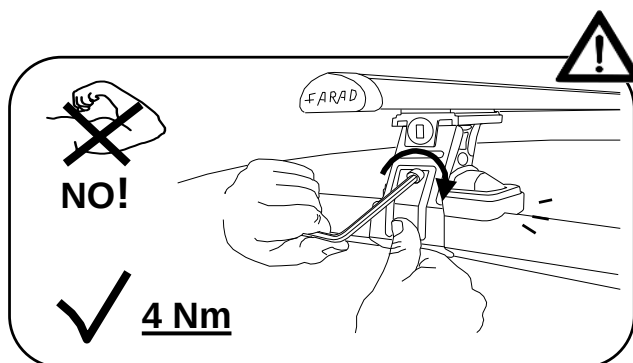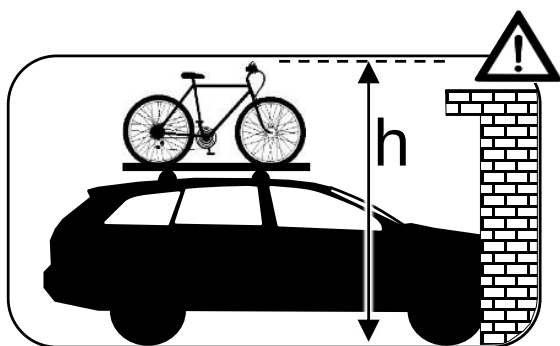

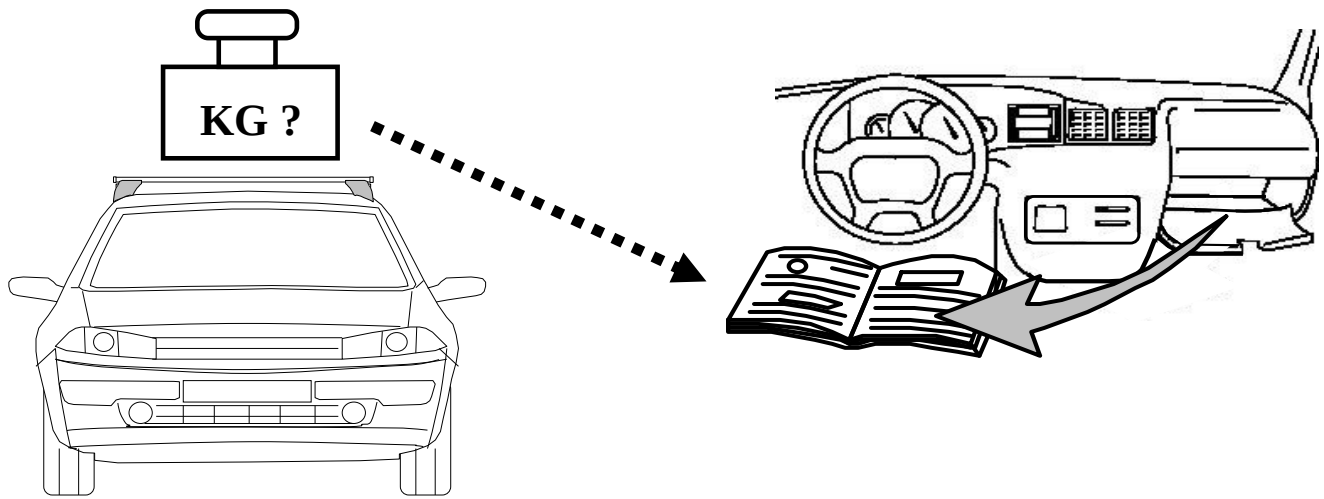

- | | |
|---|--|
| <p>I Controllare carico del tetto sul manuale dell'auto</p> <p>PL Sprawdzić ładowność dachu w instrukcji</p> <p>GB Check roof load capacity in car instruction</p> <p>NL check de handleiding belasting van het dak van de auto</p> | <p>F vérifier le chargement manuel du toit de la voiture</p> <p>D überprüfen Sie die manuelle Beladung der Autodach</p> <p>E comprobar la carga manual del techo del coche</p> <p>SWE kontrollera manuell inläggning på taket av bilen</p> |
|---|--|

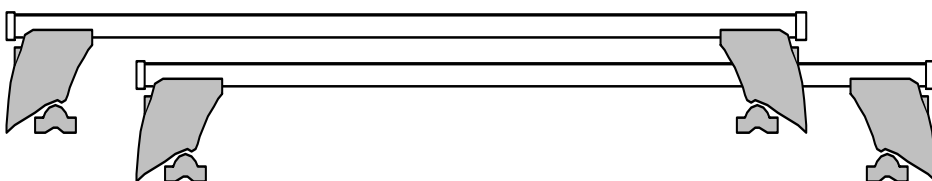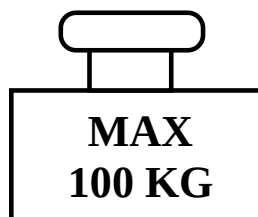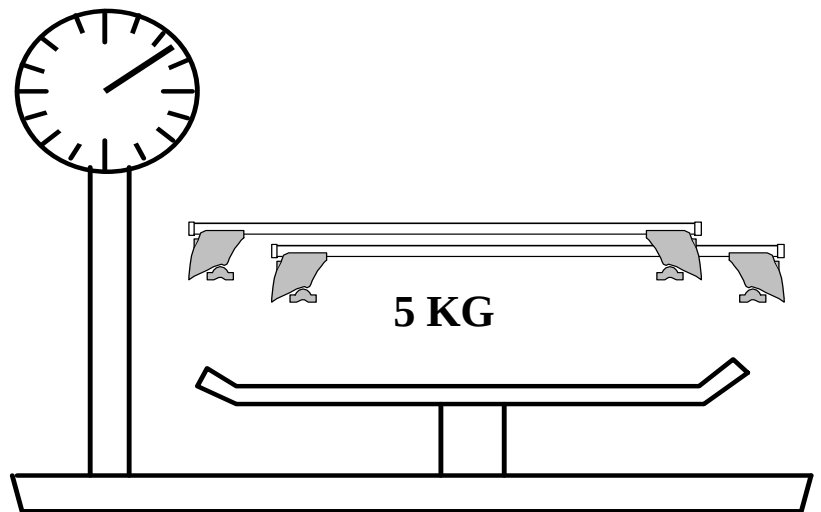

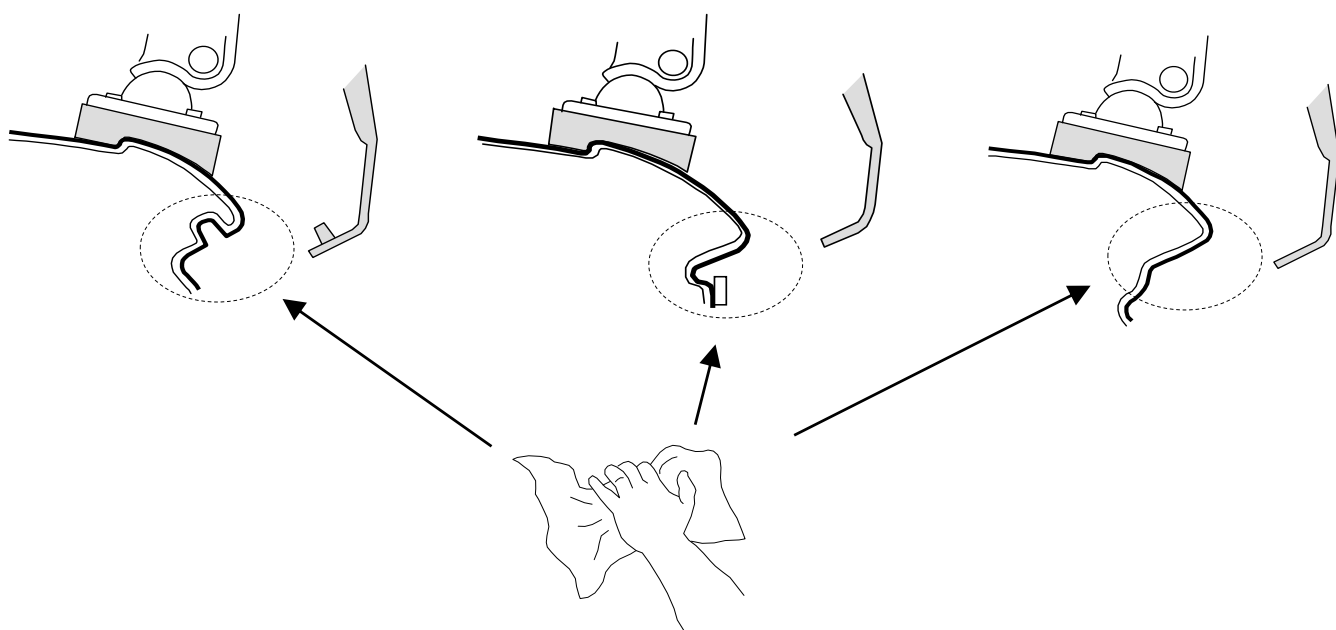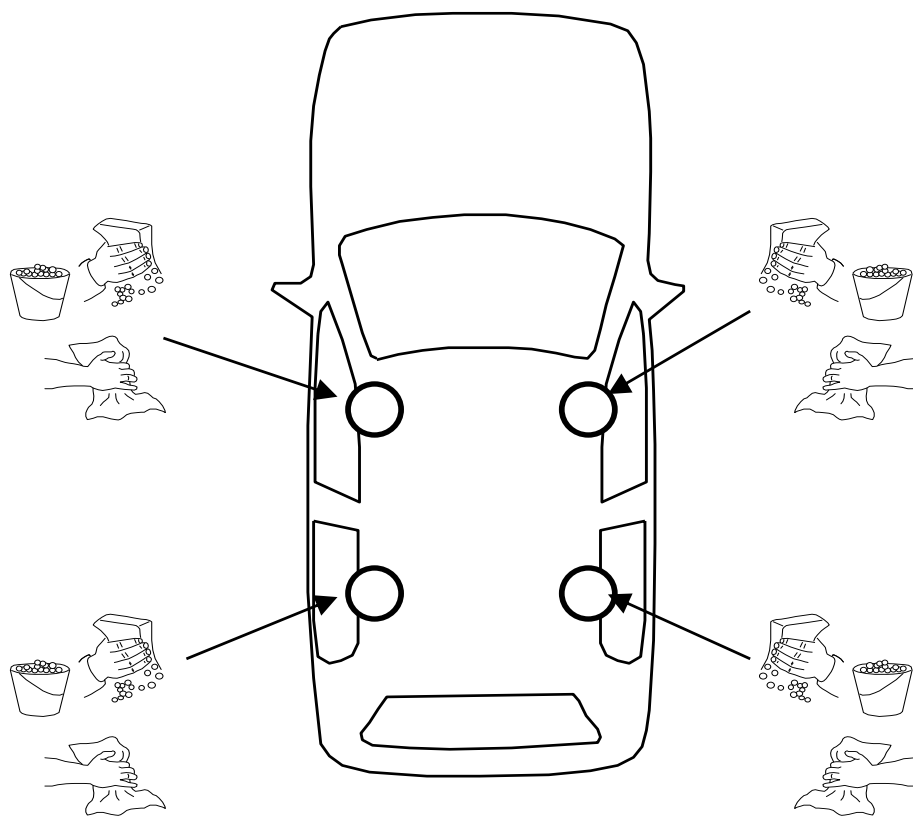

I Montaggio Barra Anteriore

PL Montaż Bagażnika Bazowego Tylnego

D Montage Vorderes Dachträgers


SWE Montering Av Främre Lasthållaren

F Fixation Barre Avant

GB Fitting Front Roof Bar



NL Montage Voorste Dakdrager


E Fijación Barra Frontal


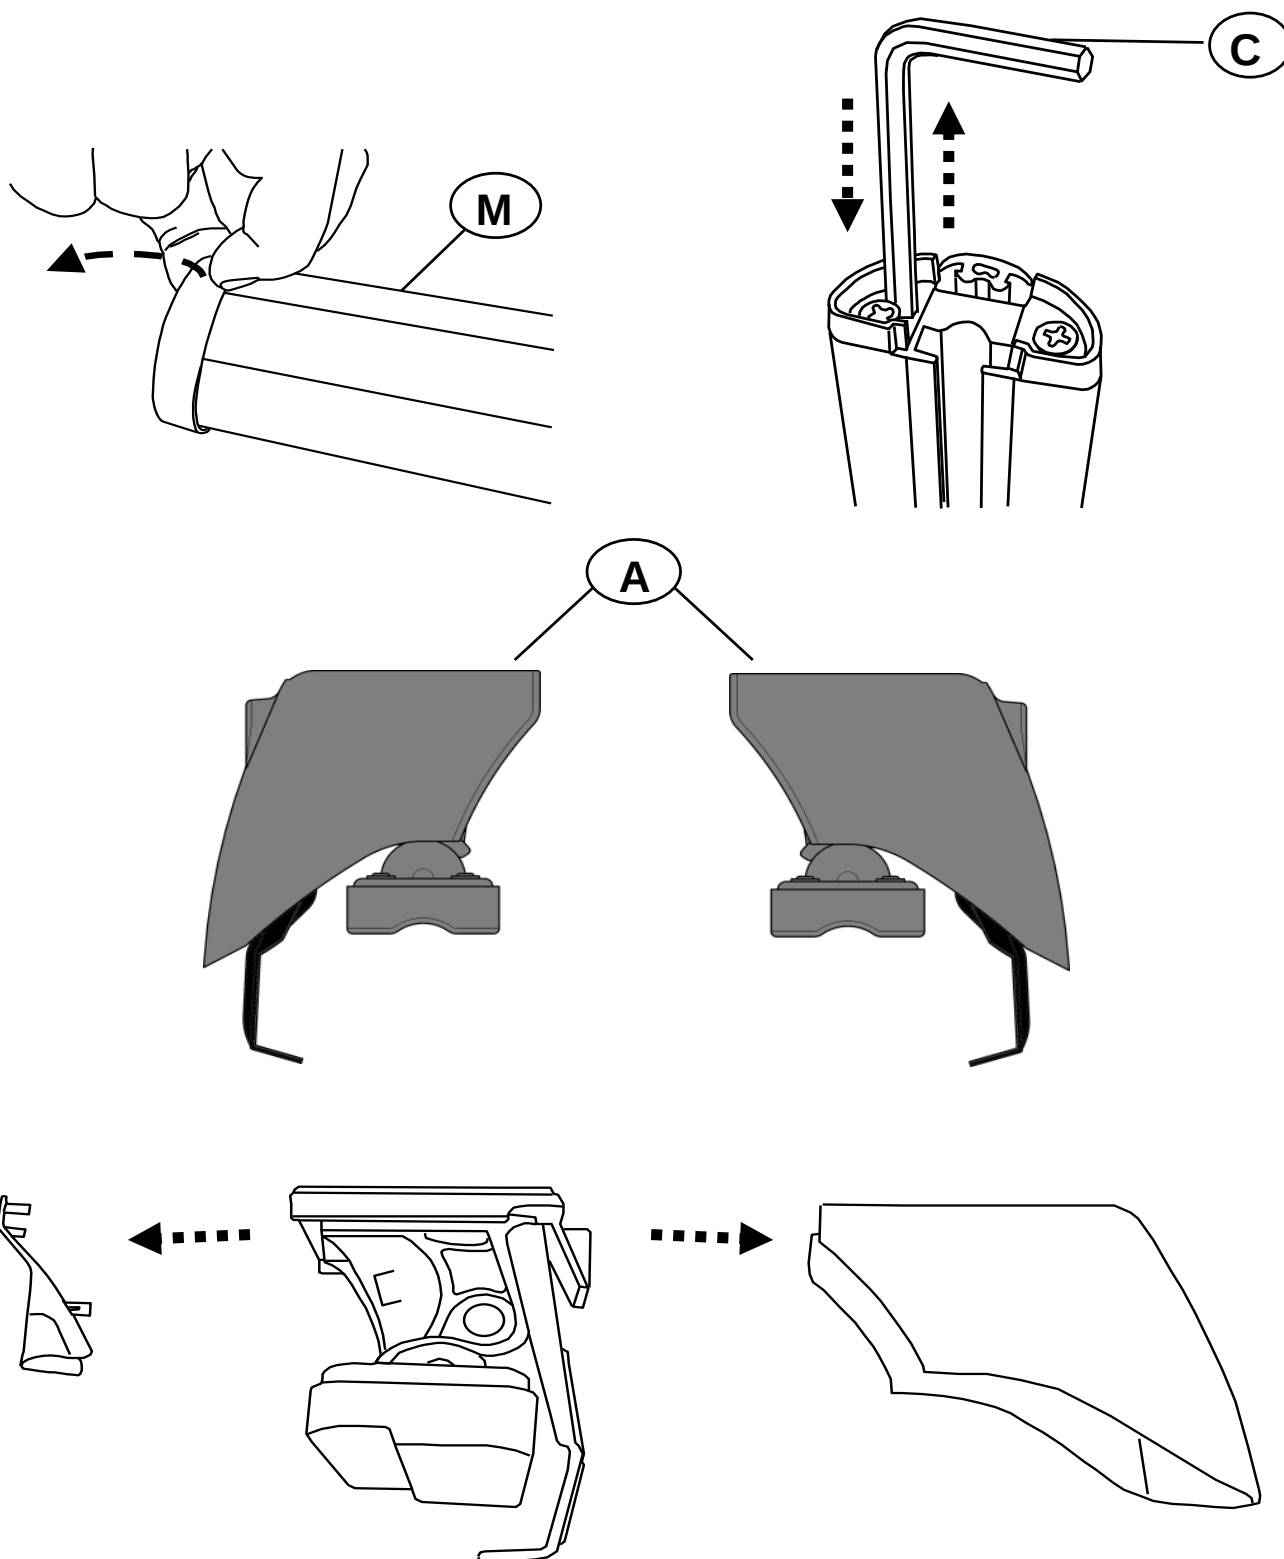









M

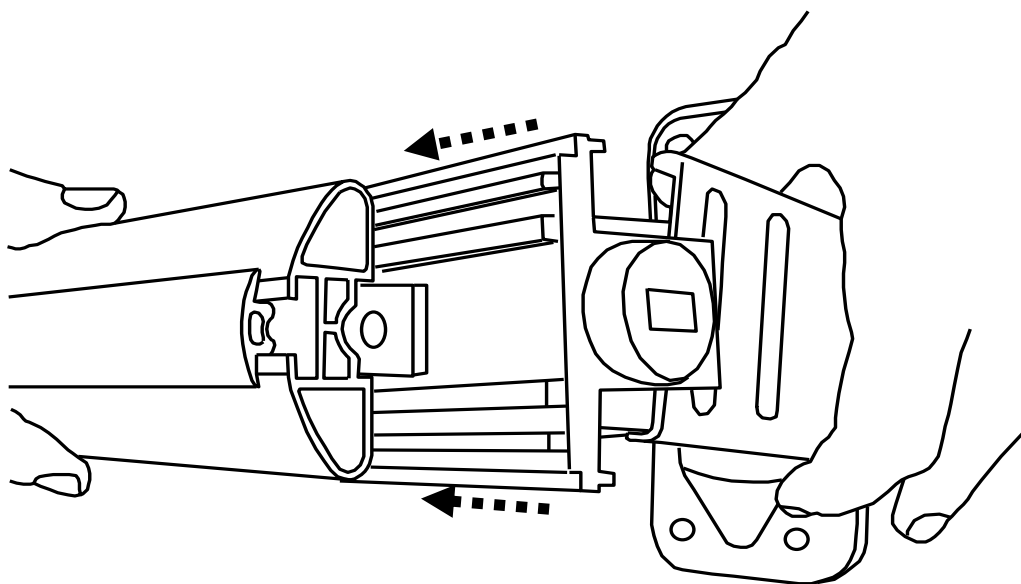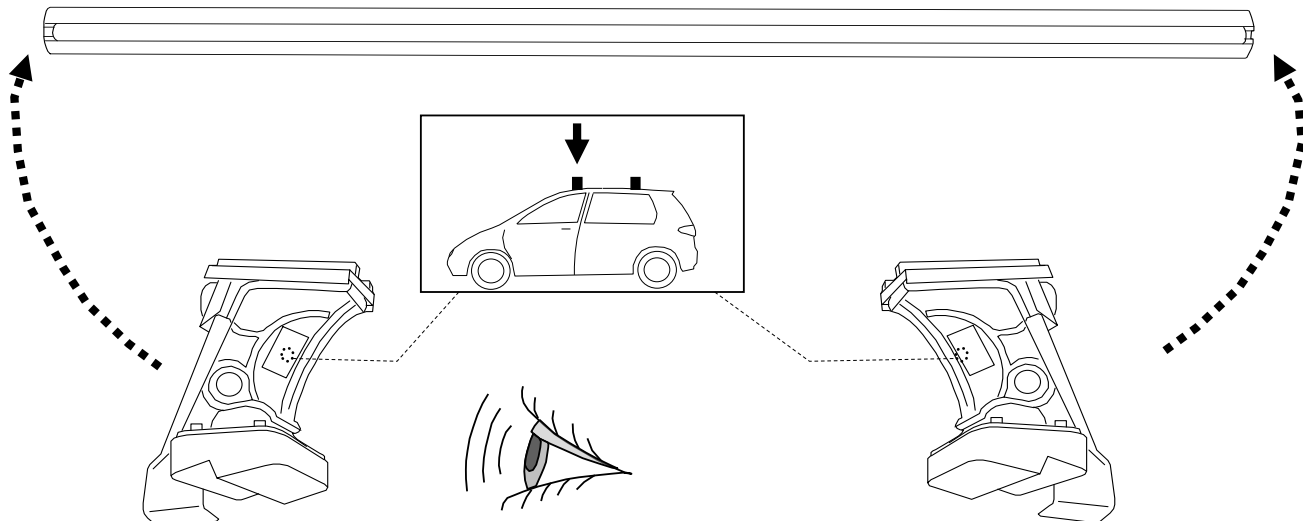


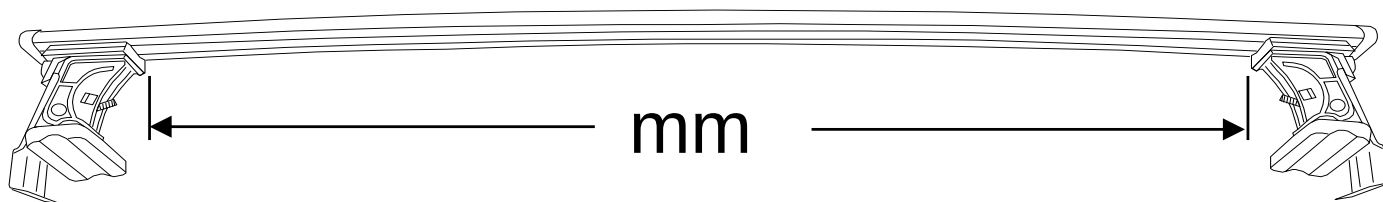


			R	mm
BMW	X2	2018 >	R= 37	1150
KIA	CEE'D	2019 >	R= 37	1050


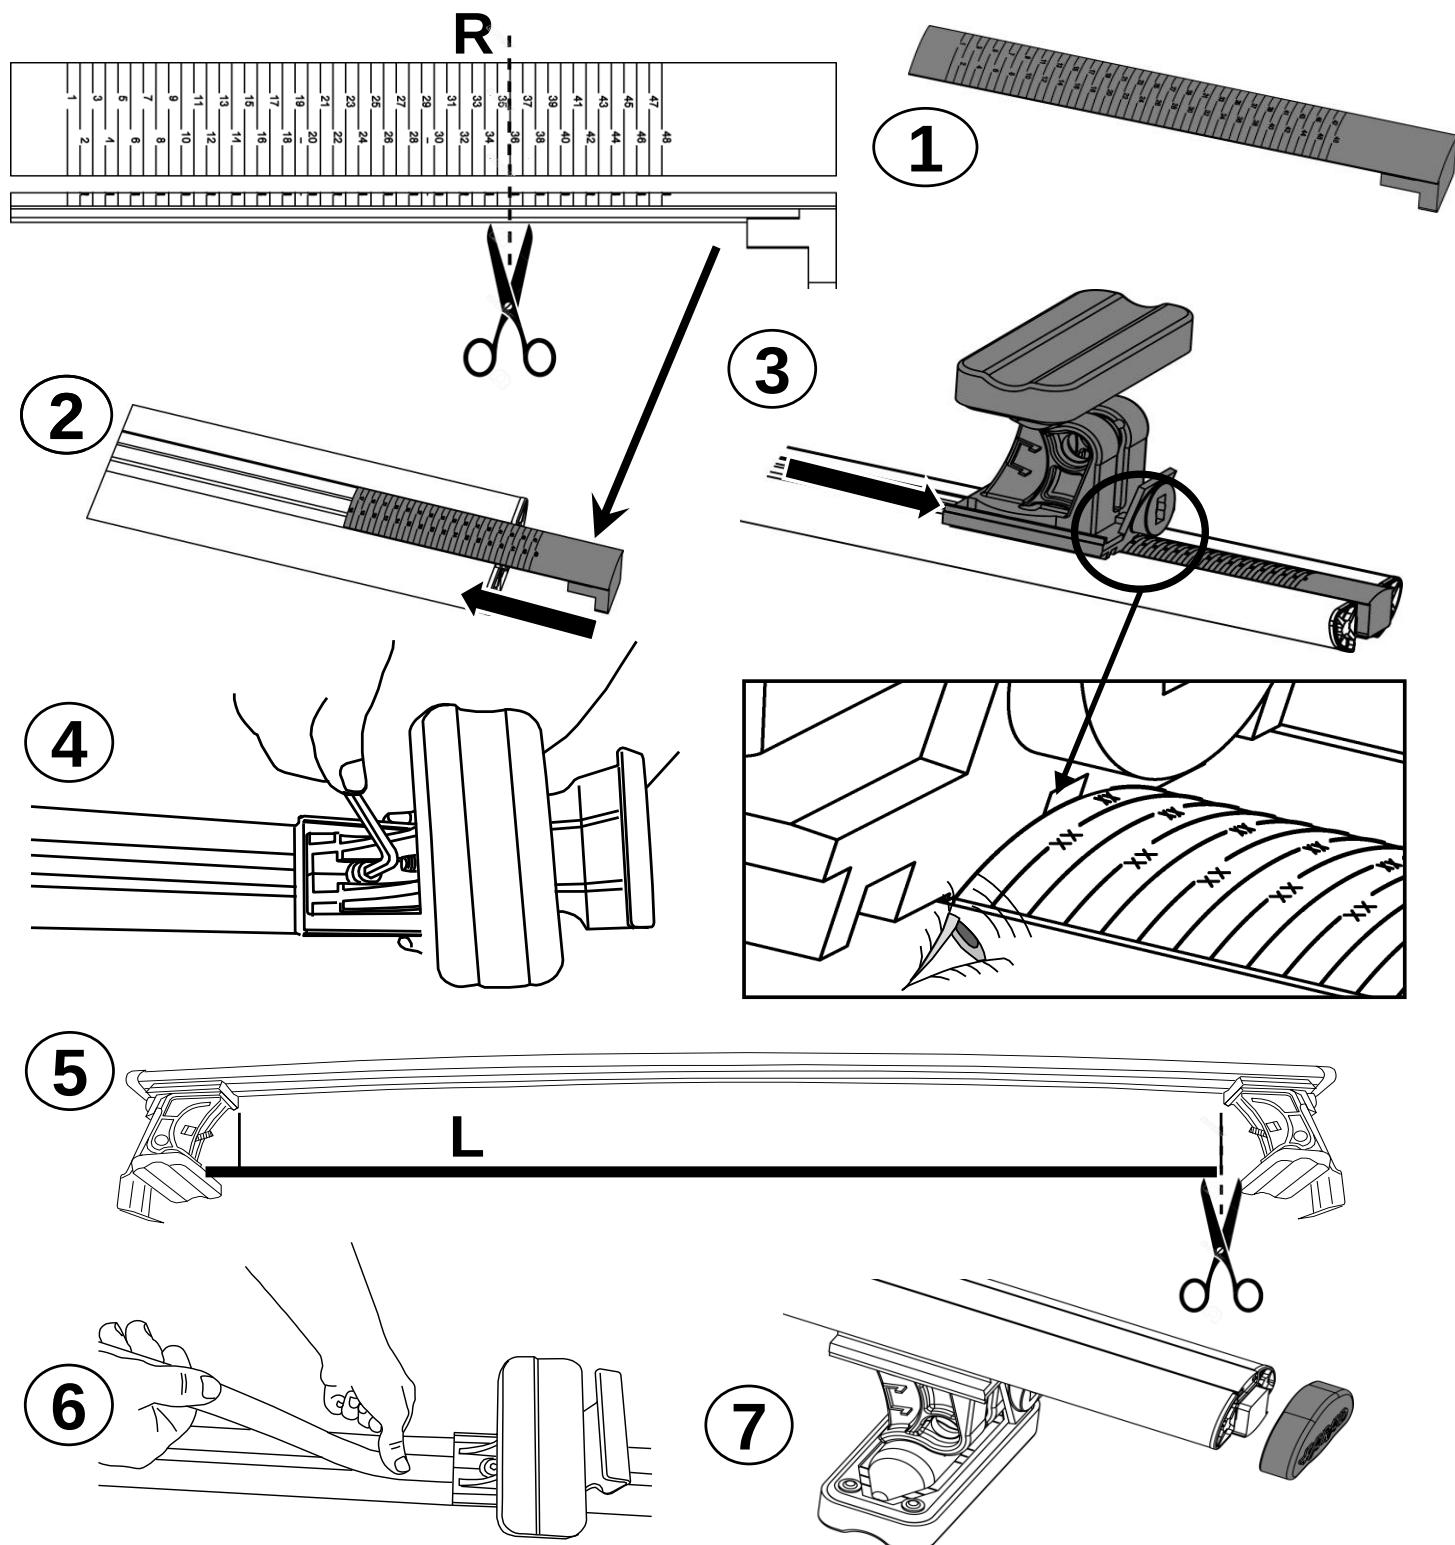


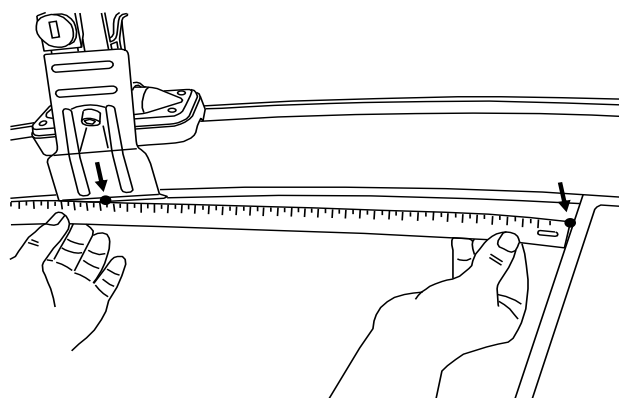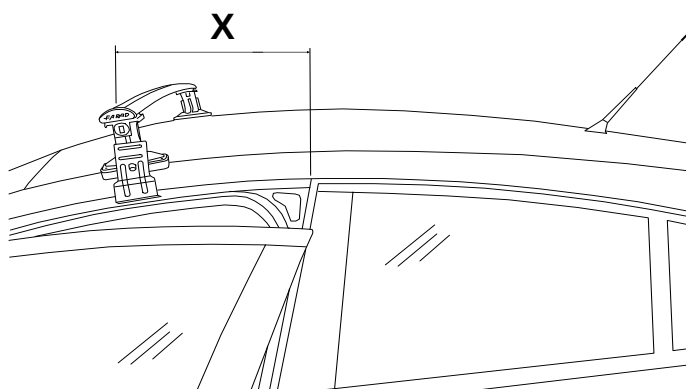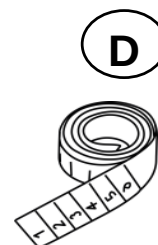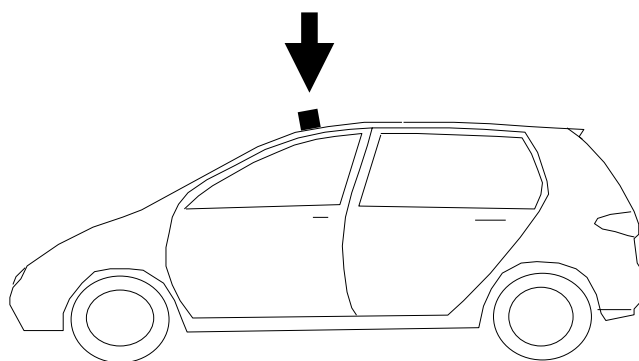


				X
BMW	X2	5	2018 >	X= 190
KIA	CEE'D	5	2019 >	X= 200





✓ **4 Nm**



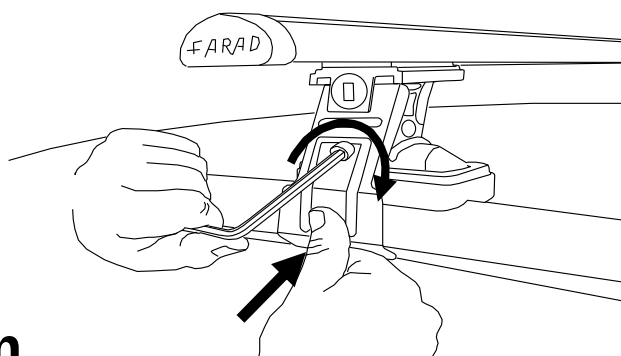



REV 001	14/05/2021	9 / 20
----------------	-------------------	---------------

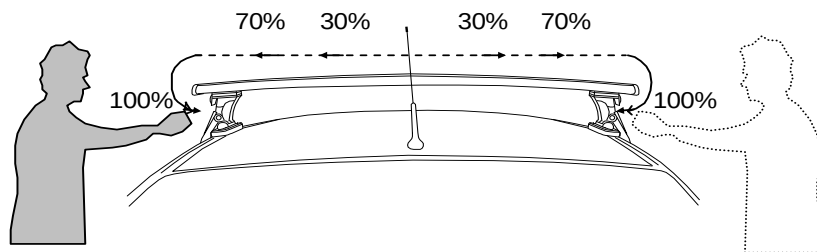

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

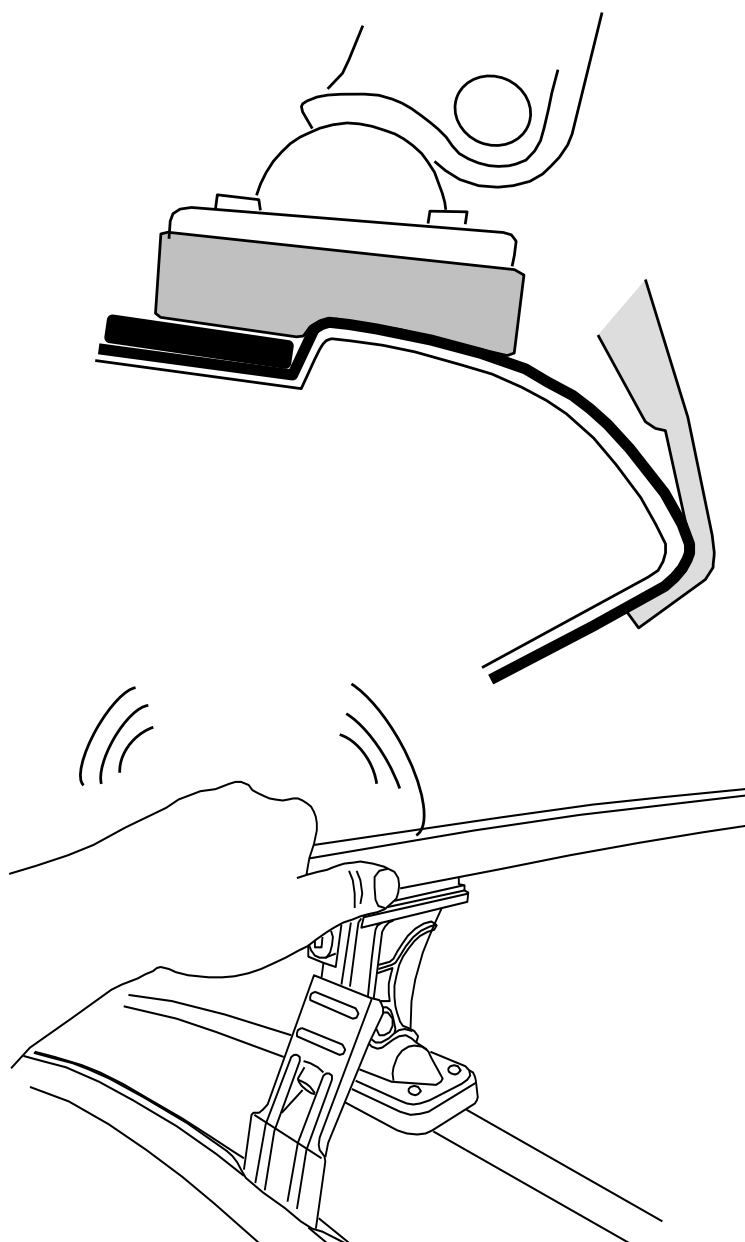

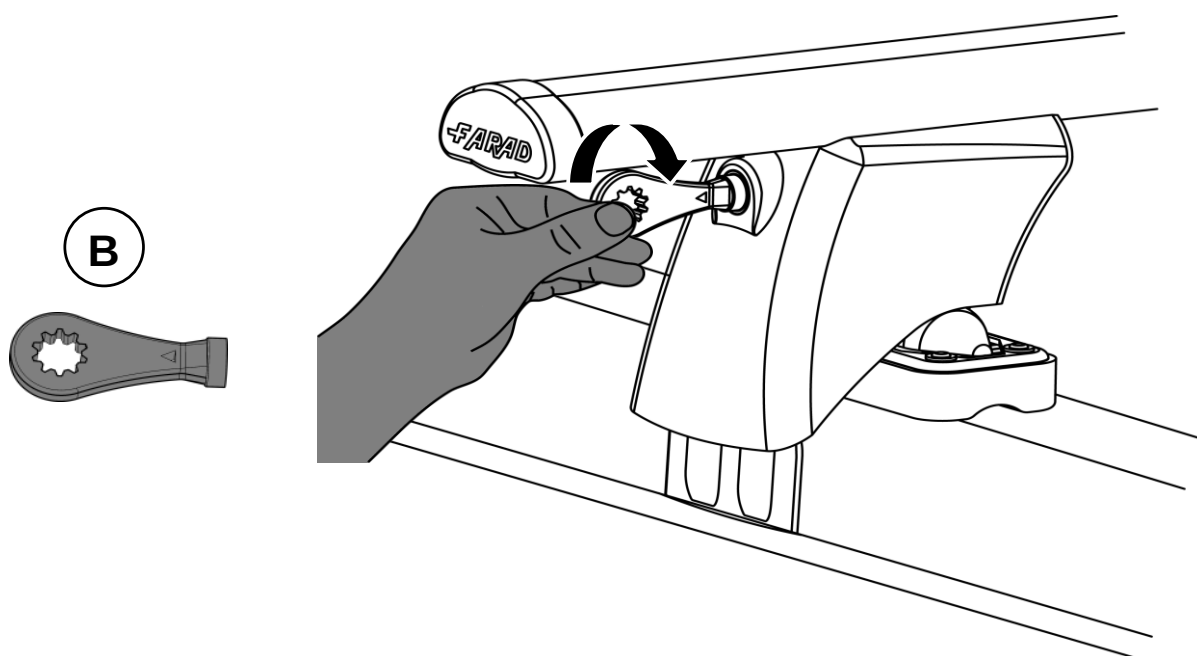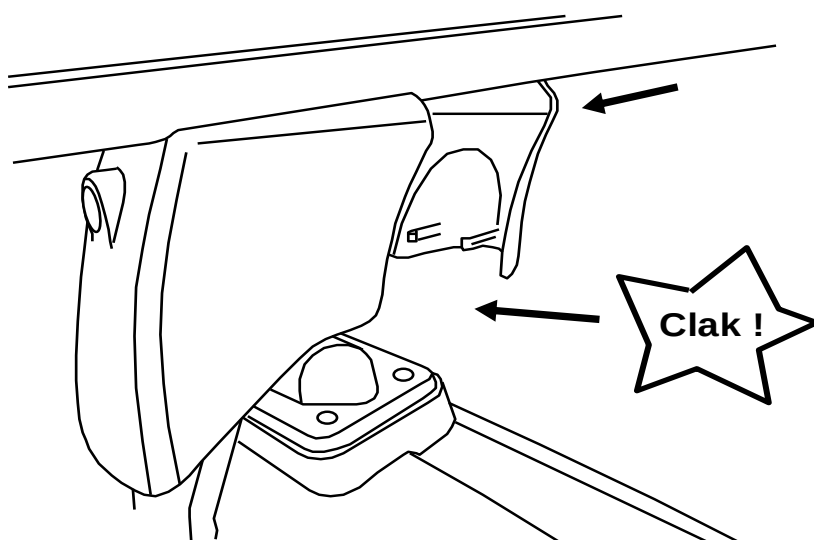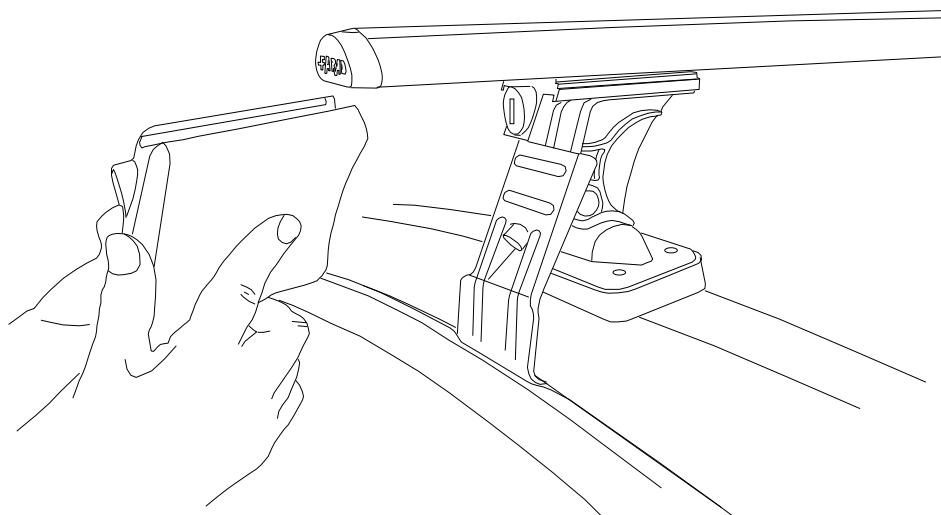

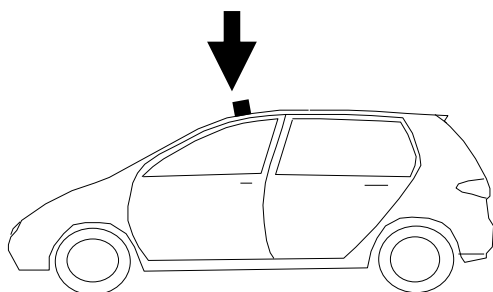

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

F Fixation Barre Arriere

PL Montaż Bagażnika Bazowego Przedniego


GB Fitting Rear Roof Bar



SWE Montering Främre Lasthållaren


E Fijación Barra Trasera

NL Montage Achterste Dakdrager

D Montage Heckdachträgers

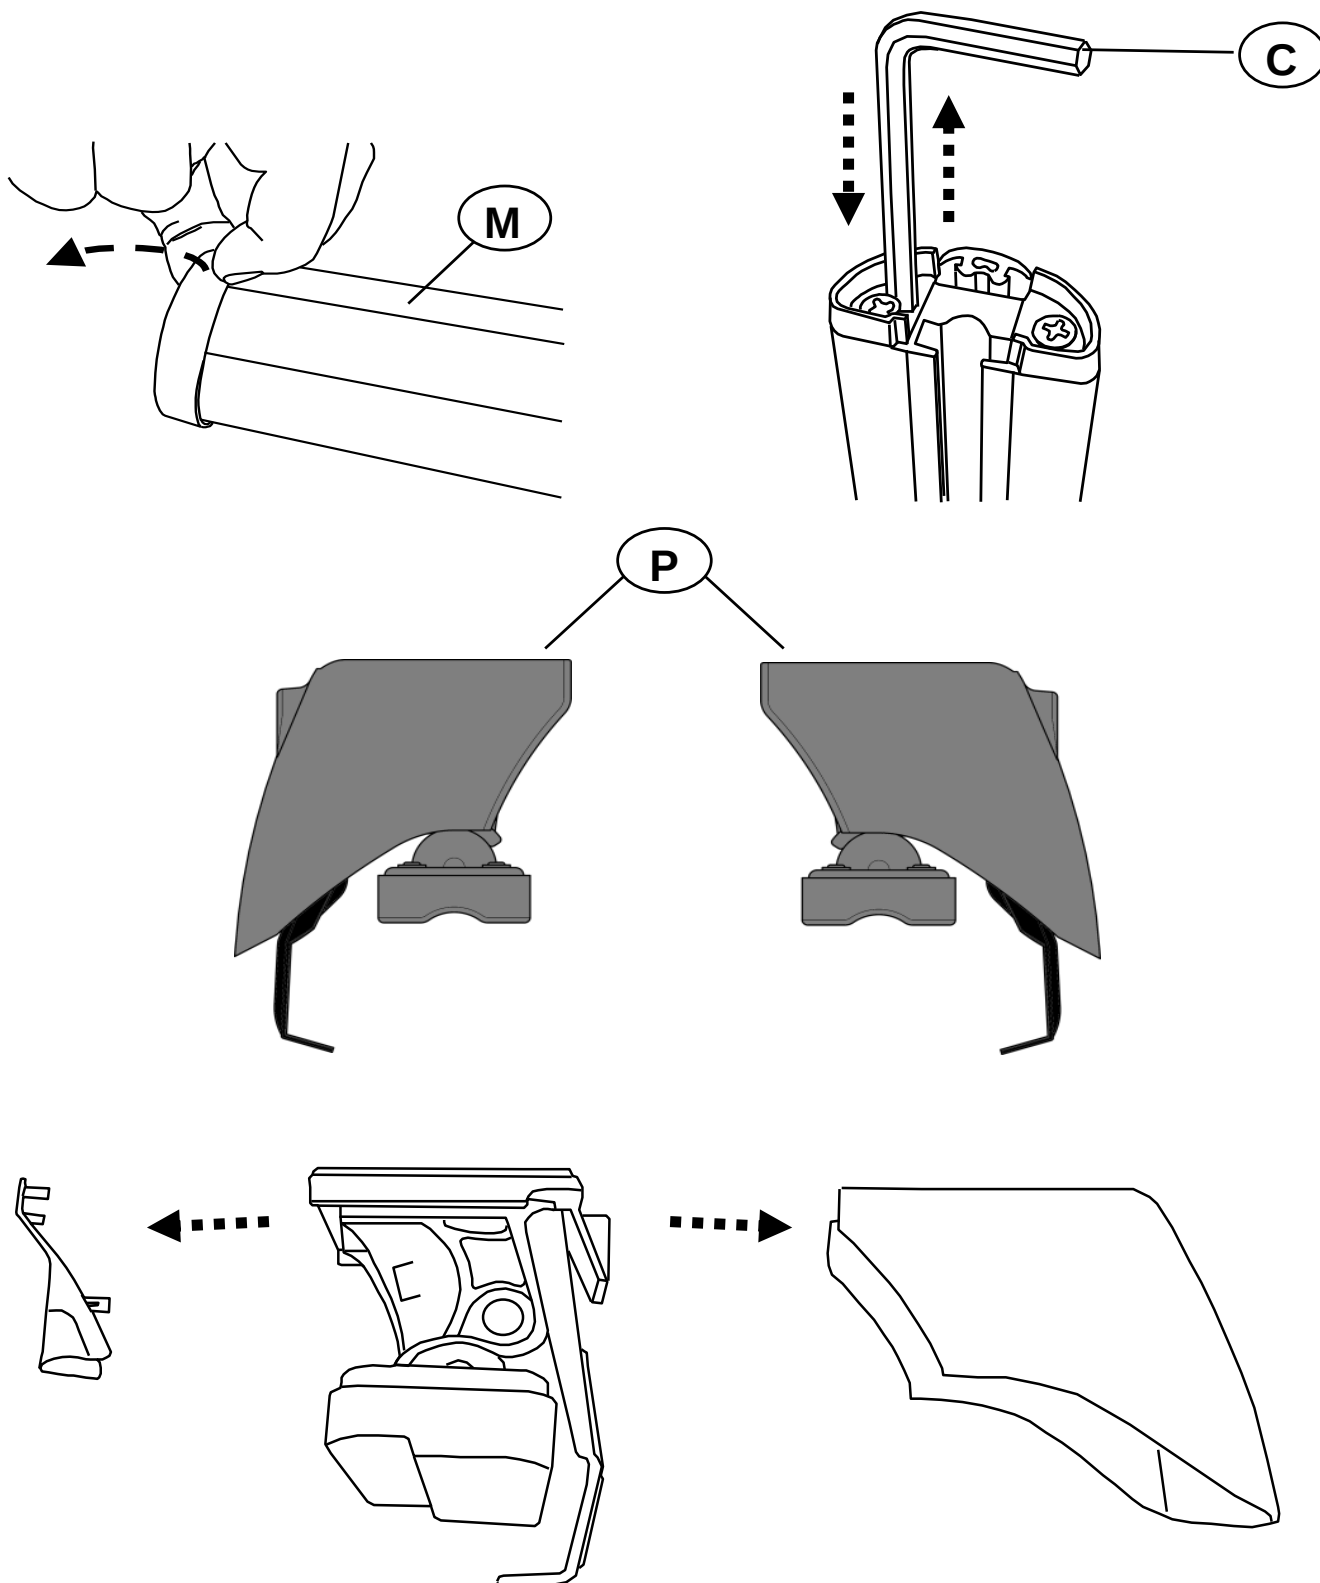


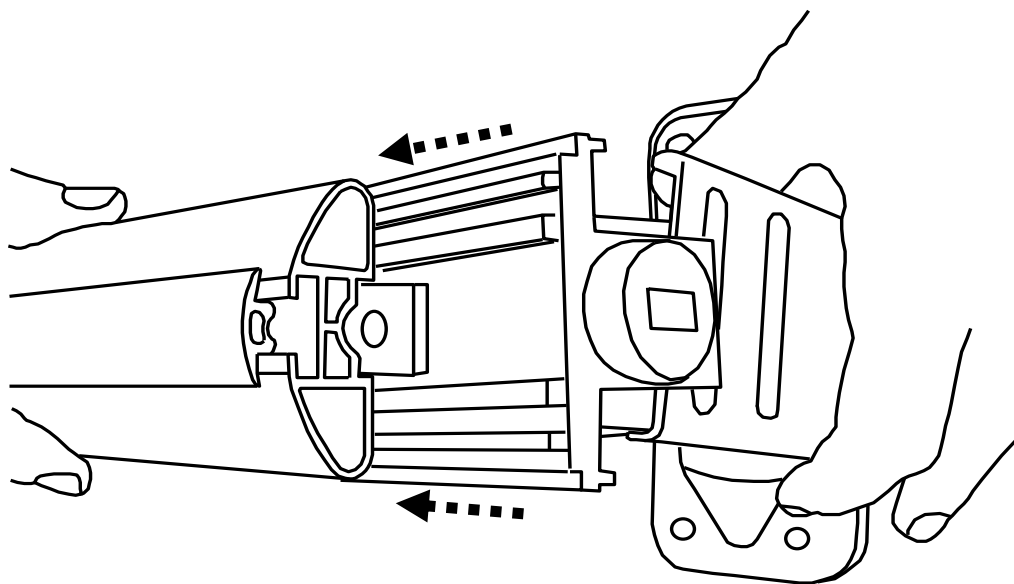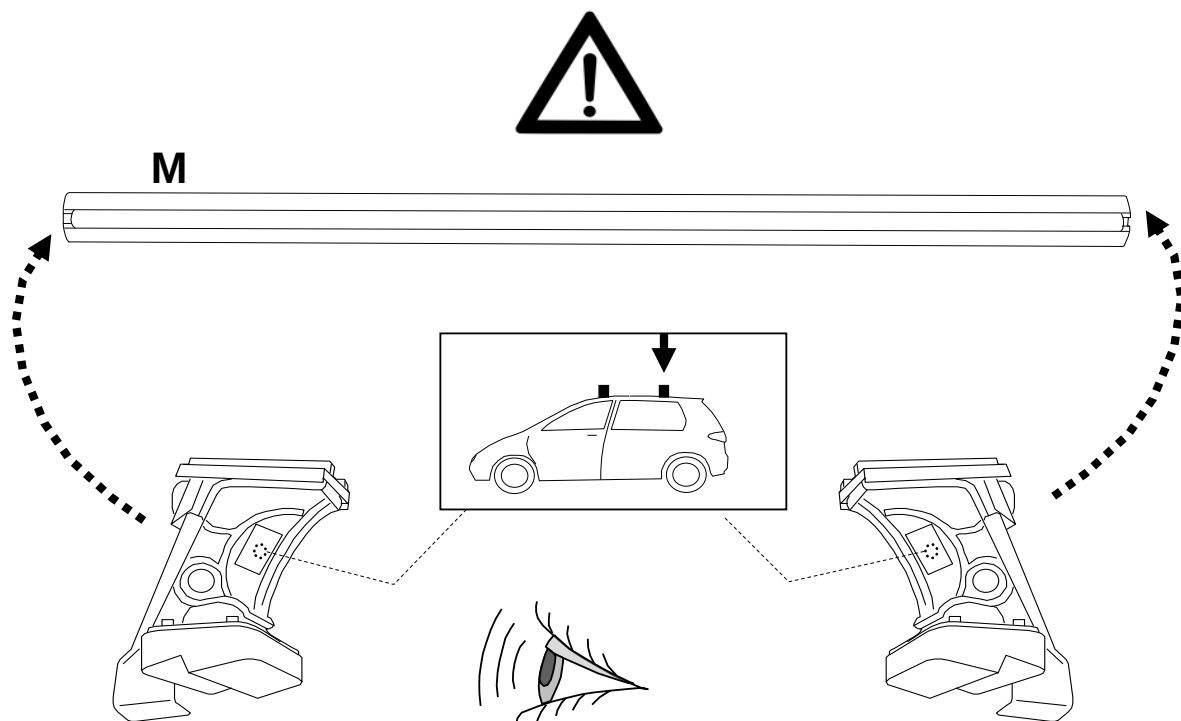


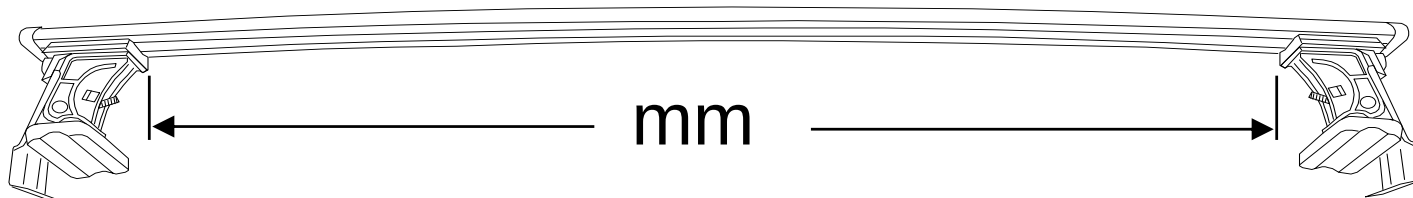


			R	mm
BMW	X2	2018 >	R= 18	1055
KIA	CEE'D	2019 >	R= 23	980


R R





1

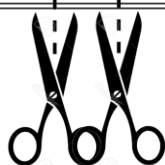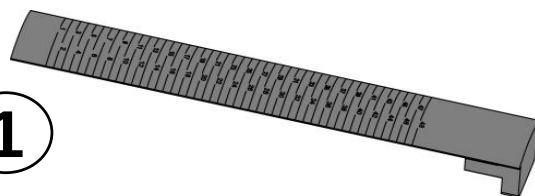


3

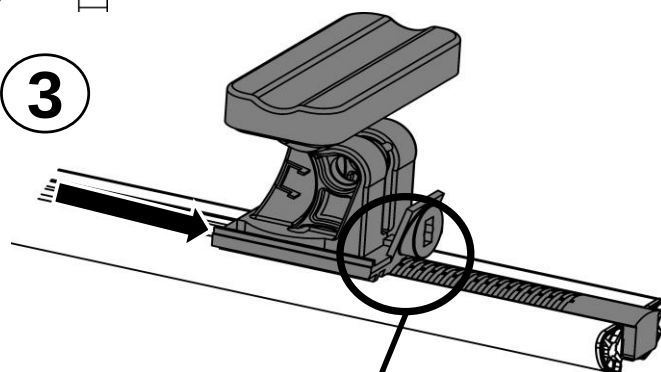


4

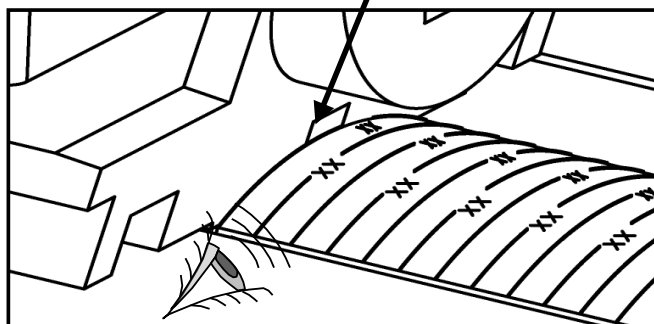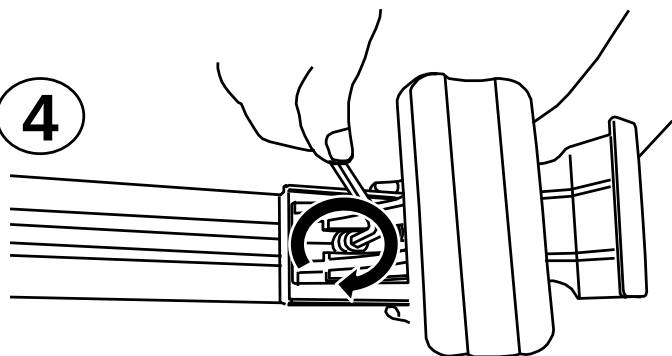


5



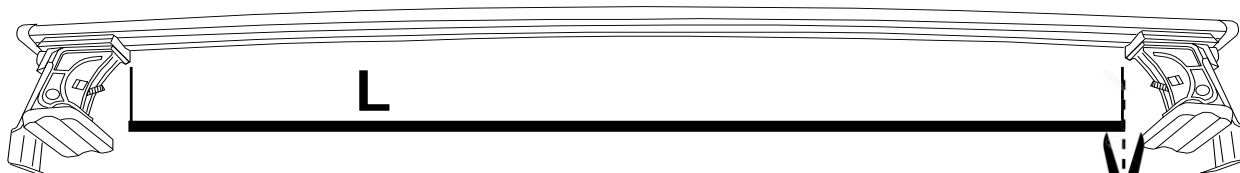


6

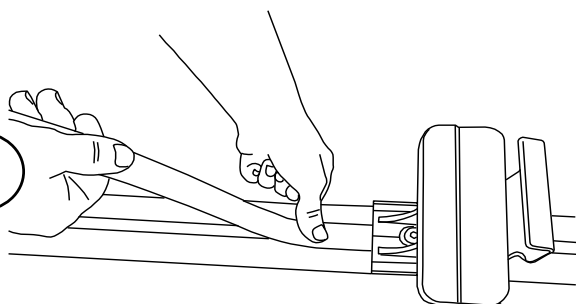


7


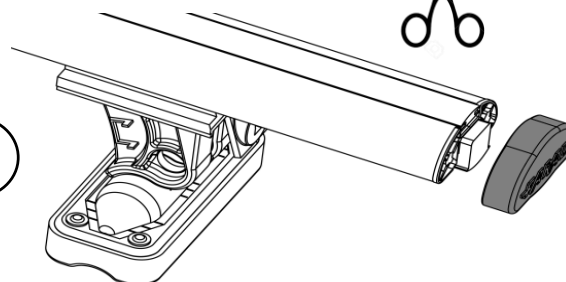


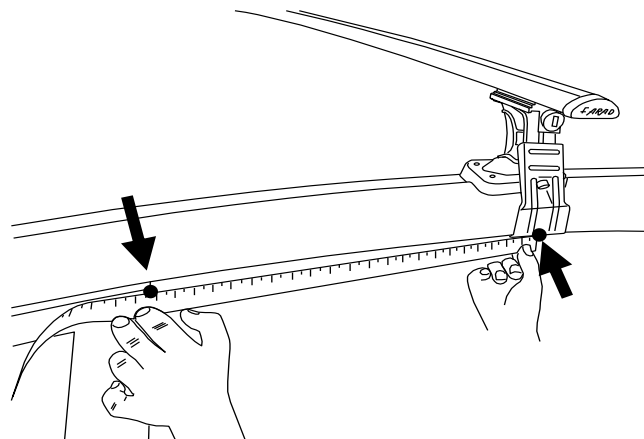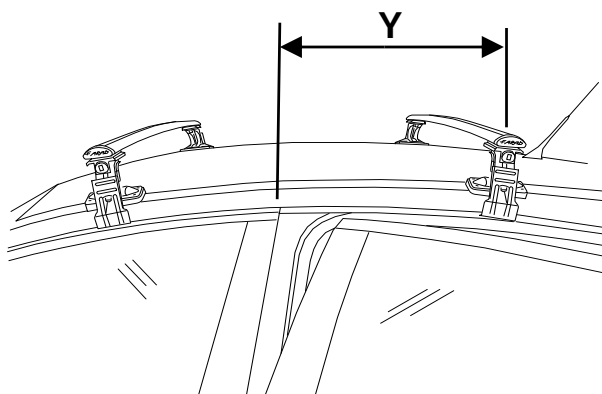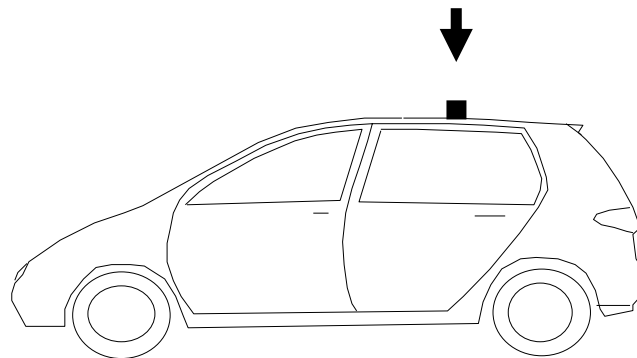


				Y
BMW	X2	5	2018 >	Y= 500
KIA	CEE'D	5	2019 >	Y= 450









✓ 4 Nm

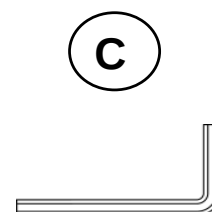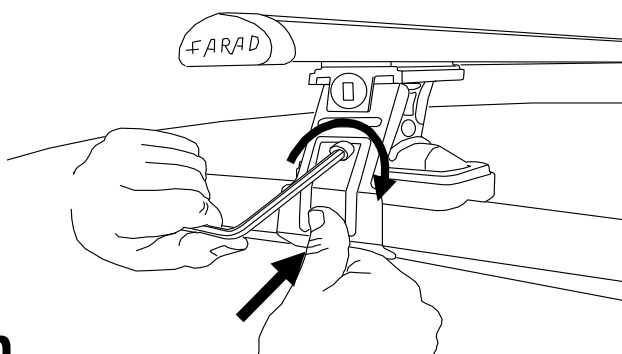


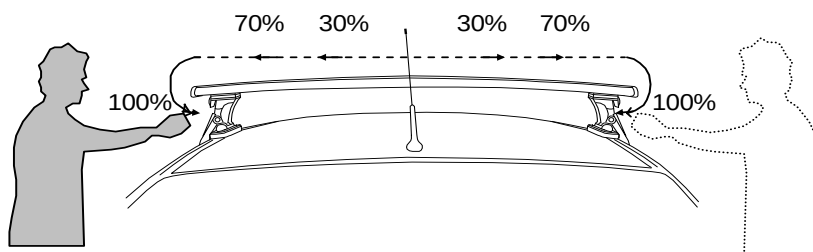

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

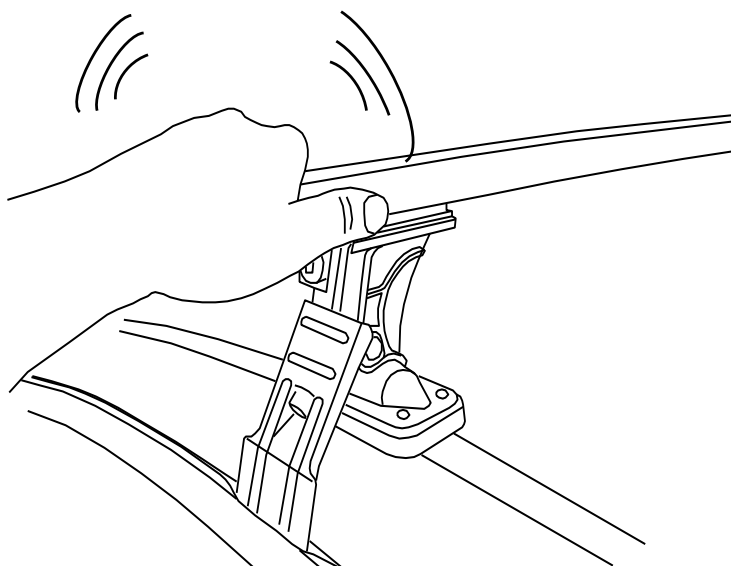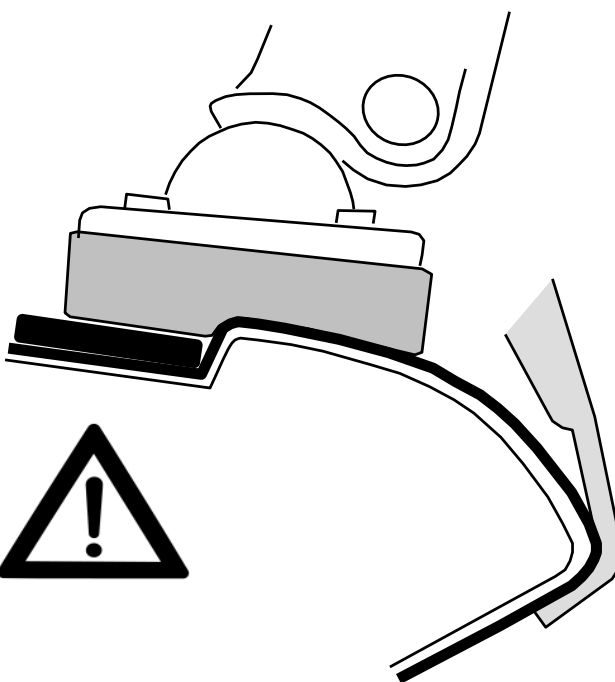

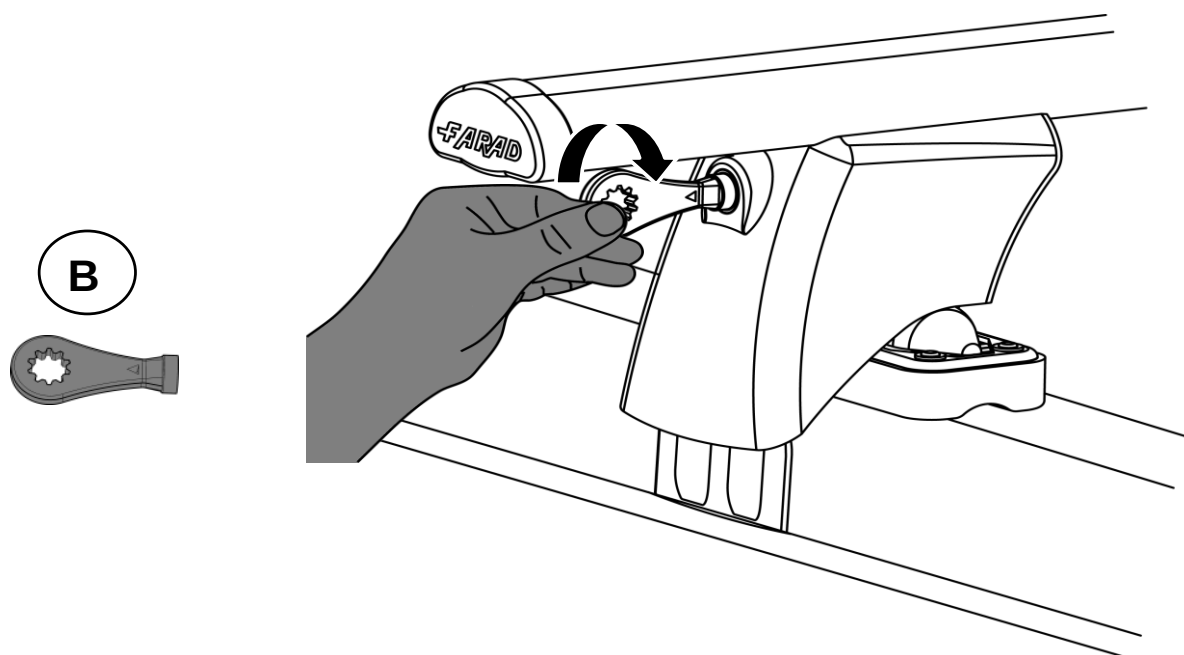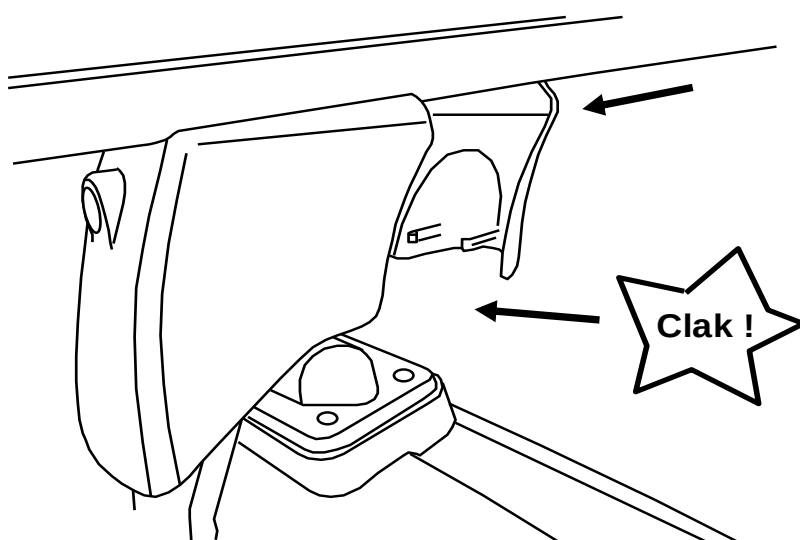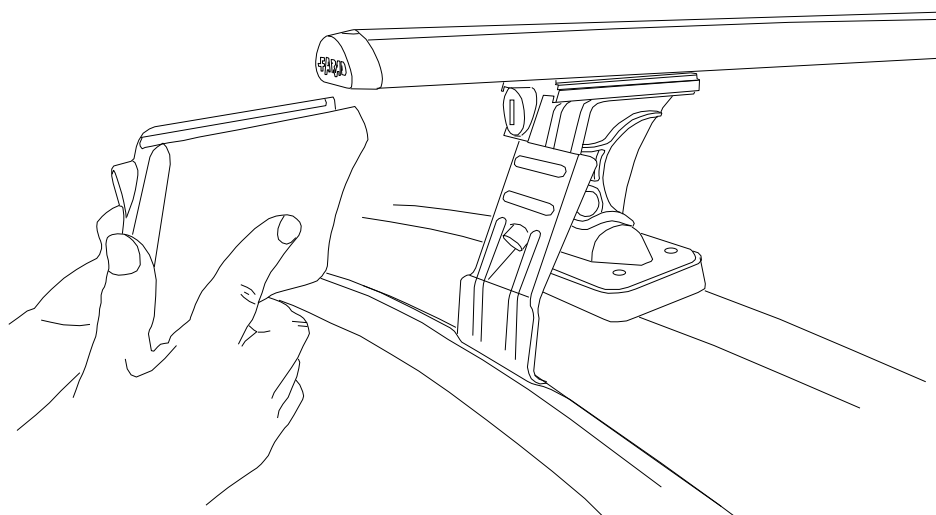

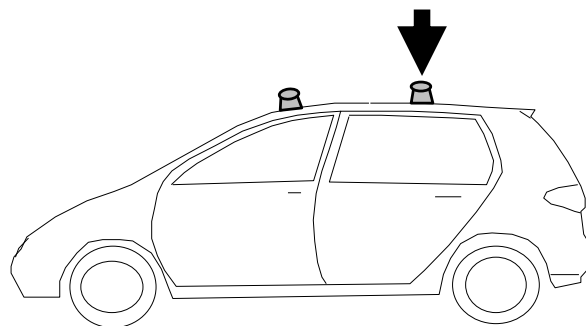


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

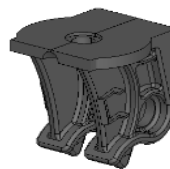

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13




SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

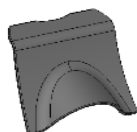


INVOLUCRO POST.
90341 / 9

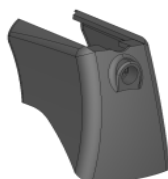

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

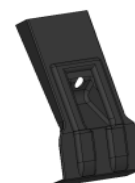

PALETTA
90341 / 4



BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in italy

tel. 011 9713719 - n° verde 800984229

www.faradworld.com