



***FARAD*BARS[®]**

made in Italy

BS 034 - 1



KIA PICANTO 2011-2017
KIA PICANTO 2004-2011
HYUNDAI I10 2008-2013
HYUNDAI I10 2014 >



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcje wbudowania

D Einbauanleitung

GB Fitting instructions

E Instrucciones de montaje


NL Inbouwhandleiding

SWE Montageanvisnin

KIT BS


Nr 2

A

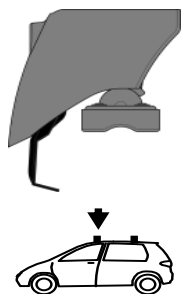

Nr 2

P

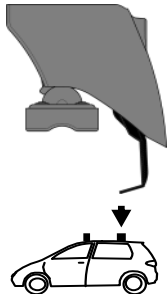

Nr 2

B



Nr 1

C



Nr 1

D



+

KIT ALU


Nr 2

L














Nr 2


M






=


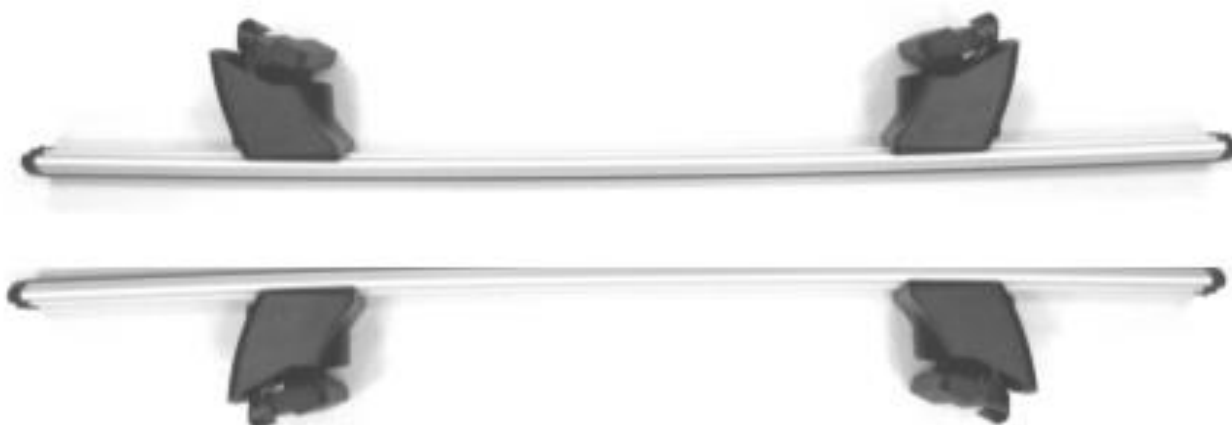


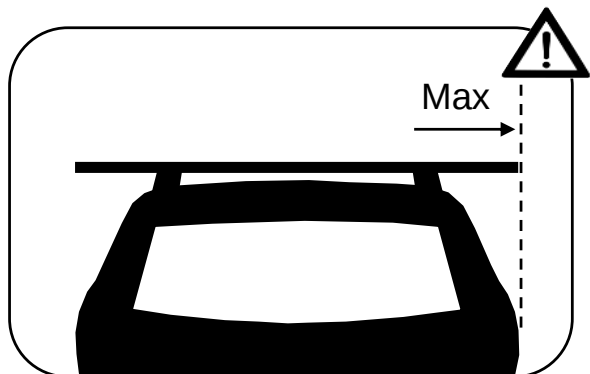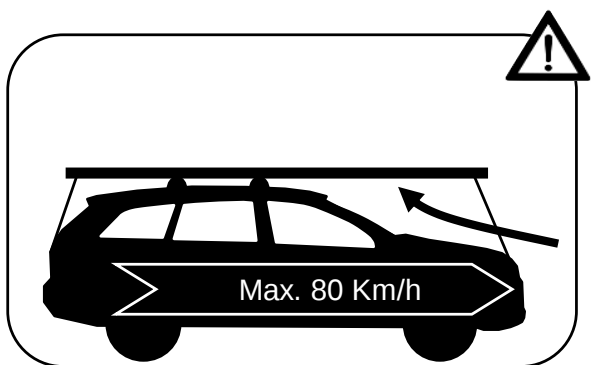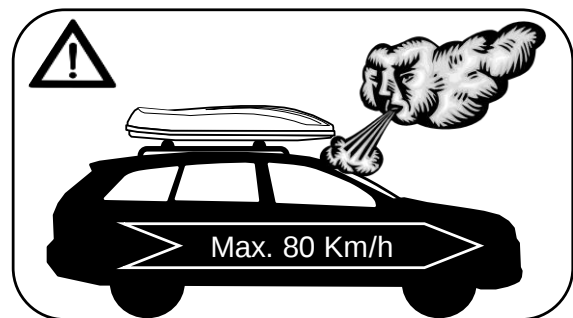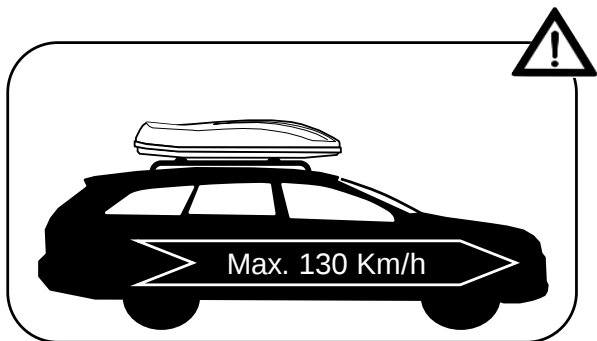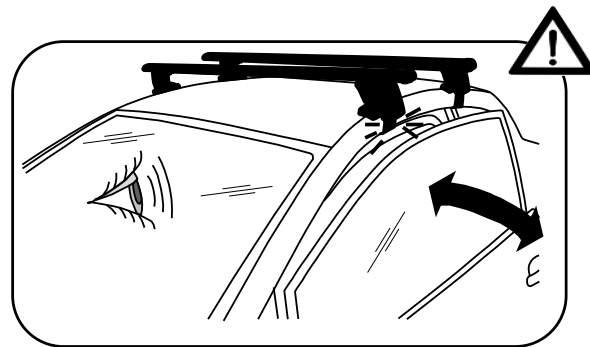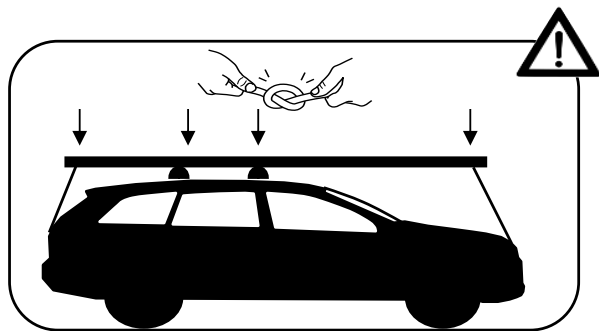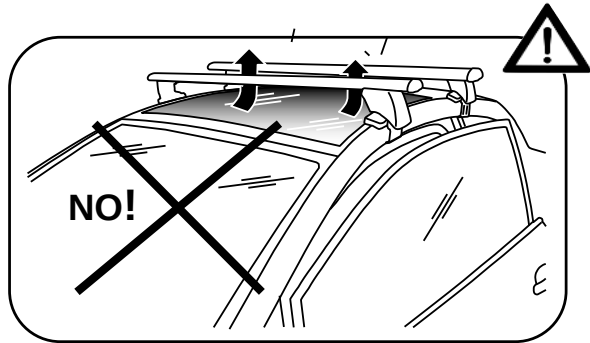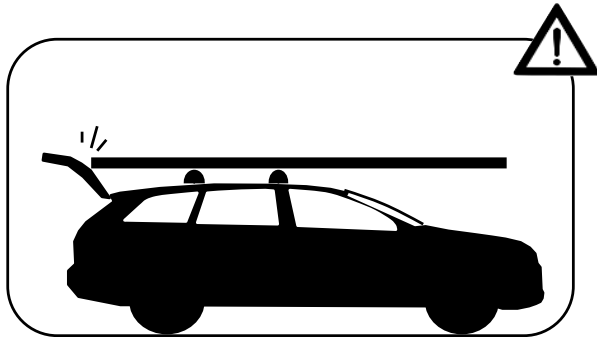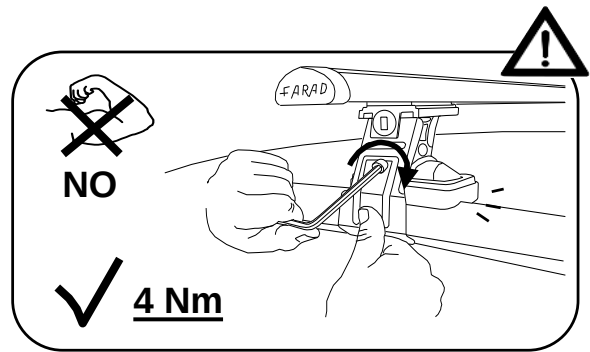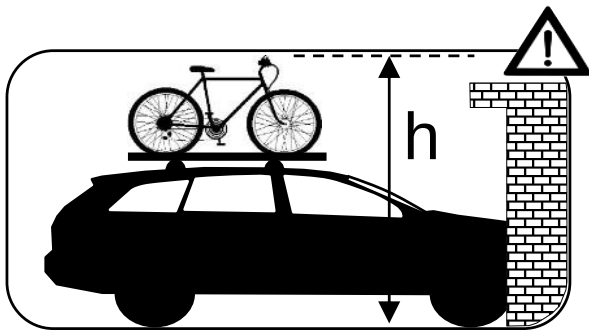

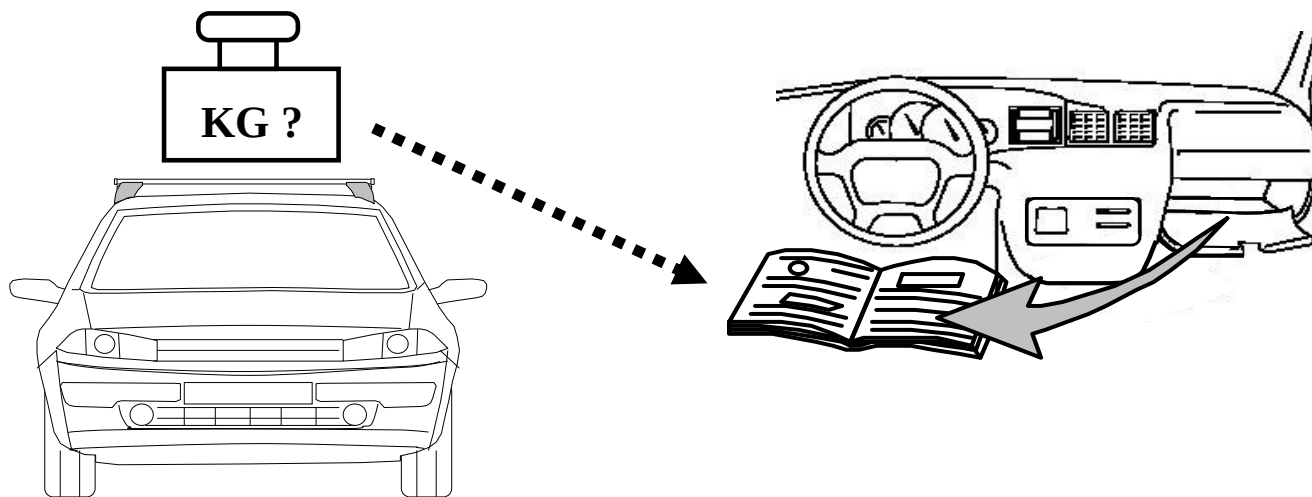


- | | |
|--|--|
| I Controllare carico del tetto sul manuale dell'auto | F vérifier le chargement manuel du toit de la voiture |
| PL Sprawdzić ładowność dachu w instrukcji | D überprüfen Sie die manuelle Beladung der Autodach |
| GB Check roof load capacity in car instruction | E comprobar la carga manual del techo del coche |
| NL check de handleiding belasting van het dak van de auto | SWE kontrollera manuell inläggning på taket av bilen |

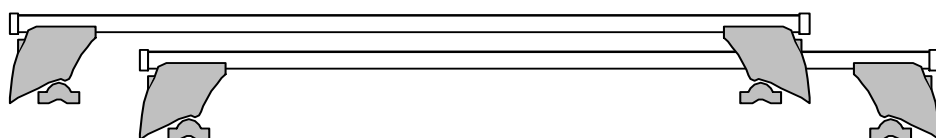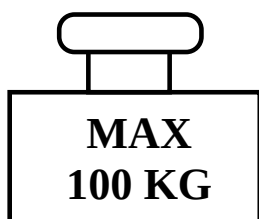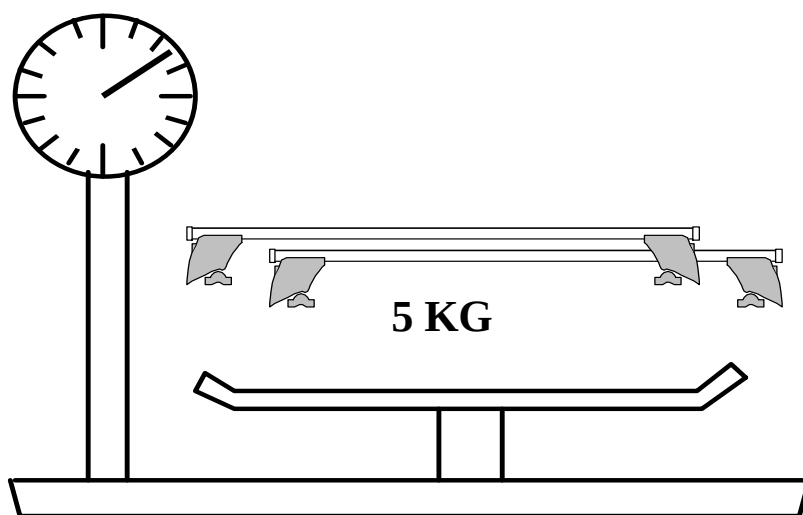

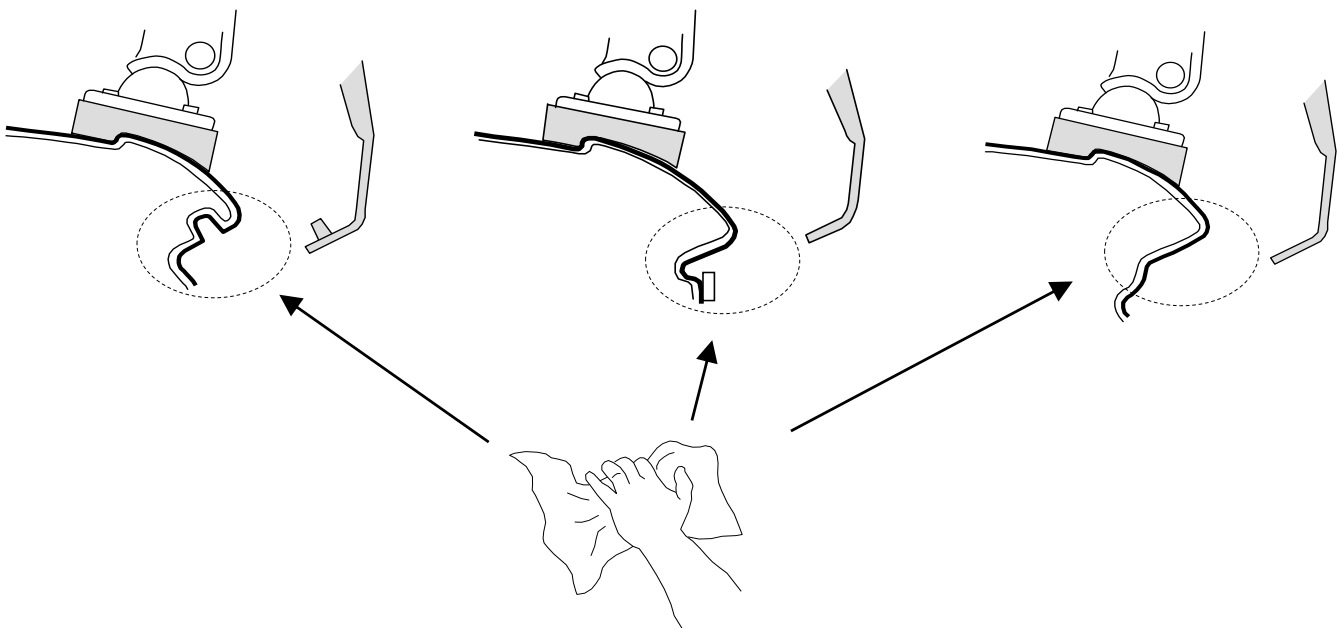
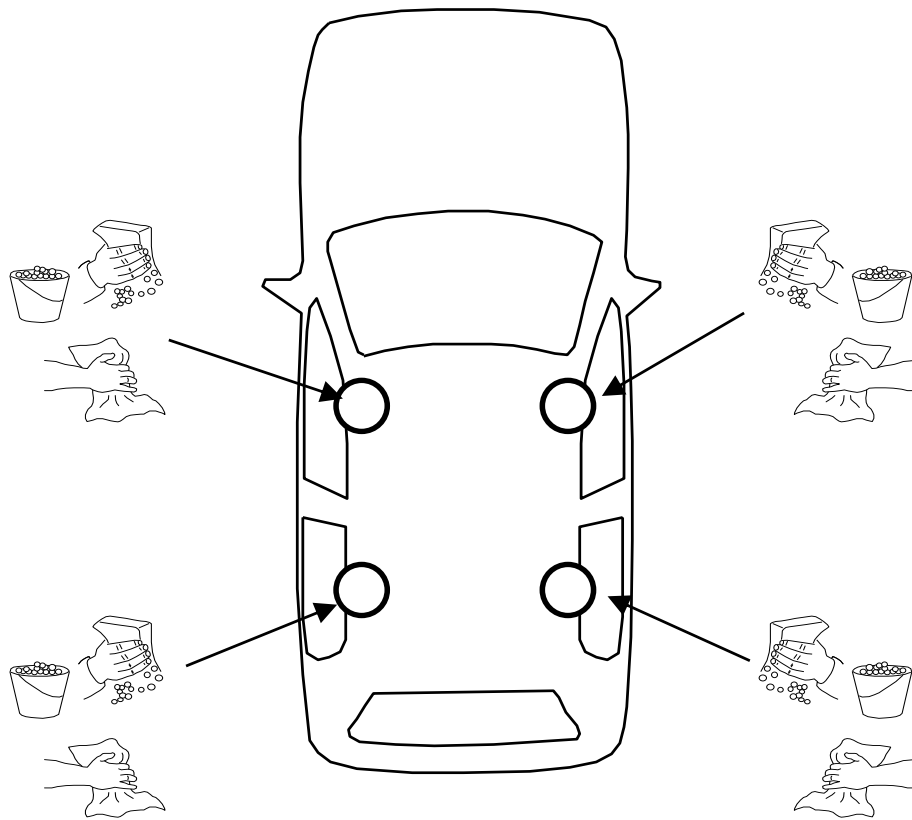



I	Montaggio Barra Anteriore	F	Fixation Barre Avant
PL	Montaż Bagażnika Bazowego Tylnego	GB	Fitting Front Roof Bar
D	Montage Vorderes Dachträgers	NL	Montage Voorste Dakdrager
SWE	Montering Av Främre Lasthållaren	E	Fijación Barra Frontal


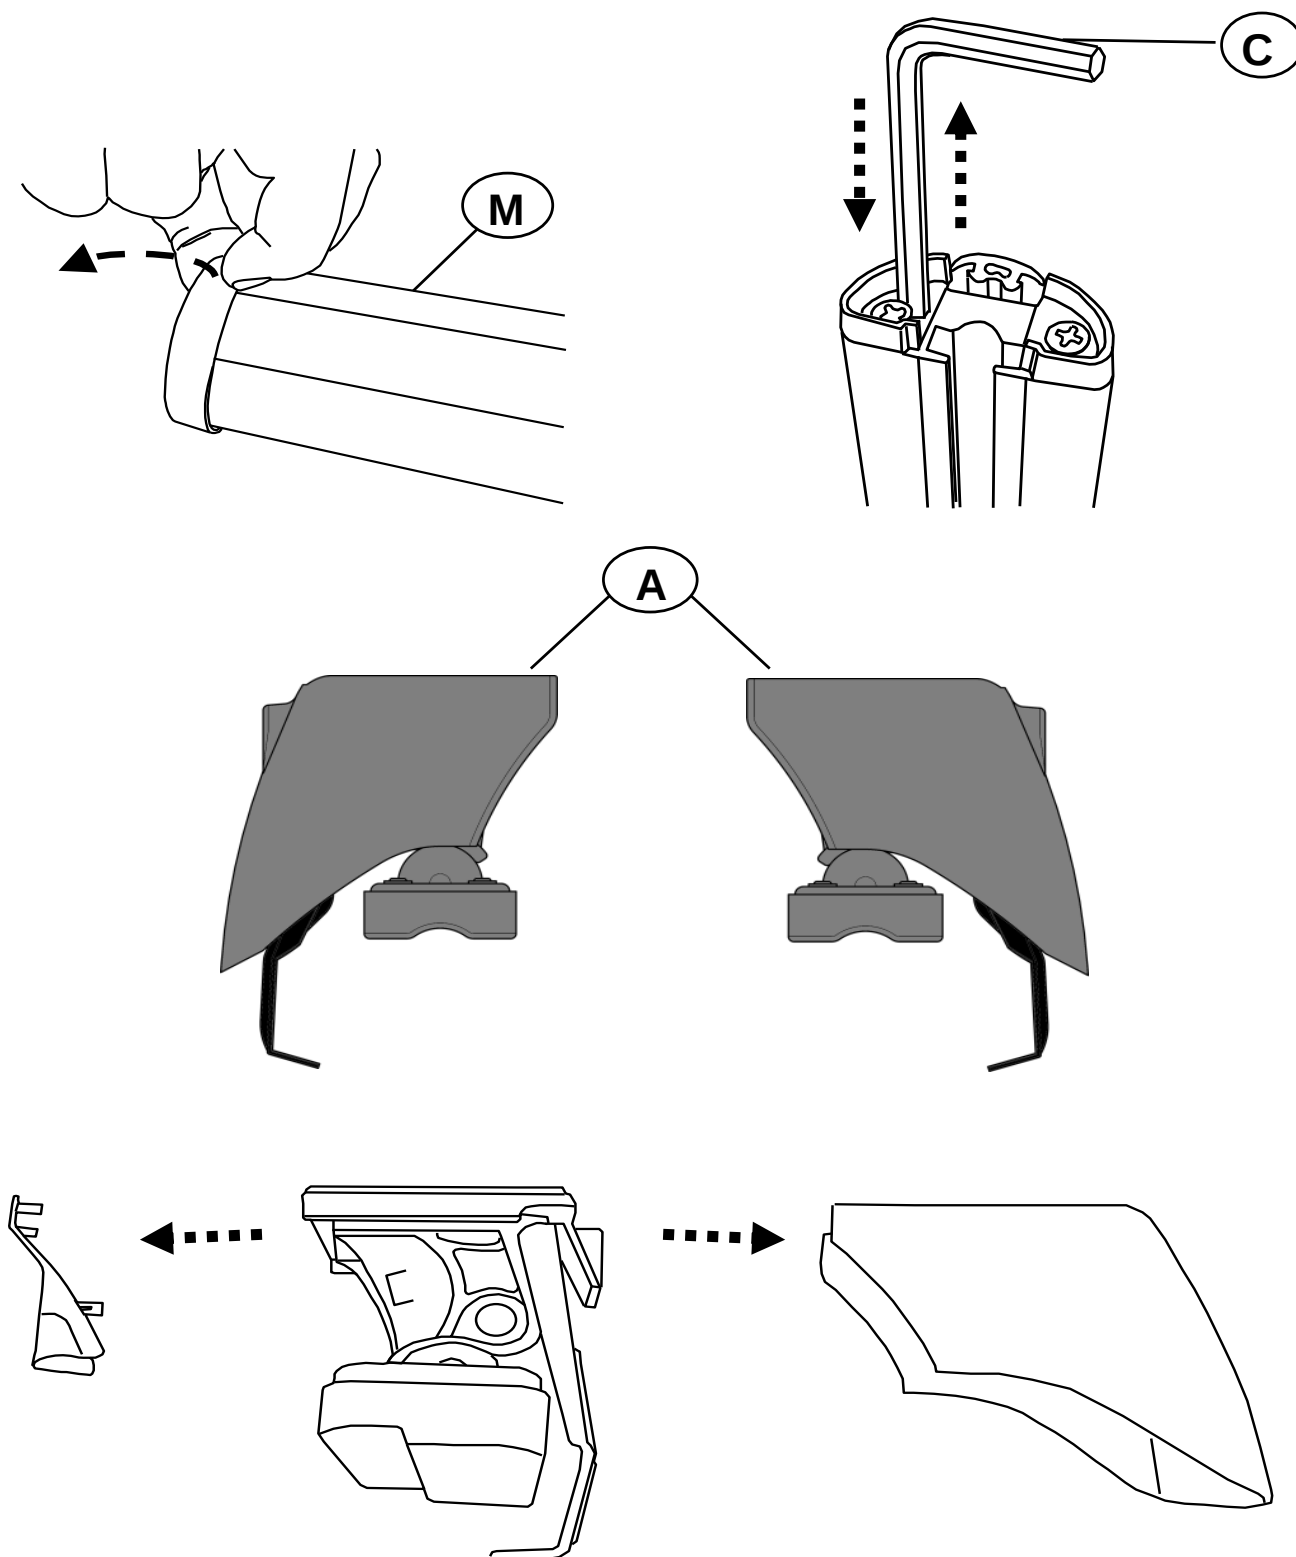








M

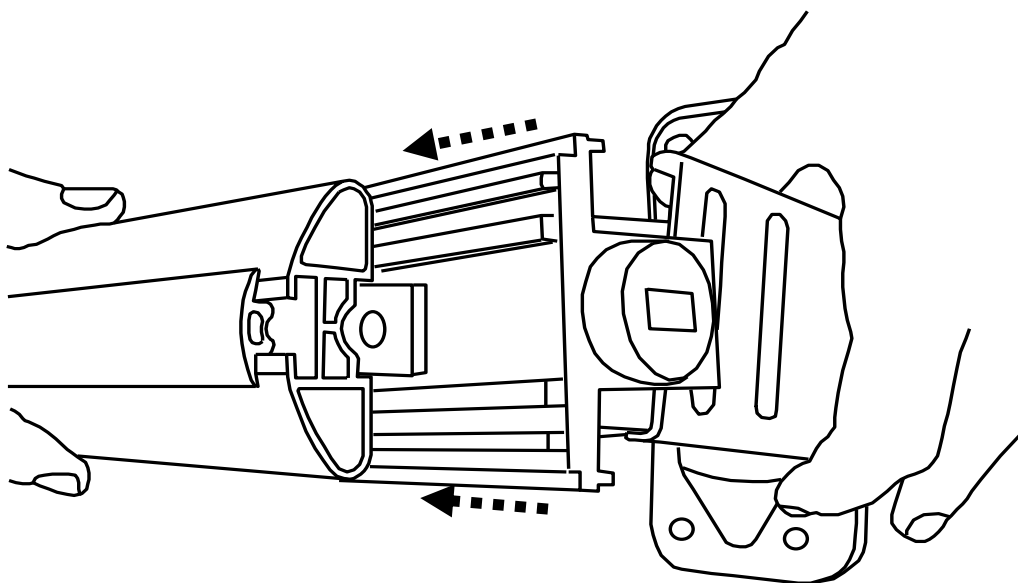
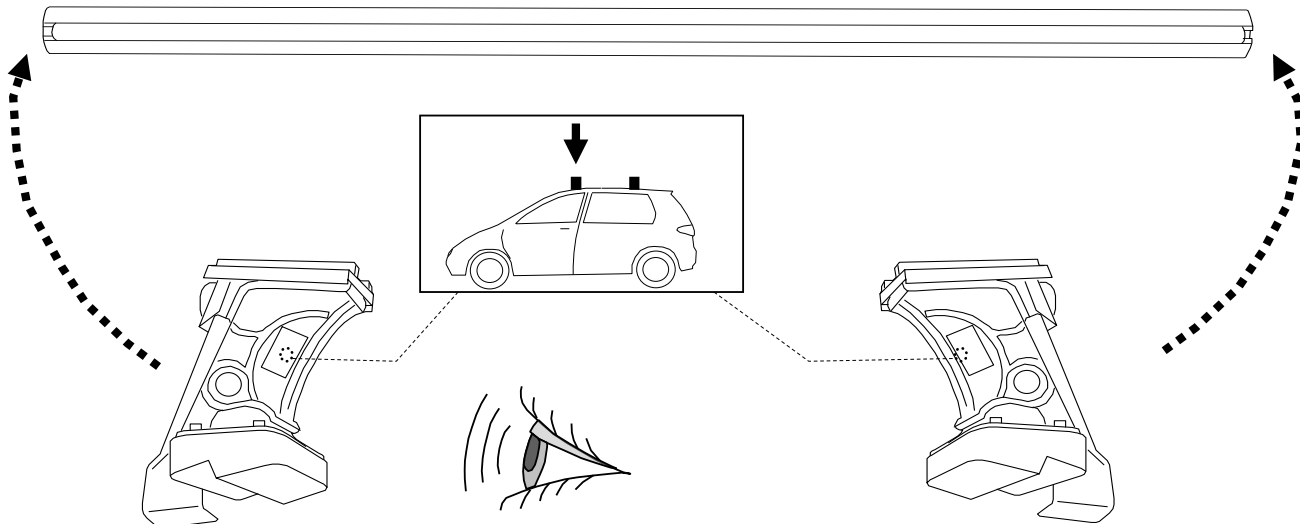



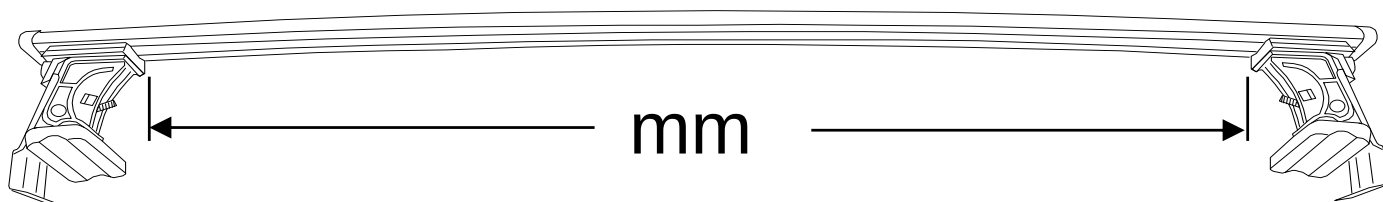


				R	mm
KIA	PICANTO	3	2011-2017	R= 33	925
KIA	PICANTO	5	2011-2017	R= 30	910
KIA	PICANTO	5	2004-2011	R= 31	920
HYUNDAI	I 10	5	2008-2013	R= 33	925
HYUNDAI	I 10	5	2014 >	R= 44	985

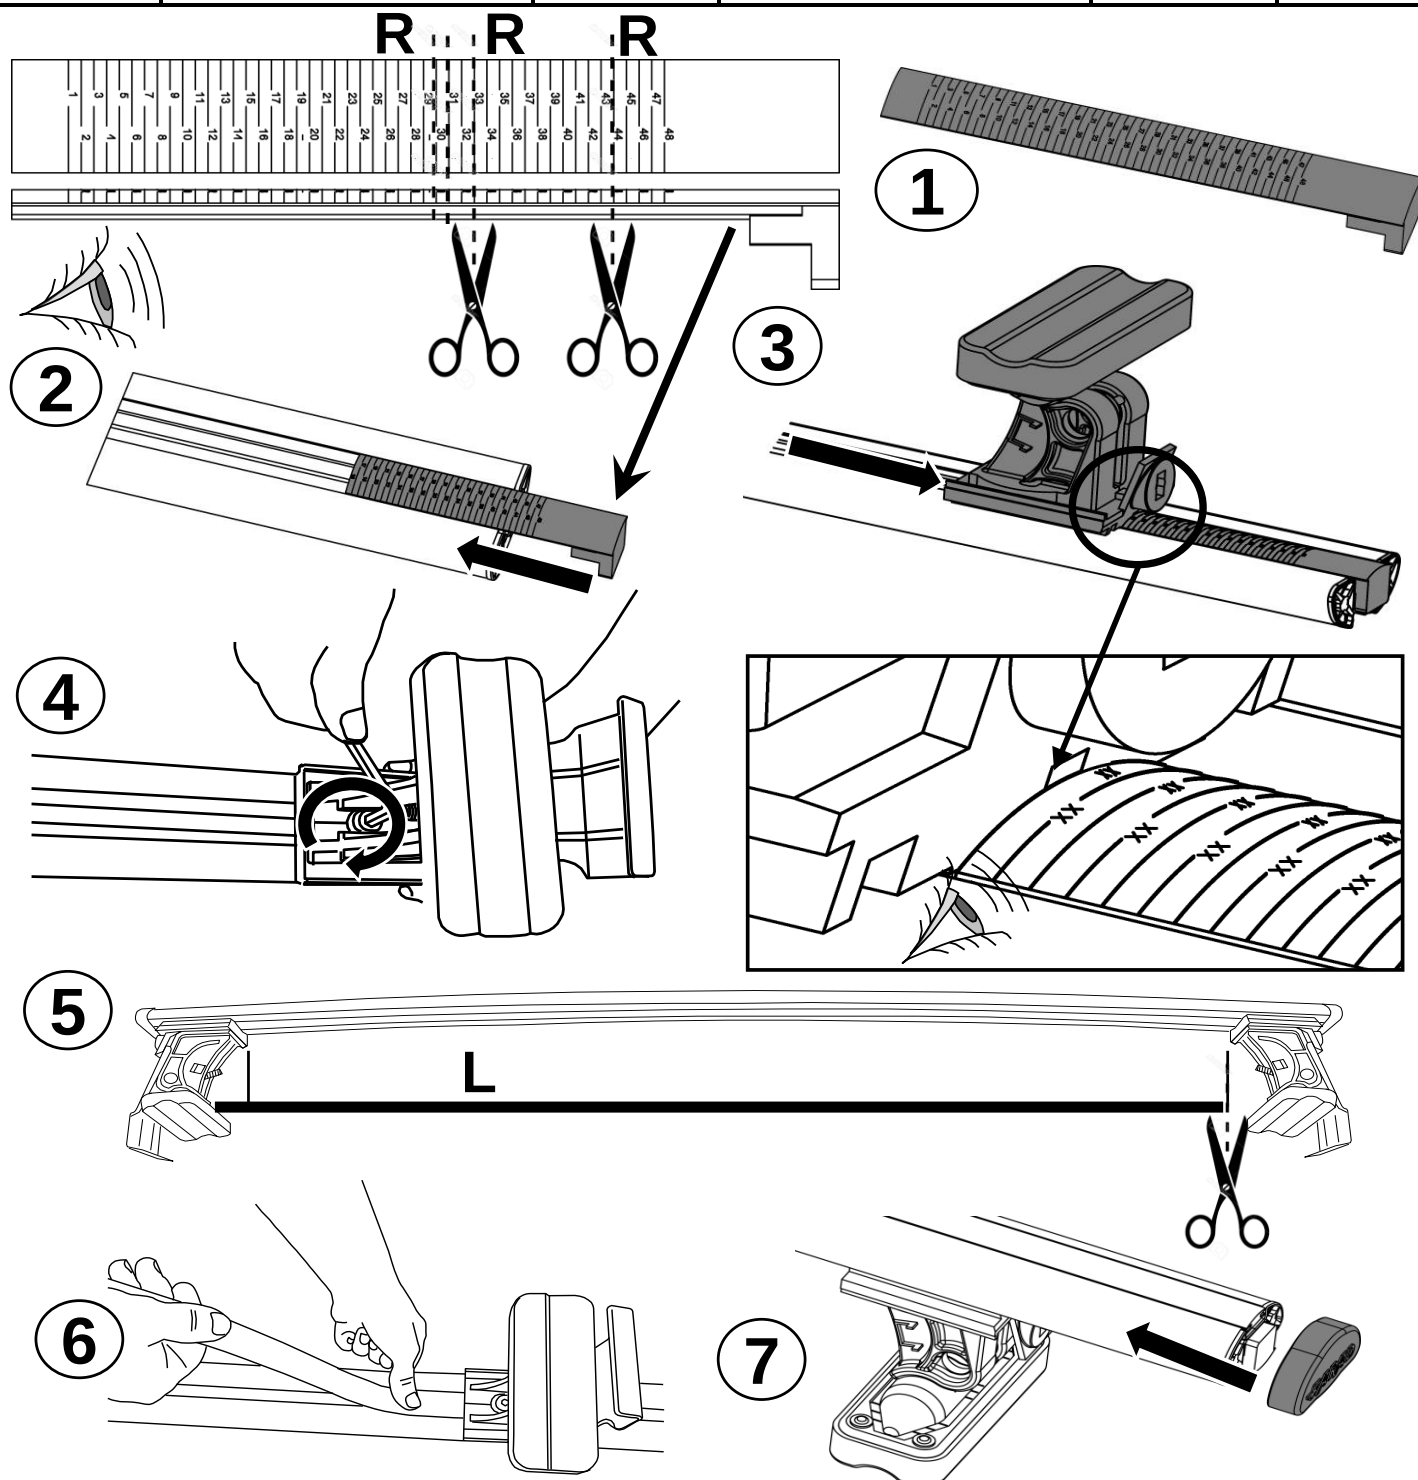


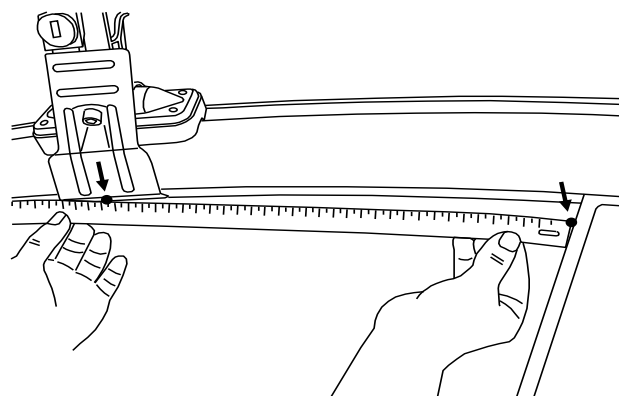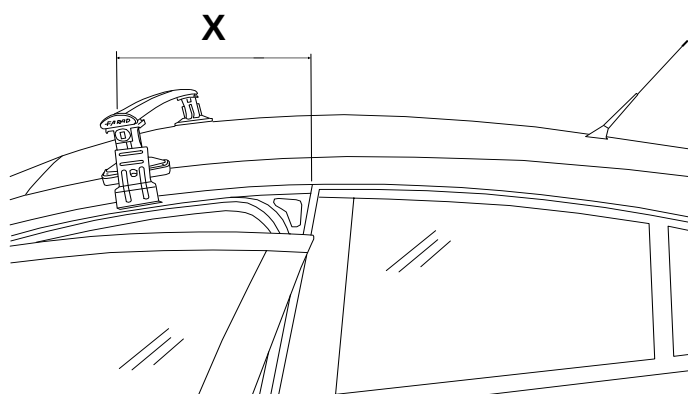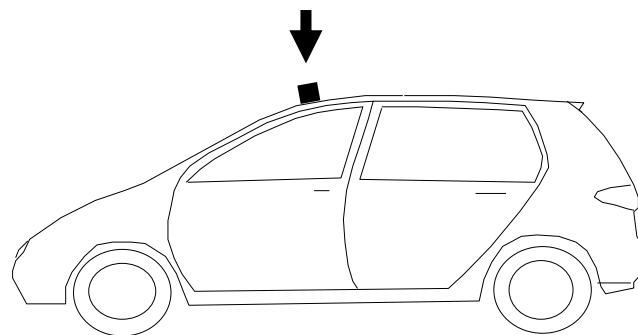


				X
KIA	PICANTO	3	2011-2017	X= 540
KIA	PICANTO	5	2011-2017	X= 270
KIA	PICANTO	5	2004-2011	X= 240
HYUNDAI	I10	5	2008-2013	X= 300
HYUNDAI	I10	5	2014>	X= 200

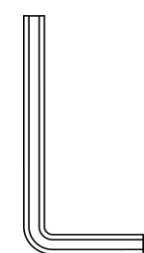




✓ 4 Nm



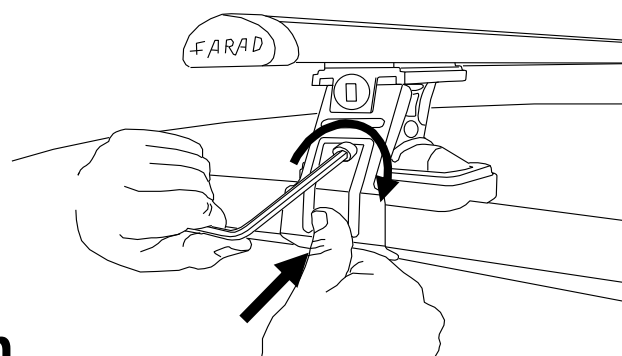


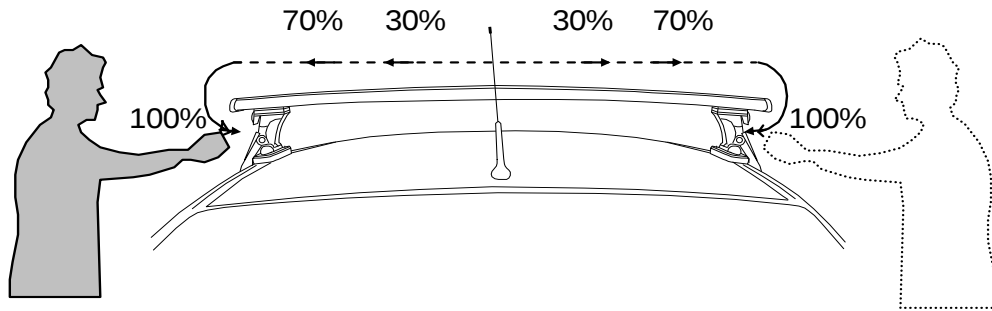


I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

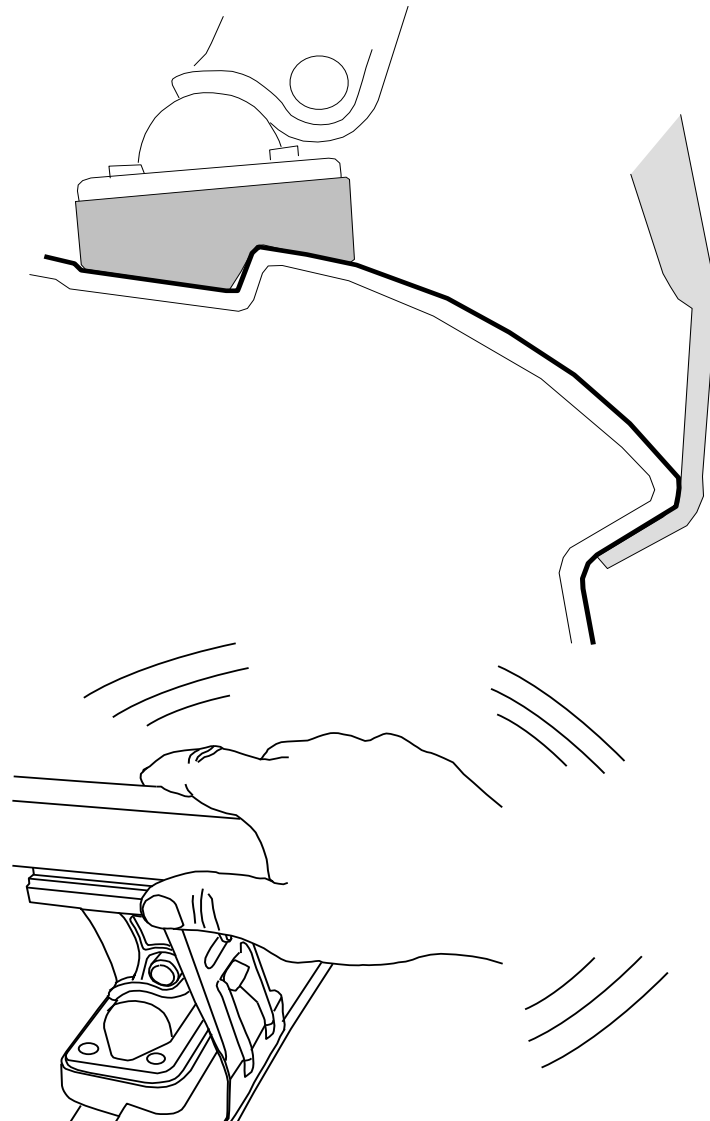

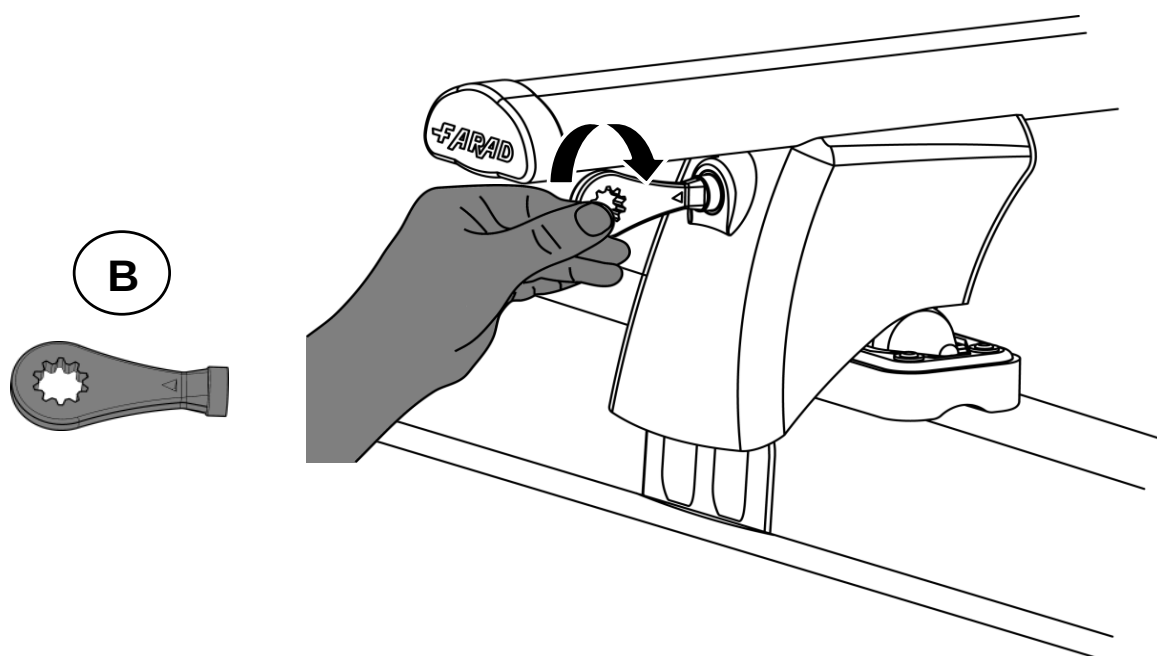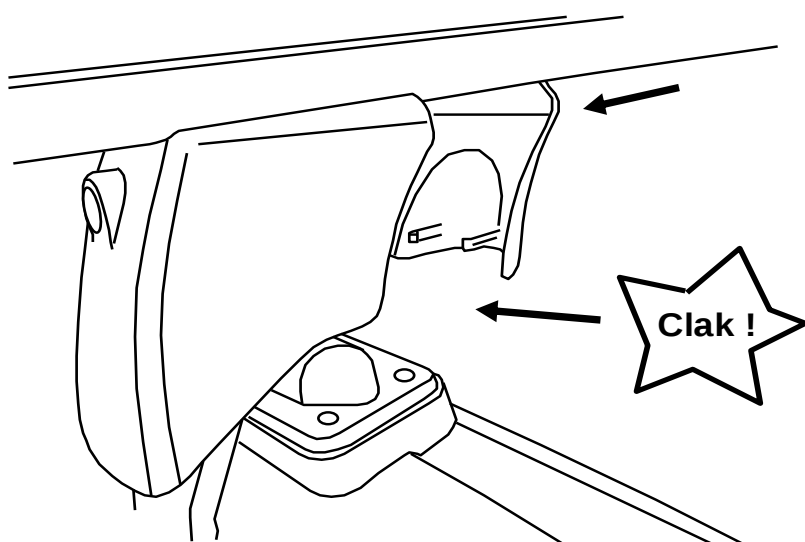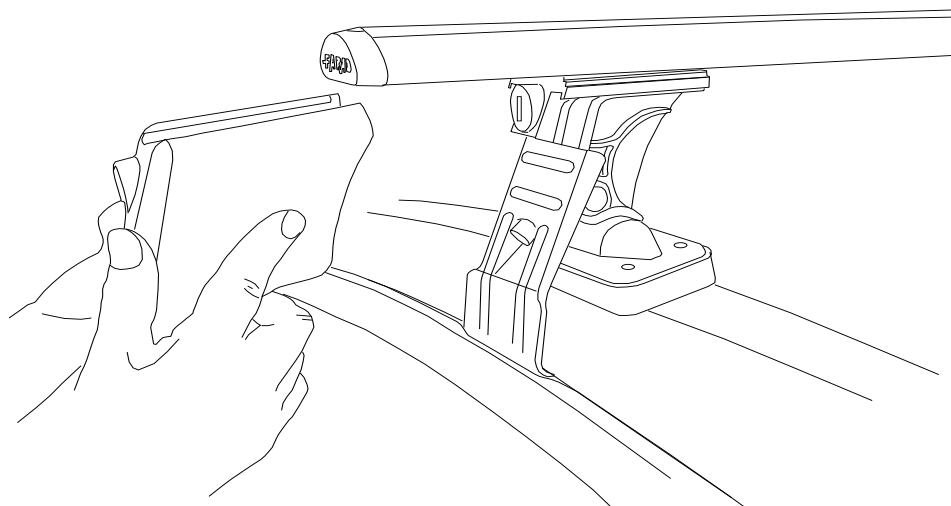

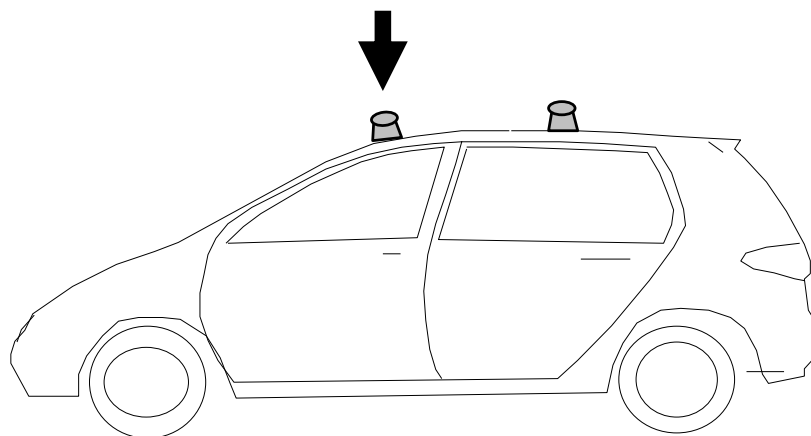

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar


E Fijación Barra Trasera


D Montage Heckdachträgers


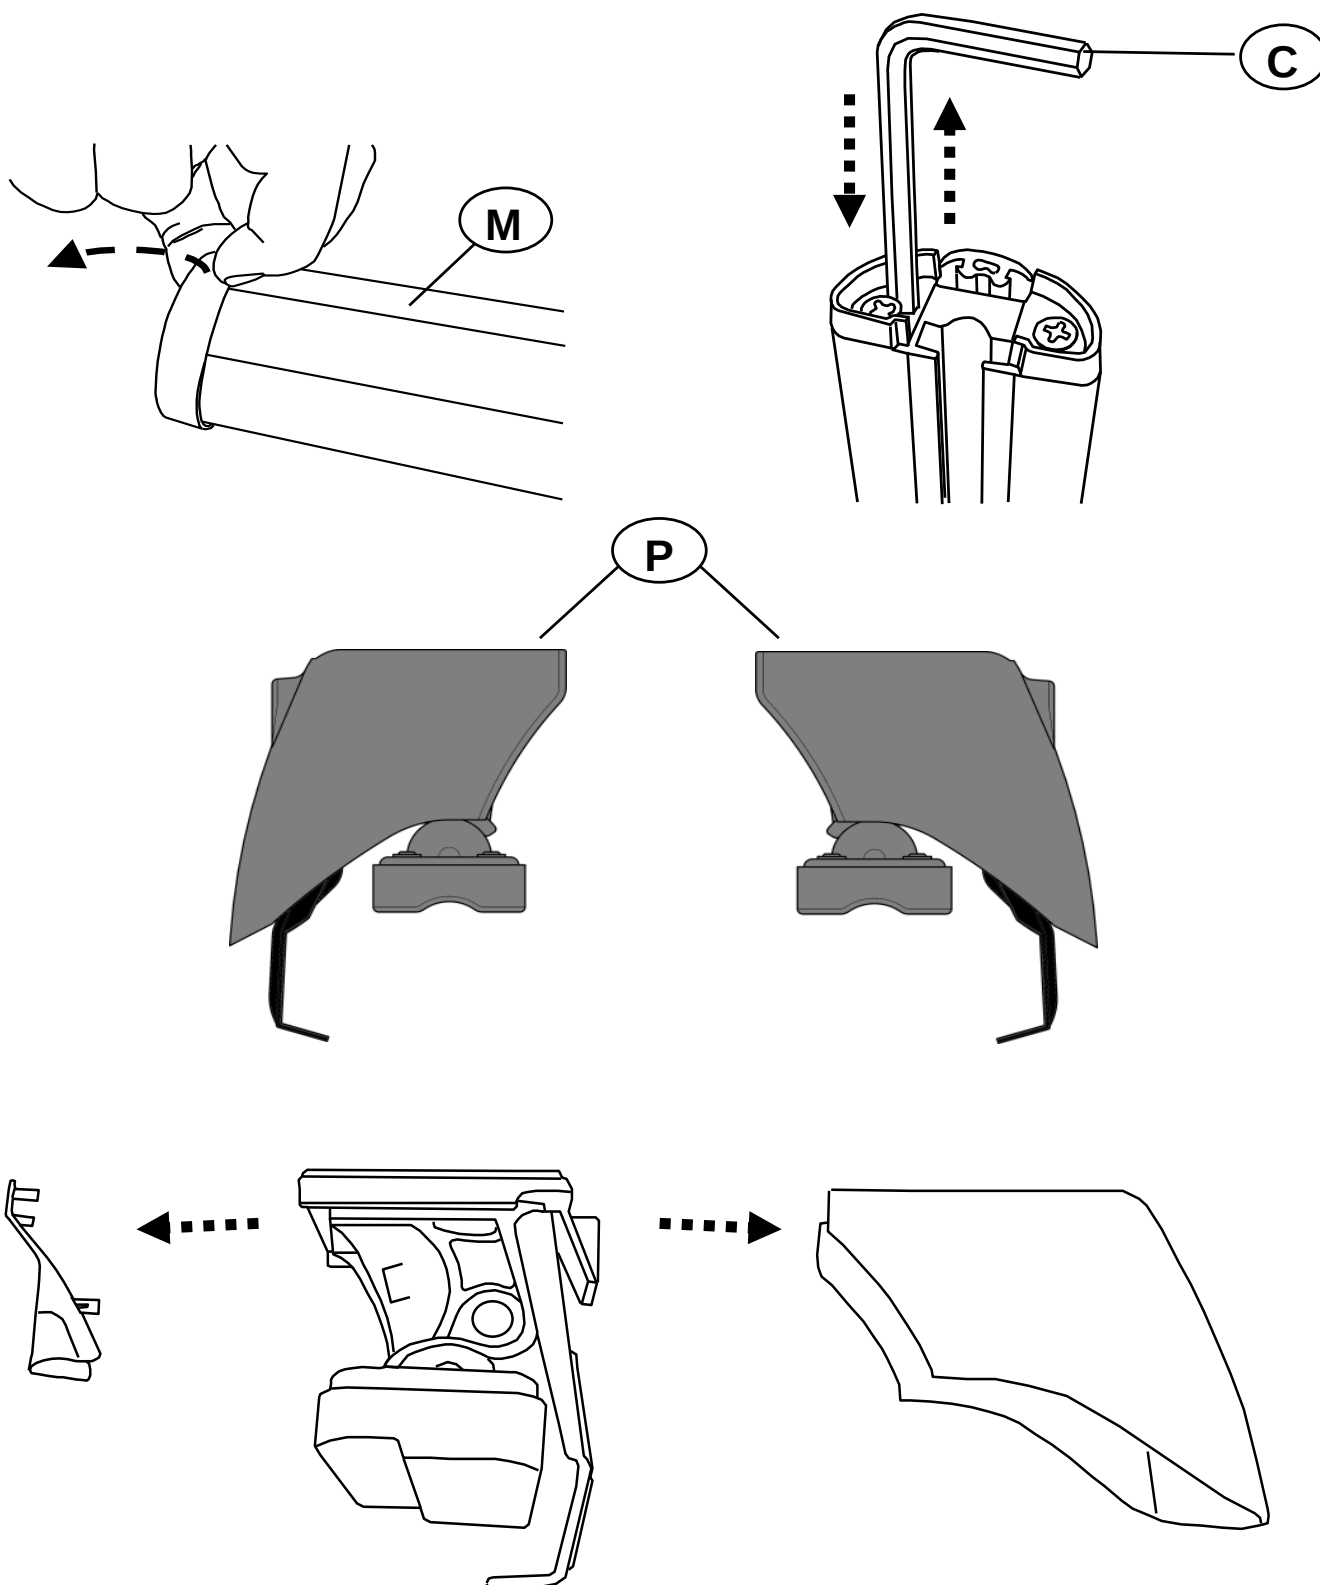


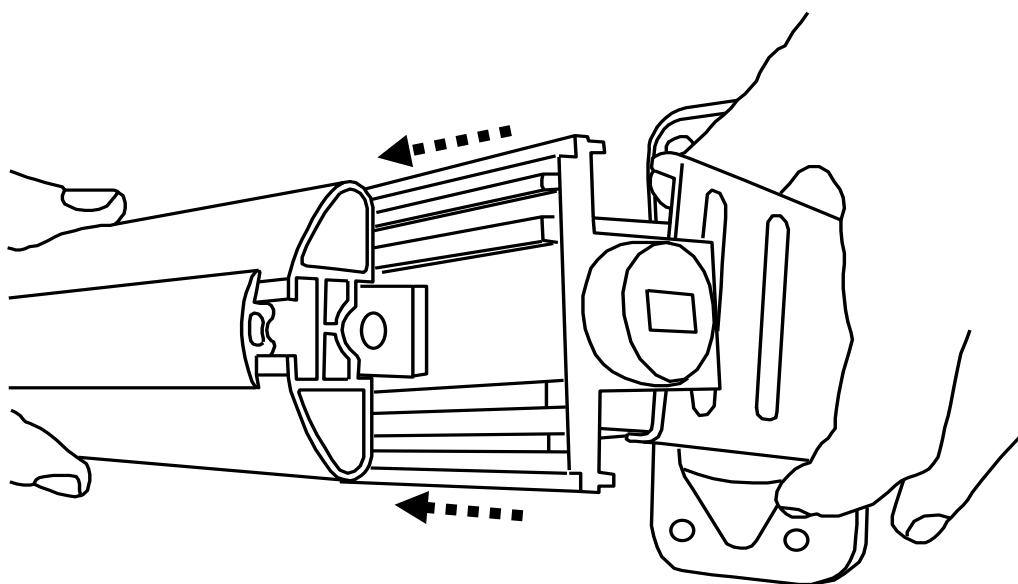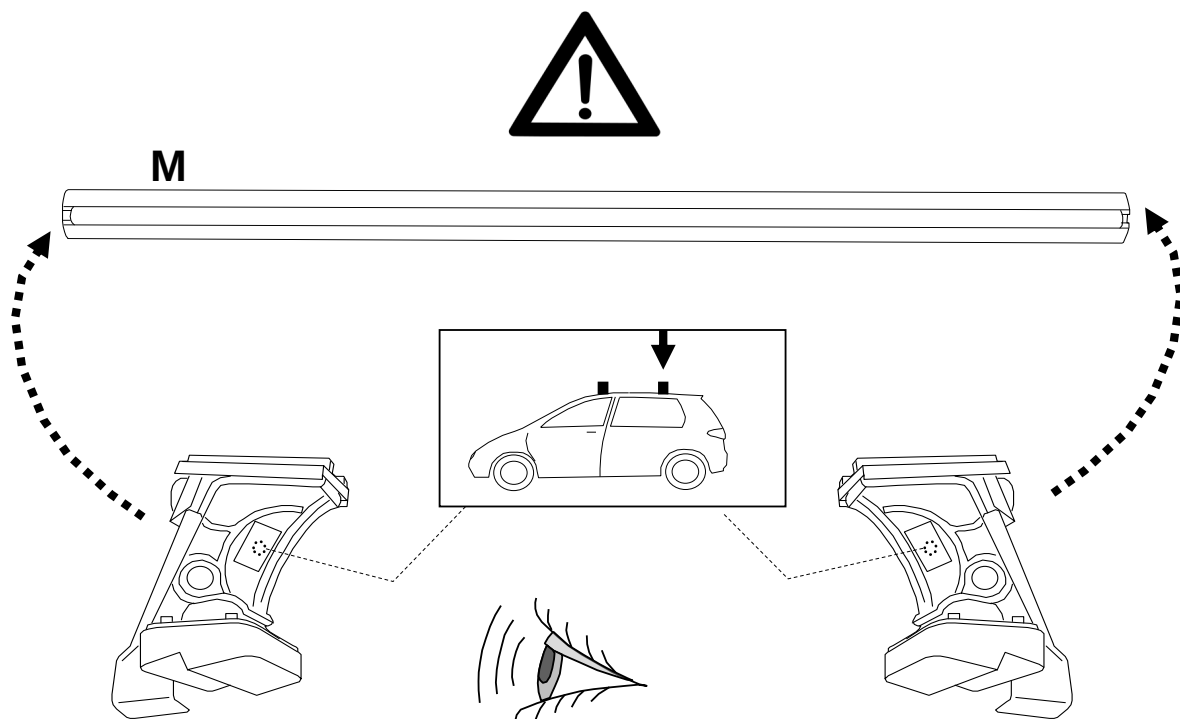





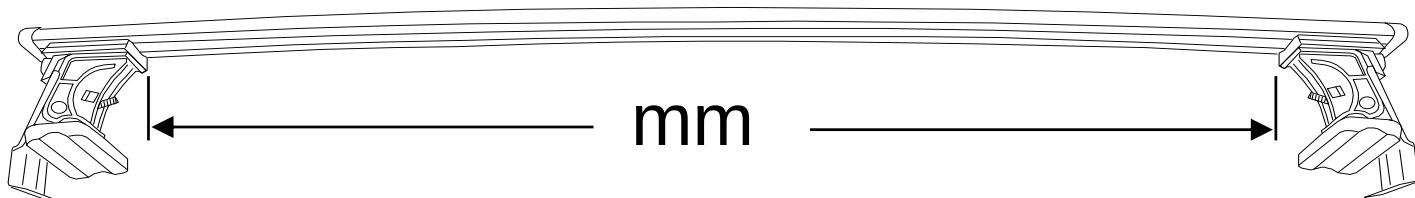


				R	mm
KIA	PICANTO	3	2011-2017	R= 24	880
KIA	PICANTO	5	2011-2017	R= 22	870
KIA	PICANTO	5	2004-2011	R= 31	920
HYUNDAI	I10	5	2008-2013	R= 25	890
HYUNDAI	I10	5	2014 >	R= 38	950

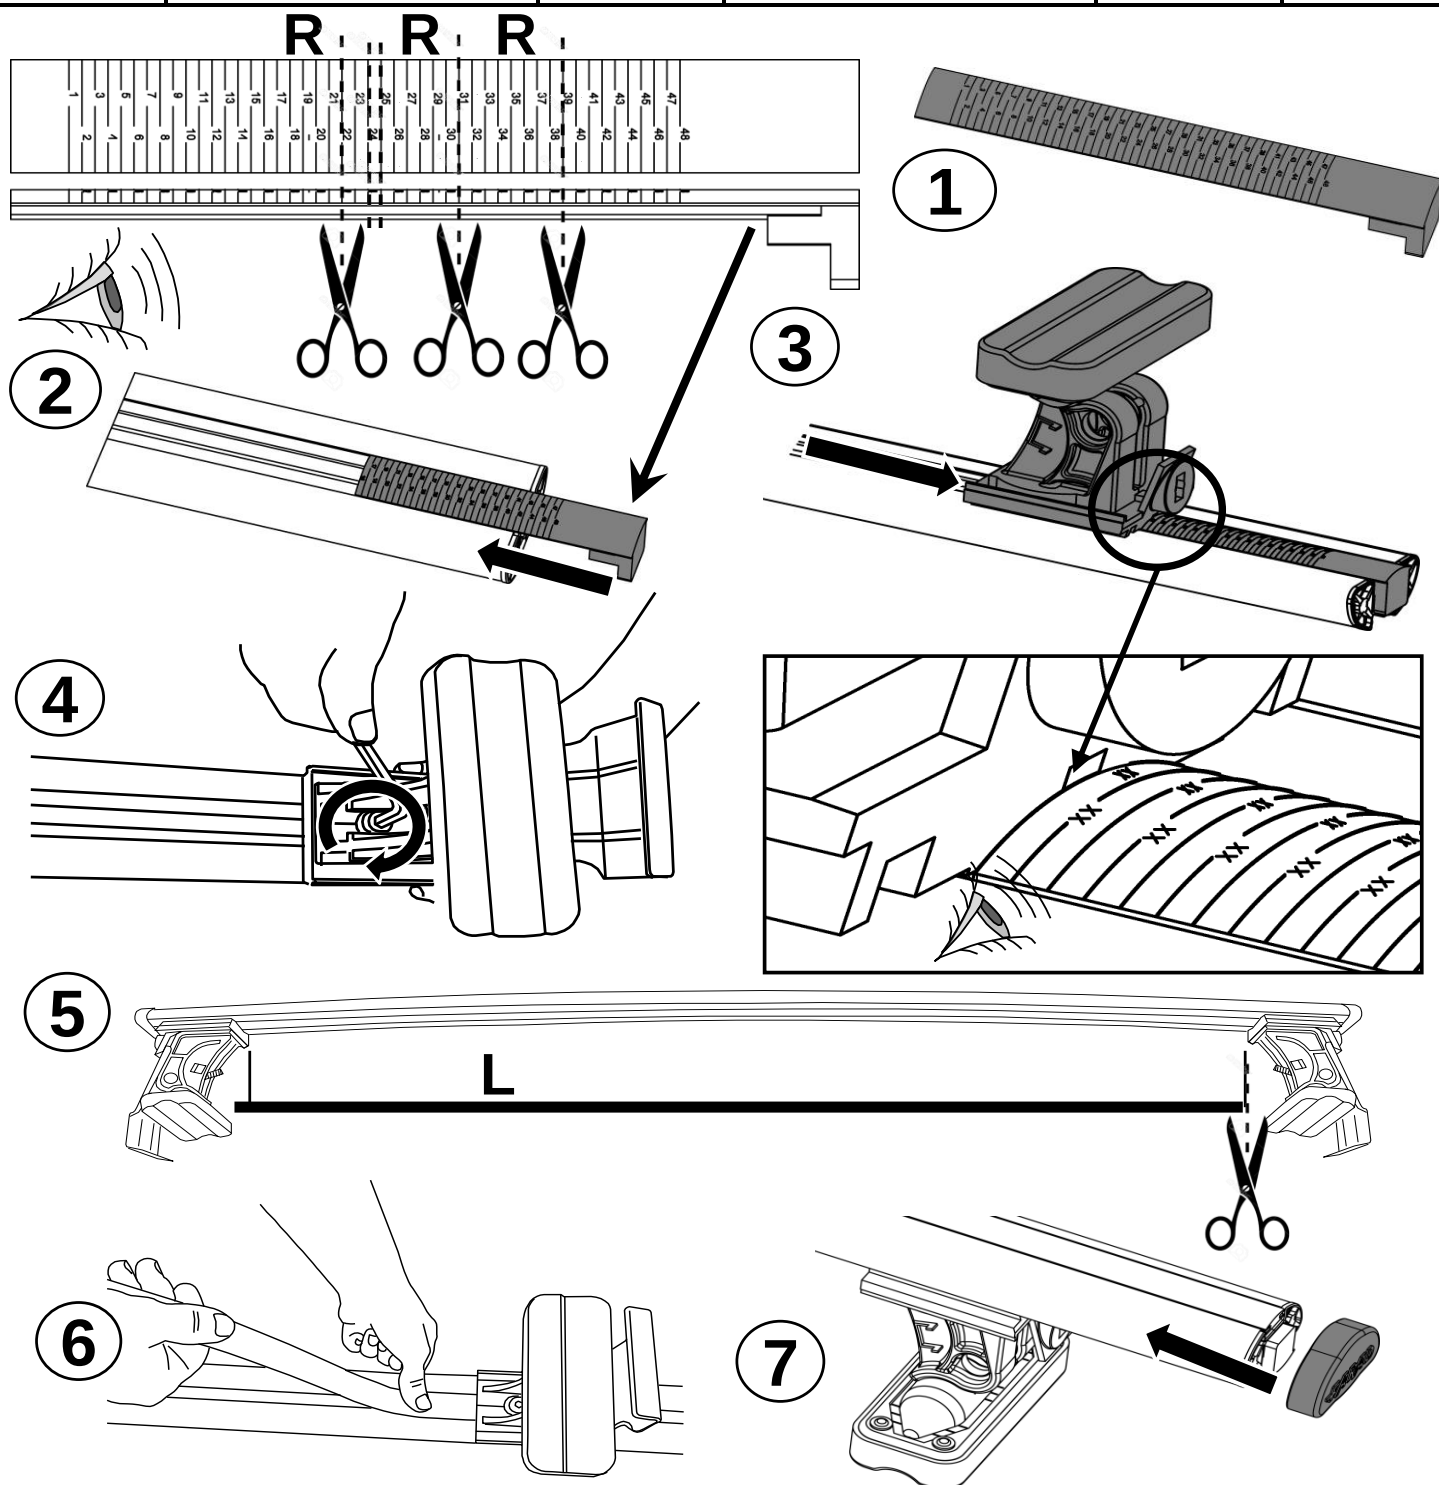

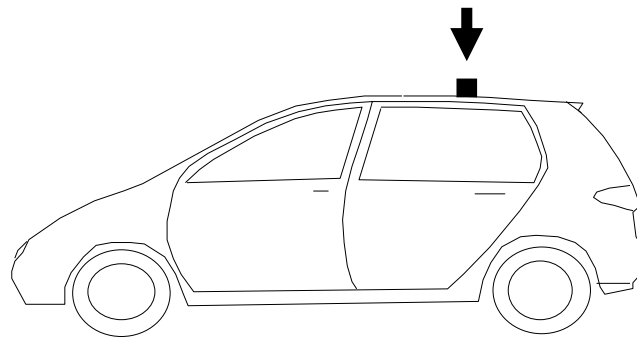

D

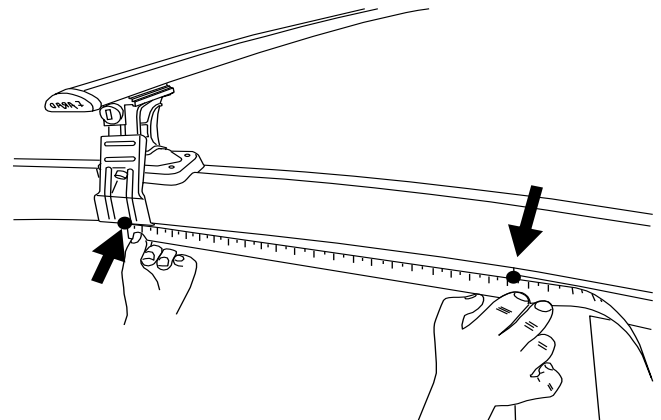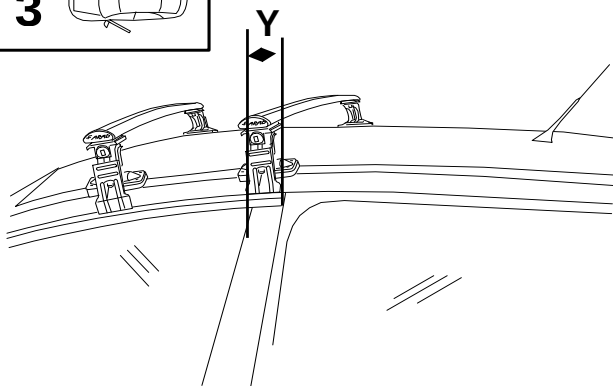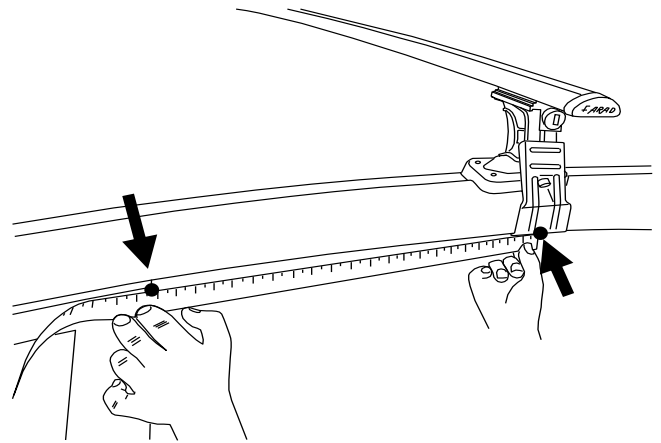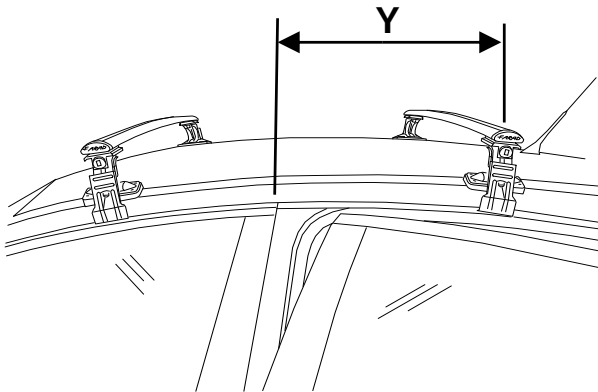


				Y
KIA	PICANTO	3	2011-2017	Y= 50
KIA	PICANTO	5	2011-2017	Y= 350
KIA	PICANTO	5	2004-2001	Y= 370
HYUNDAI	I10	5	2008-2013	Y= 300
HYUNDAI	I10	5	2014 >	Y= 400





NO!

✓ 4 Nm



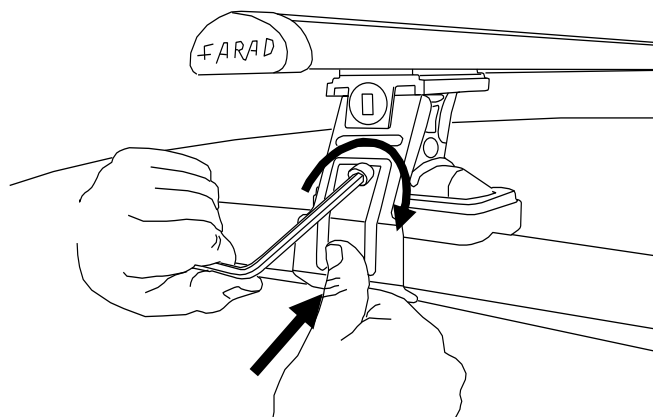





C




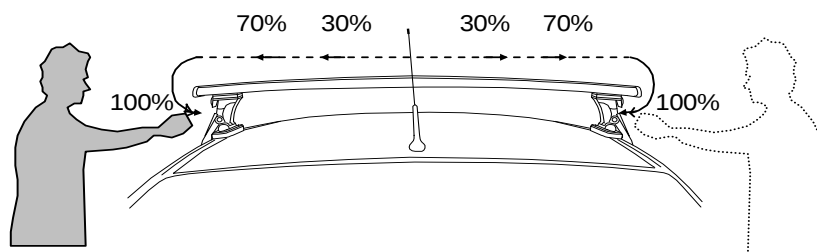

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

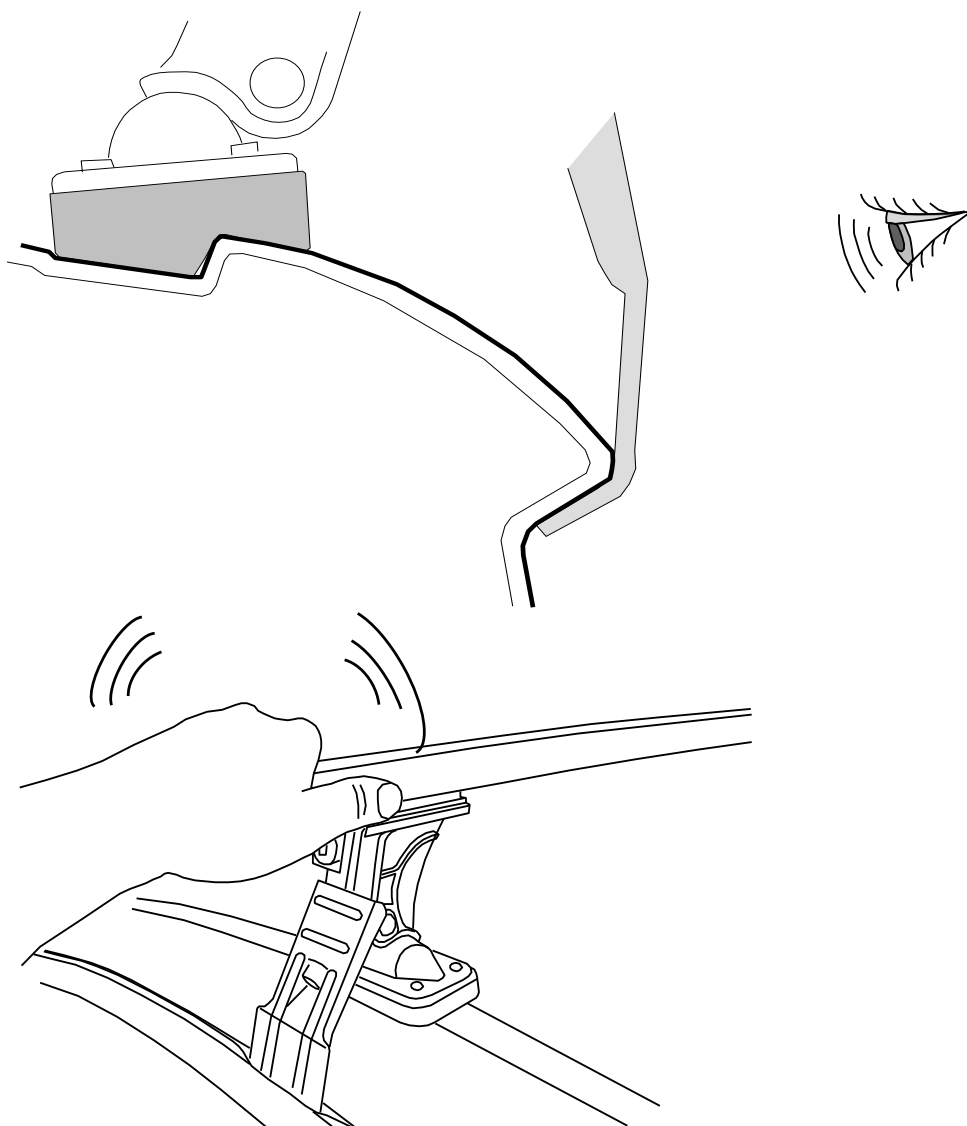

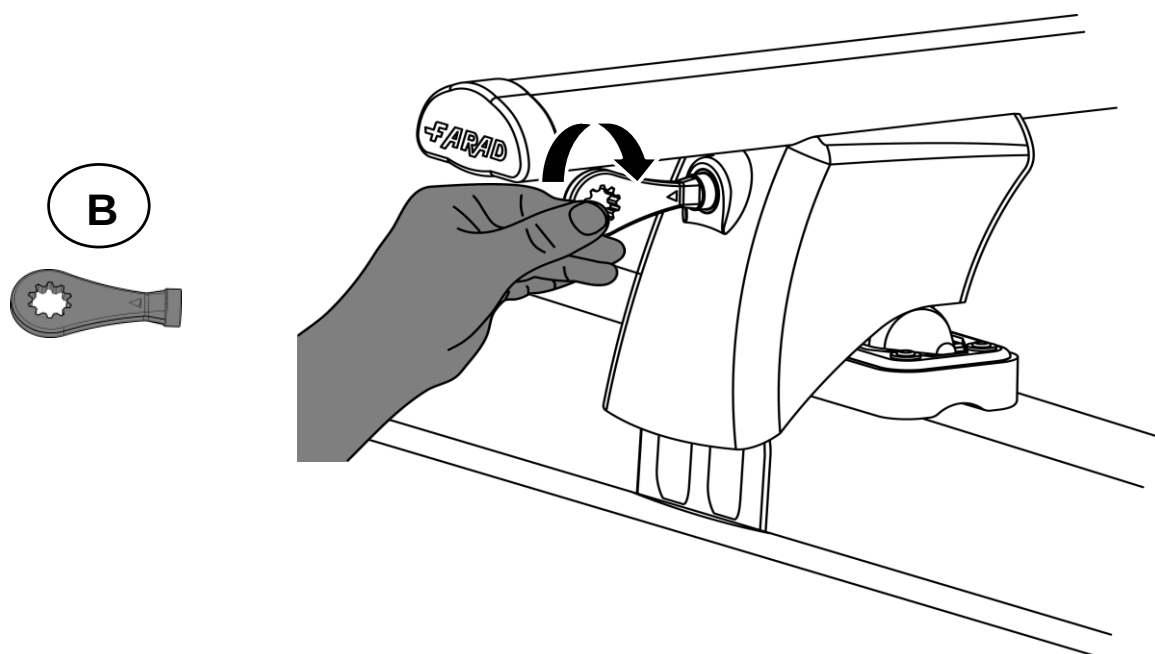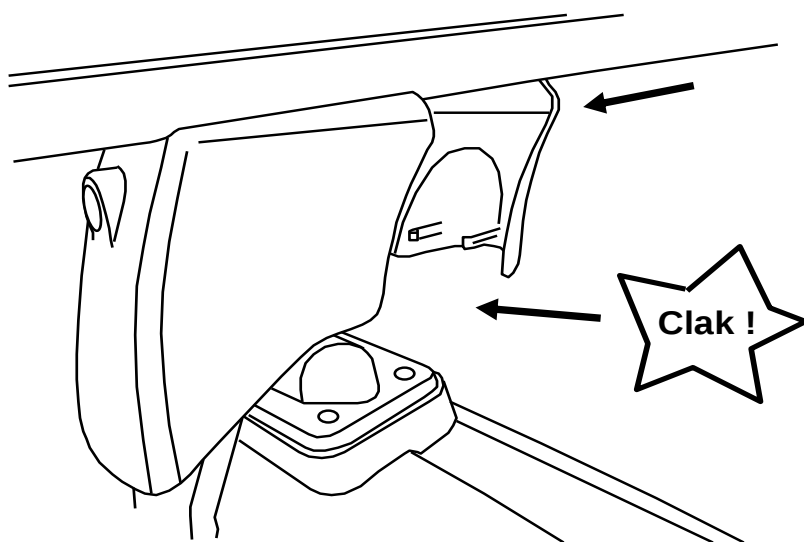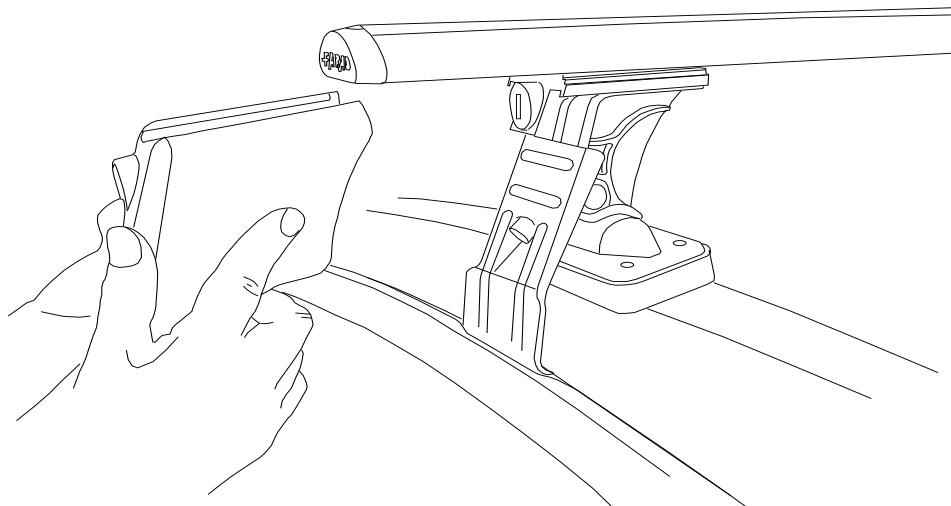

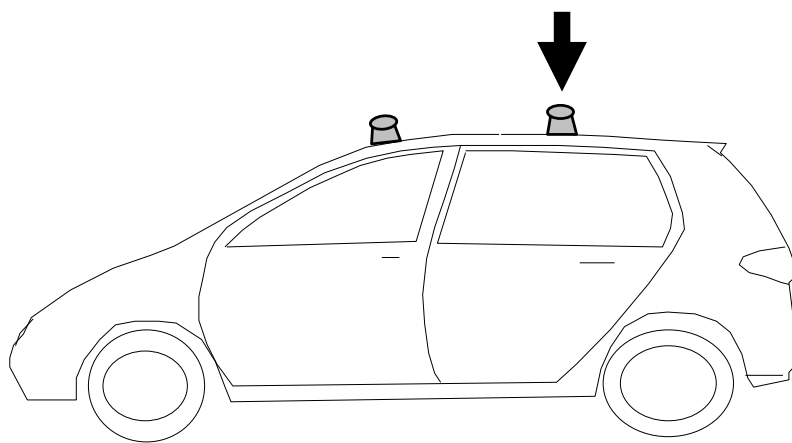


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

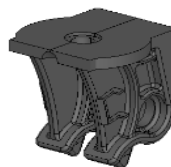

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

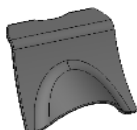

INVOLUCRO POST.
90341 / 9

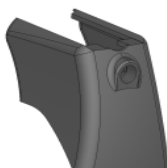

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7



PALETTA
90341 / 4



BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



**GUARNIZIONE
NUMERICA**
91141 / 14

FARAD[®]
made in Italy

tel. 011 9713719 - n° verde 800984229
www.faradworld.com