


**CAN AUTO****TURTLE****ASSEMBLY INSTRUCTIONS (ROOF RAIL)**

Product Code: MR01047 (Crown)


FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

LWB

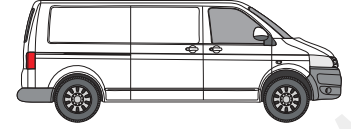

VWGN TRNSPT (T5/T6) VAN 03-
VWGN CALFRN (T5/T6) VAN 03-
VWGN CARVL (T5/T6) VAN 03-
VWGN MVAN (T5/T6) VAN 03-
VWGN SHTTL (T5/T6) VAN 03-

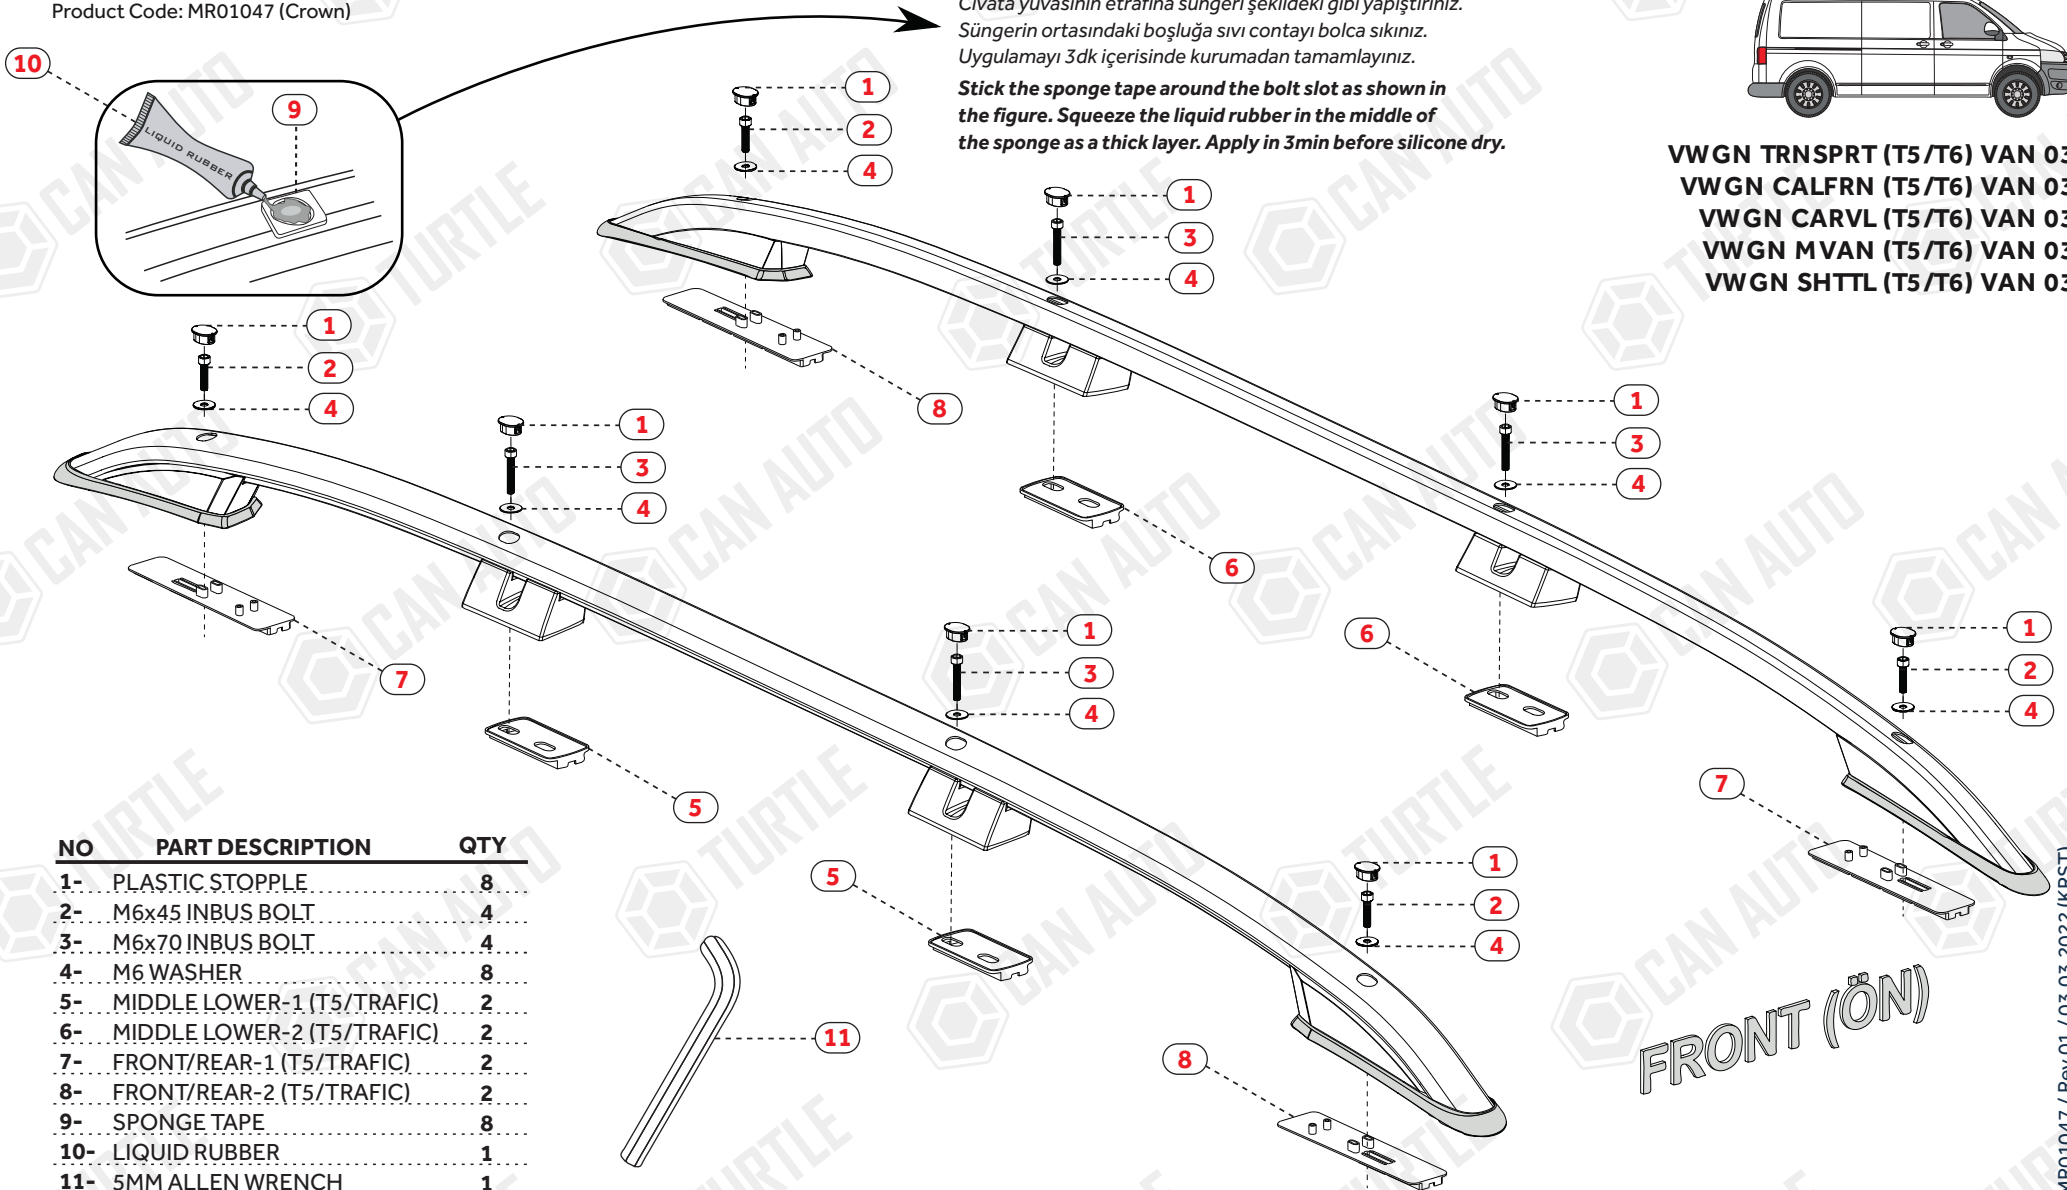

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	8
2-	M6x45 INBUŞ BOLT	4
3-	M6x70 INBUŞ BOLT	4
4-	M6 WASHER	8
5-	MIDDLE LOWER-1 (T5/TRAFIC)	2
6-	MIDDLE LOWER-2 (T5/TRAFIC)	2
7-	FRONT/REAR-1 (T5/TRAFIC)	2
8-	FRONT/REAR-2 (T5/TRAFIC)	2
9-	SPONGE TAPE	8
10-	LIQUID RUBBER	1
11-	5MM ALLEN WRENCH	1

FRONT (ÖN)

MR01047 / Rev.01 / 03.03.2022 (KRST)