


**CAN AUTO****TURTLE****ASSEMBLY INSTRUCTIONS (ROOF RAIL)**

Product Code: MR01031 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


SHORT

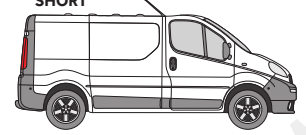

NSS PMSTR (X83) VAN 02-14
VXHL VVR (X83) VAN 01-14
REN TRFC (X83) VAN 01-14
OPL VVR (X83) VAN 01-14

M6 klipsi araç üzerindeki metal parçaya şekildeki gibi takınız.

Attach the M6 clip to the metal part on the vehicle as shown in the figure.

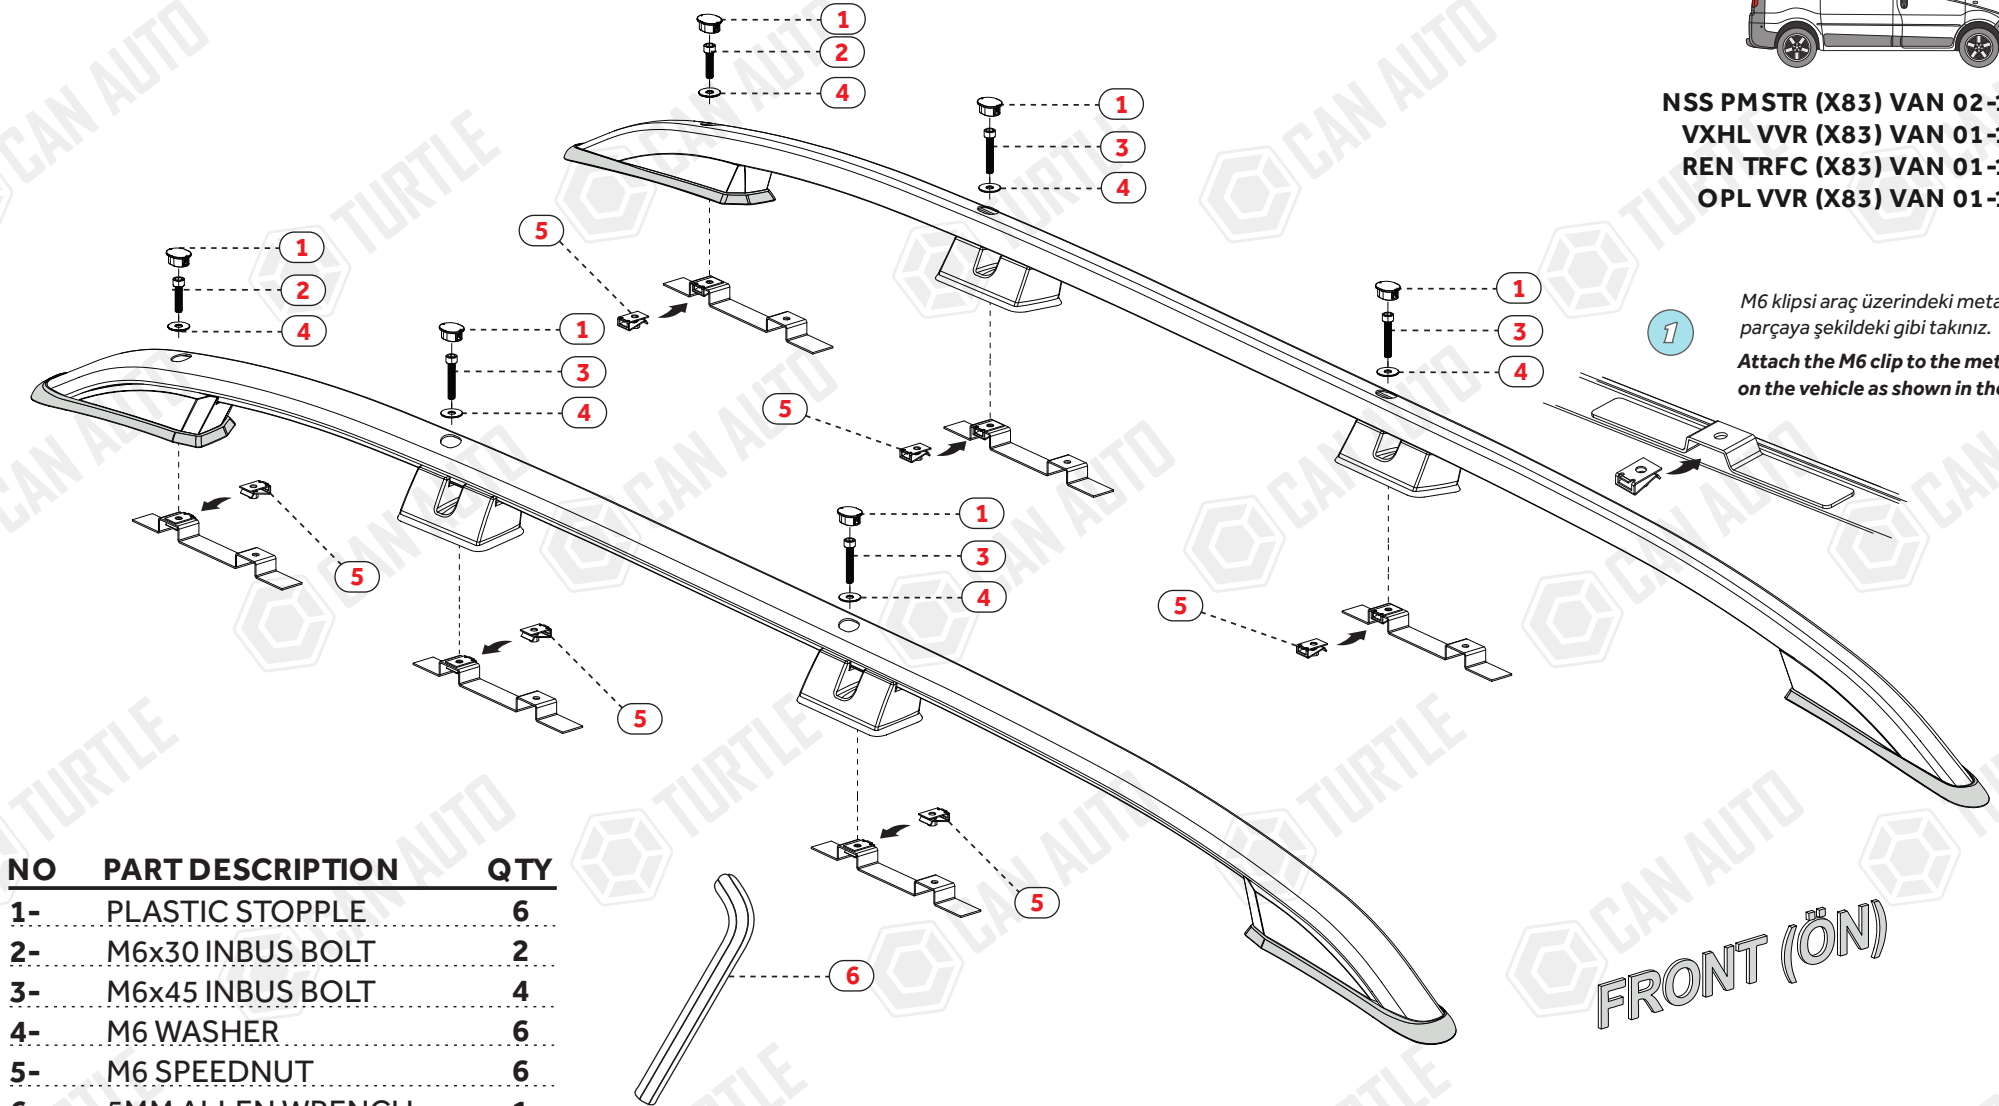

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M6x30 INBUS BOLT	2
3-	M6x45 INBUS BOLT	4
4-	M6 WASHER	6
5-	M6 SPEEDNUT	6
6-	5MM ALLEN WRENCH	1