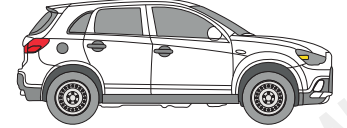


**CAN AUTO****TURTLE****ASSEMBLY INSTRUCTIONS (ROOF RAIL)**

Product Code: MR01024 (Crown)

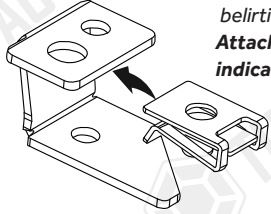
FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

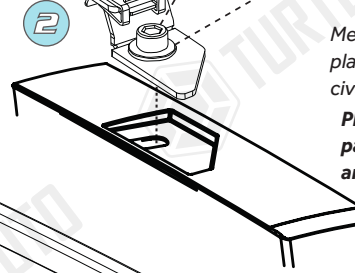
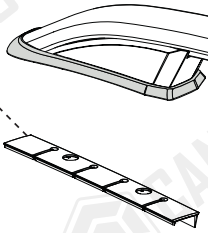
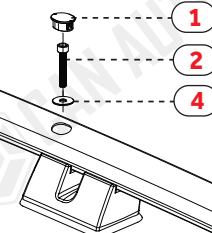

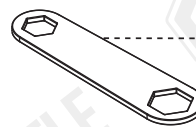
**MIT ASX RVR SUV 10-
(w/o Glass Roof)**

Metal parçayı şekilde gösterildiği gibi plastik parçanın üzerine yerleştirip civata kullanarak sıkınız.

Place the metal part on the plastic part as shown in the figure and tighten it using bolts.

1

M6 klipsi metal parçaya belirtilen yere takınız.
Attach the M6 clip to the place indicated on the metal part.

5**6****4****2****1****2****4****7****1****2****4****12****9****1****3****4****1****3****4****10****7****11****7****9****10****1****3****4****12****8****13****14****FRONT (ÖN)**

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M6x35 INBUS BOLT	2
3-	M6x25 INBUS BOLT	2
4-	M6 WASHER	6
5-	M6 SPEEDNUT	2
6-	M6x10 INBUS BOLT	2
7-	PLASTIC PART F/R	4
8-	PLASTIC PART MID RIGHT	1
9-	PLASTIC PART MID LEFT	1
10-	M6x30 COUPLING NUT	2
11-	M6 SETSCREW	2
12-	BRACKET	2
13-	5MM ALLEN WRENCH	1
14-	10-13 WRENCH	1