

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05032 (A/B-TYPE)

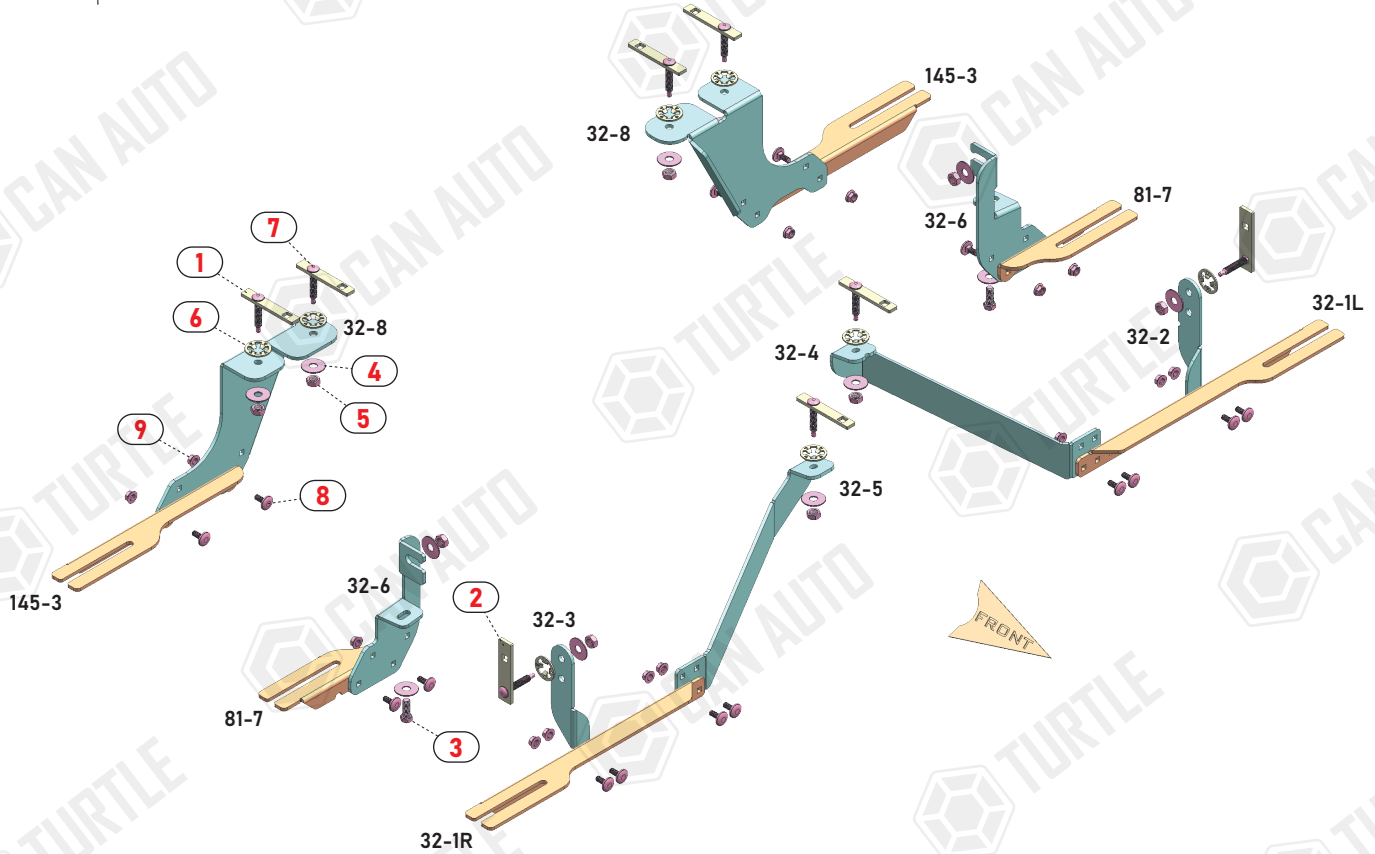
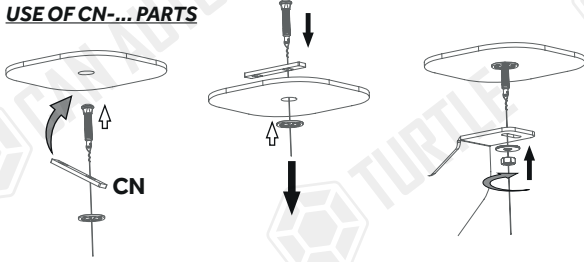
COMPATIBLE VEHICLES

FRD CSTM VAN 12- / SWB

FRD CSTM VAN 12- / LWB

PACKAGE INCLUDED

1-	CN-01 M8	6
2-	CN-02 M8	2
3-	M8x20 HEX BOLT	2
4-	D8 WASHER	12
5-	M8 HEX NUT	10
6-	D8 CLAMPING PIECE	8
7-	M8 SPECIAL BOLT	8
8-	M6x15 LOCK HEADED BOLT	16
9-	M6 HEX FLANGE NUT	16

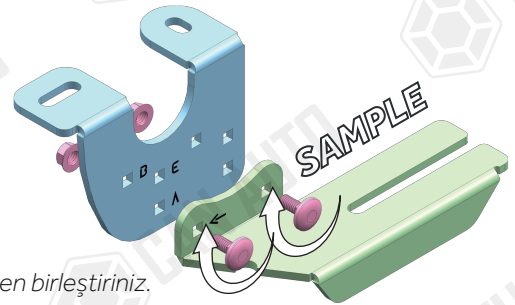
USE OF CN-... PARTS

Whatever product type you will use, Example of side step types:

*Type A (Alyans, Sapphire, Emerald)**Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****MIDDLE****FRONT**