

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**


* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05127 (A/B-TYPE)

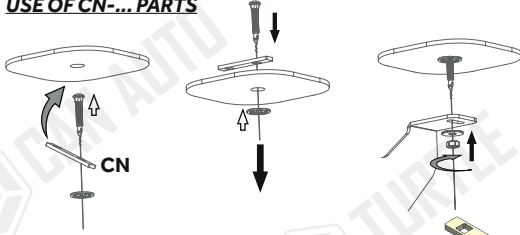
USE OF CN-... PARTS**COMPATIBLE VEHICLES**

VWGN CARVL (T5/T6) 03-
 VWGN MVAN (T5/T6) 03-
 VWGN SHTTL (T5/T6) 03-
 VWGN TRNSPRT (T5/T6) 03-

PACKAGE INCLUDED

1-	CN-01 M8	9
2-	CN-05 M8	1
3-	CN-09 M8	1
4-	M8x20 HEX BOLT	1
5-	D8 WASHER	12
6-	M8 HEX NUT	11
7-	CLAMPING PIECE	11
8-	M8 SPECIAL BOLT	11
9-	M6x15 LOCK HEADED BOLT	12
10-	M6 HEX FLANGE NUT	12

ZIPLOCK BAG

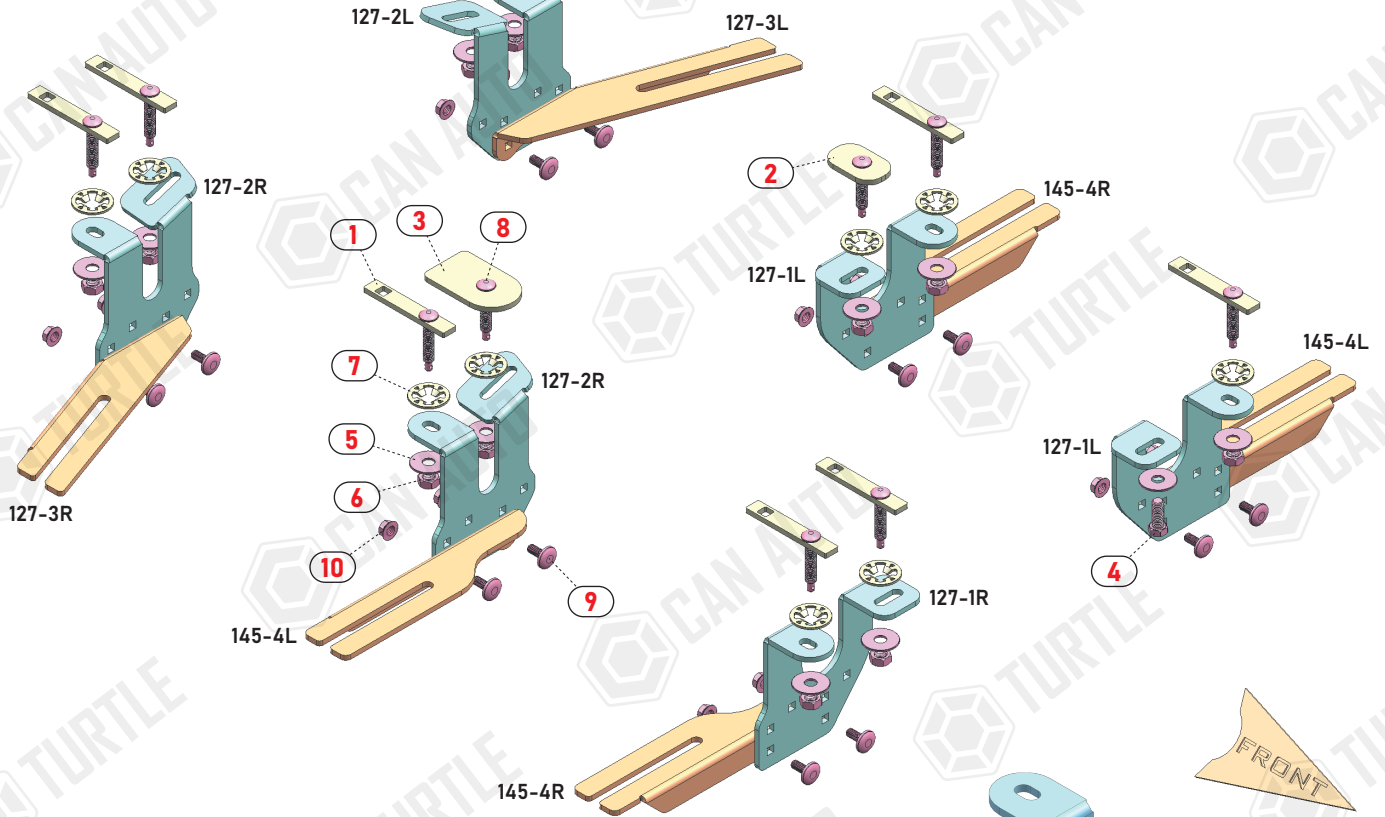

Whatever product type you will use, Example of side step types;

*Type A (Alyans, Sapphire, Emerald)**Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**MIDDLE LEFT****FRONT RIGHT****FRONT LEFT**