

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**


* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05095 (A/B-TYPE)

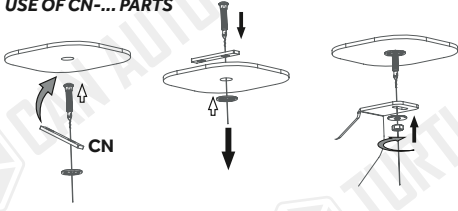
USE OF CN-... PARTS**COMPATIBLE VEHICLES**

FI TLNT (X82) 16-
 OPL VVR (X83) 01-14
 OPL VVR (X82) 14-18
 REN TRFC (X83) 01-14
 REN TRFC (X82) 14-
 VXHL VVR (X83) 01-14
 VXHL VVR (X82) 14-18
 MIT XPRSS (X82) 20-
 NSS PMSTR (X83) 02-14
 NSS NV300 (X82) 16-

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-07 M8	2
3- M8 SPECIAL BOLT	4
4- CLAMPING PIECE	4
5- D8 WASHER	20
6- M8 HEX NUT	12
7- M8x20 HEX BOLT	8
8- M6x15 LOCK HEADED BOLT	8
9- M6 HEX FLANGE NUT	8
10- M8x20 LOCK HEADED BOLT	6
11- M8 HEX FLANGE NUT	6

ZIPLOCK BAG

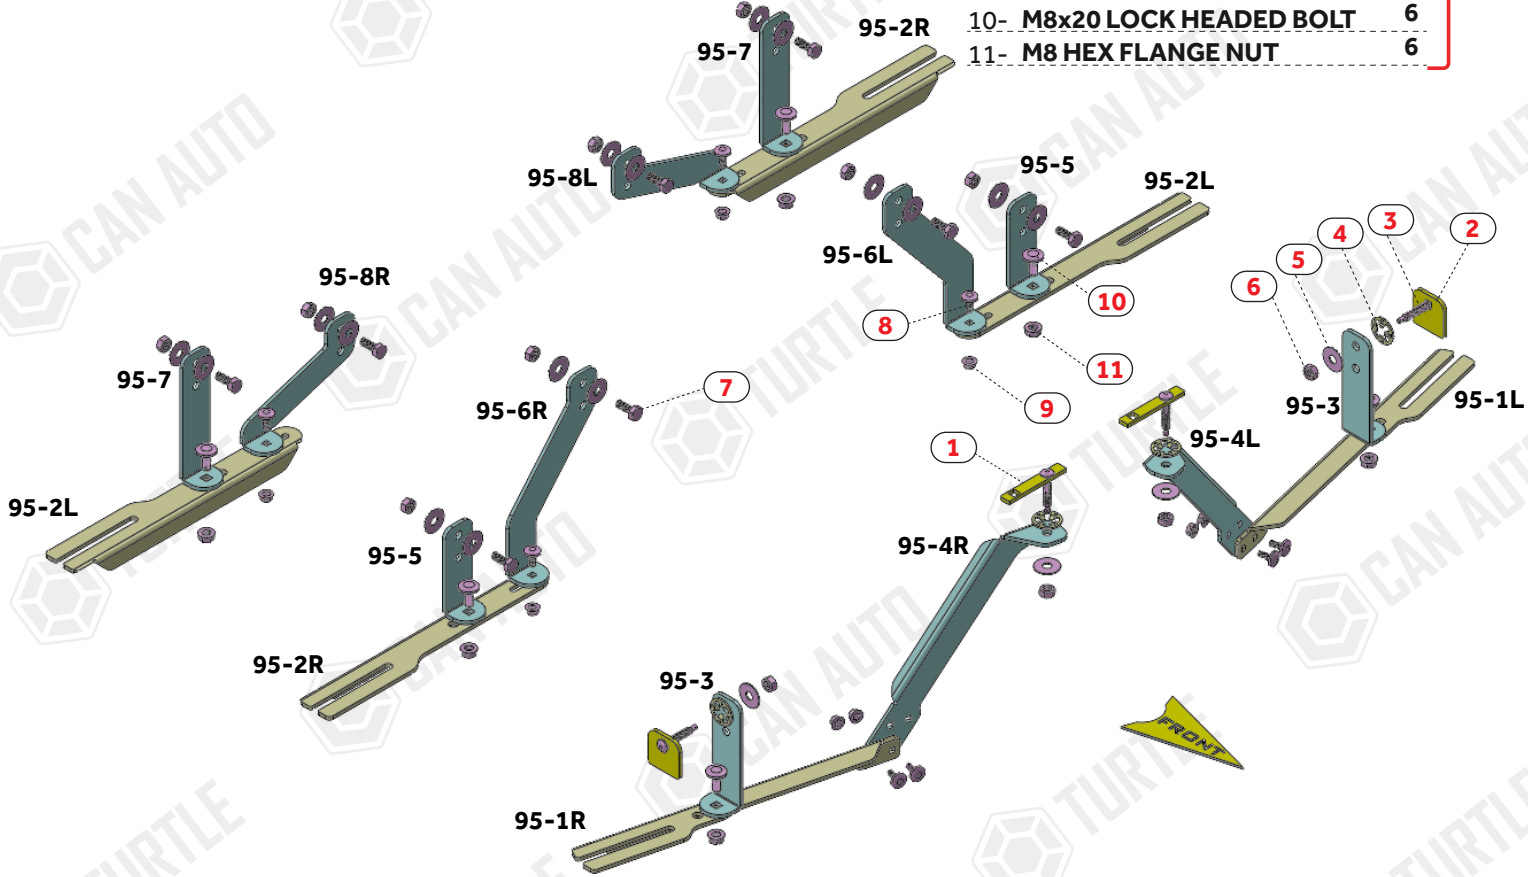

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****MIDDLE****FRONT**

MB05095 / Rev.01 / 14.01.2022 (KRST)