

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05085 (A/B-TYPE)


COMPATIBLE VEHICLES

FI FLLBCK DOUBLE CAB 16-
MIT L200 (Mk4) DOUBLE CAB 06-14
MIT L200 (Mk5) DOUBLE CAB 15-
MIT TRTN (Mk4) DOUBLE CAB 06-14
MIT TRTN (Mk5) DOUBLE CAB 15-
RAM 1200 DOUBLE CAB 16-

PACKAGE INCLUDED

1-	M8x25 HEX BOLT	12
2-	D8 WASHER	12
3-	M6x15 LOCK HEADED BOLT	12
4-	M6 HEX FLANGE NUT	12

ZIPLOCK BAG

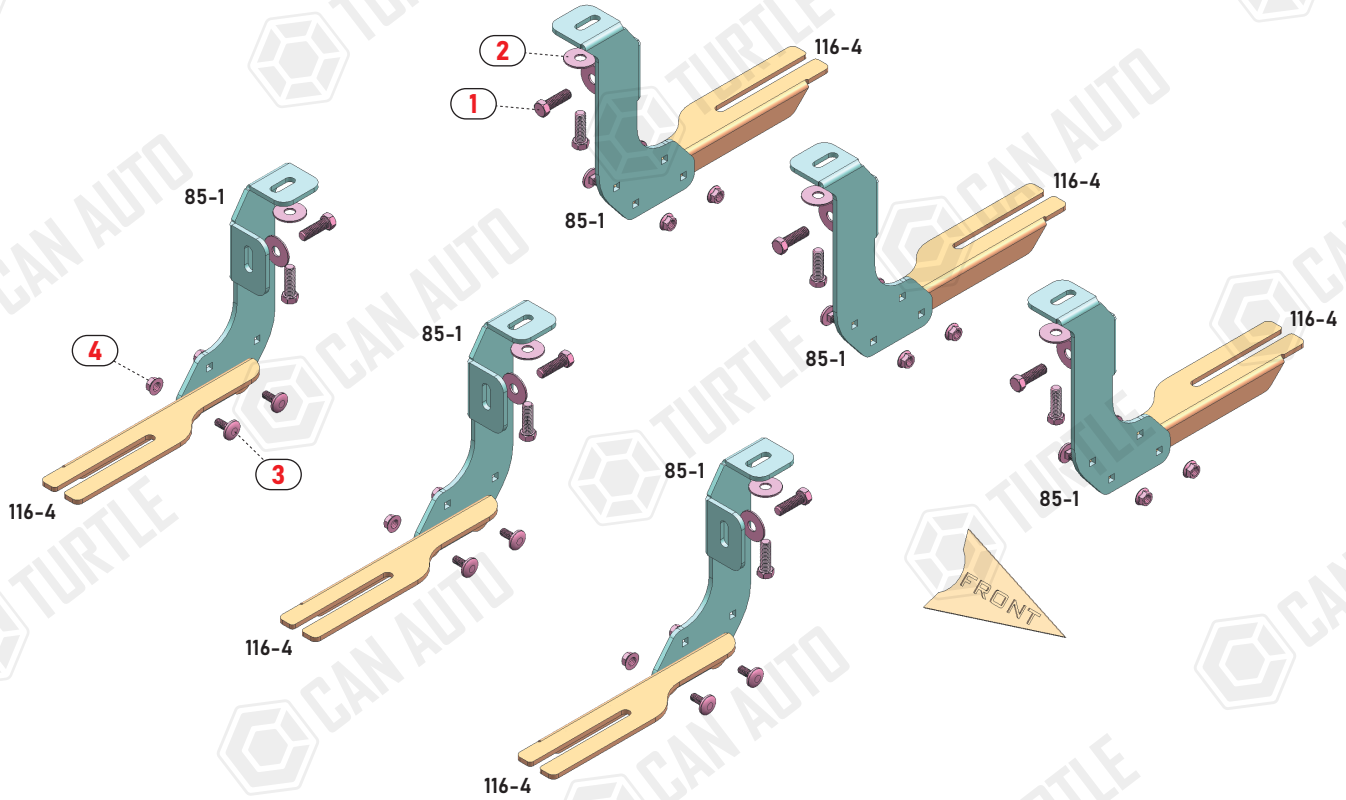


Whatever product type you will use, Example of side step types;

*Type A (Alyans, Sapphire, Emerald)**Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

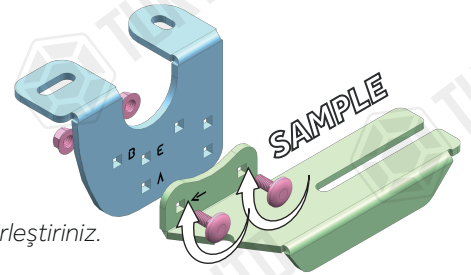

MB05085 / Rev.02 / 07.10.2021 (TPRK)