


**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05039 (A/B-TYPE)**COMPATIBLE VEHICLES**
FRD RNGR (PJ/PK) DOUBLE CAB 06-11
MZD BT5 (UN) DOUBLE CAB 06-11**PACKAGE INCLUDED**

1 - M8x25 HEX BOLT	8
2 - D8 WASHER	8
3 - M6x15 LOCK HEADED BOLT	8
4 - M6 HEX FLANGE NUT	8

ZIPLOCK BAG

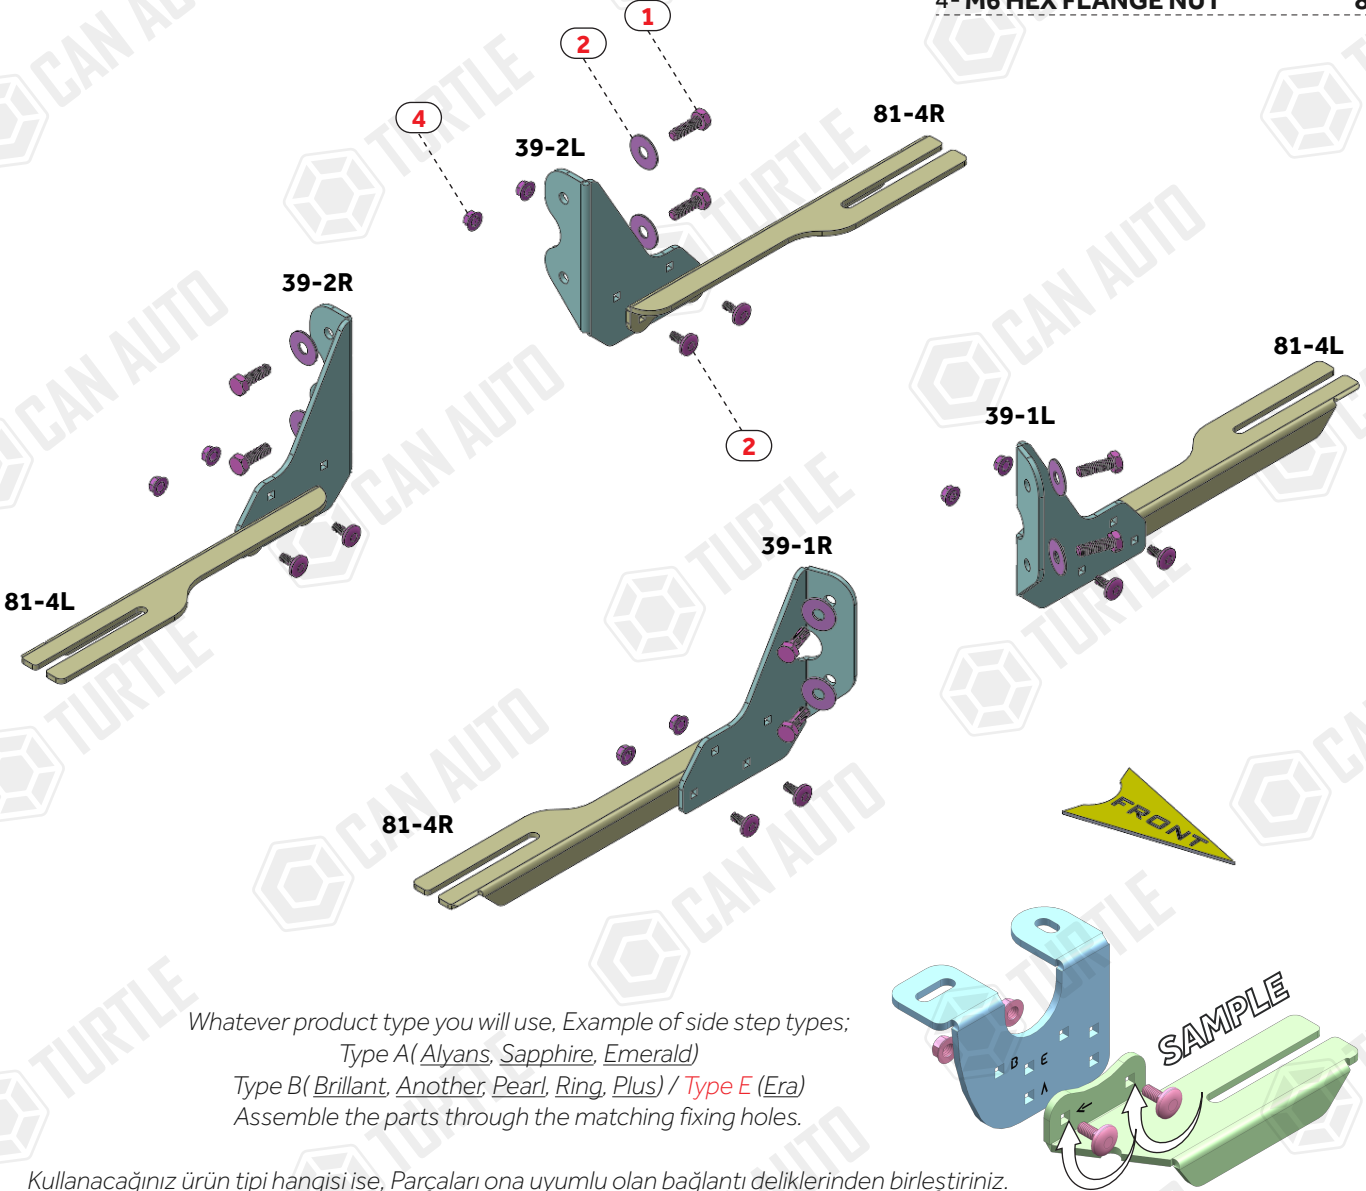


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

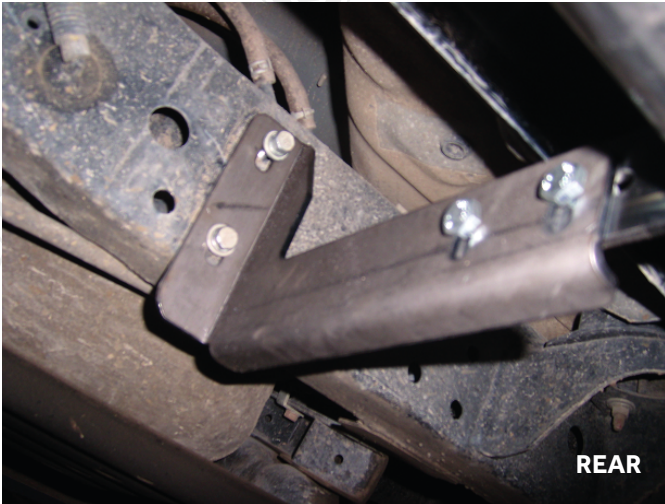**REAR****FRONT**

MB05039 / Rev.01 / 14.01.2022 (KRST)