

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05068 (A/B-TYPE)

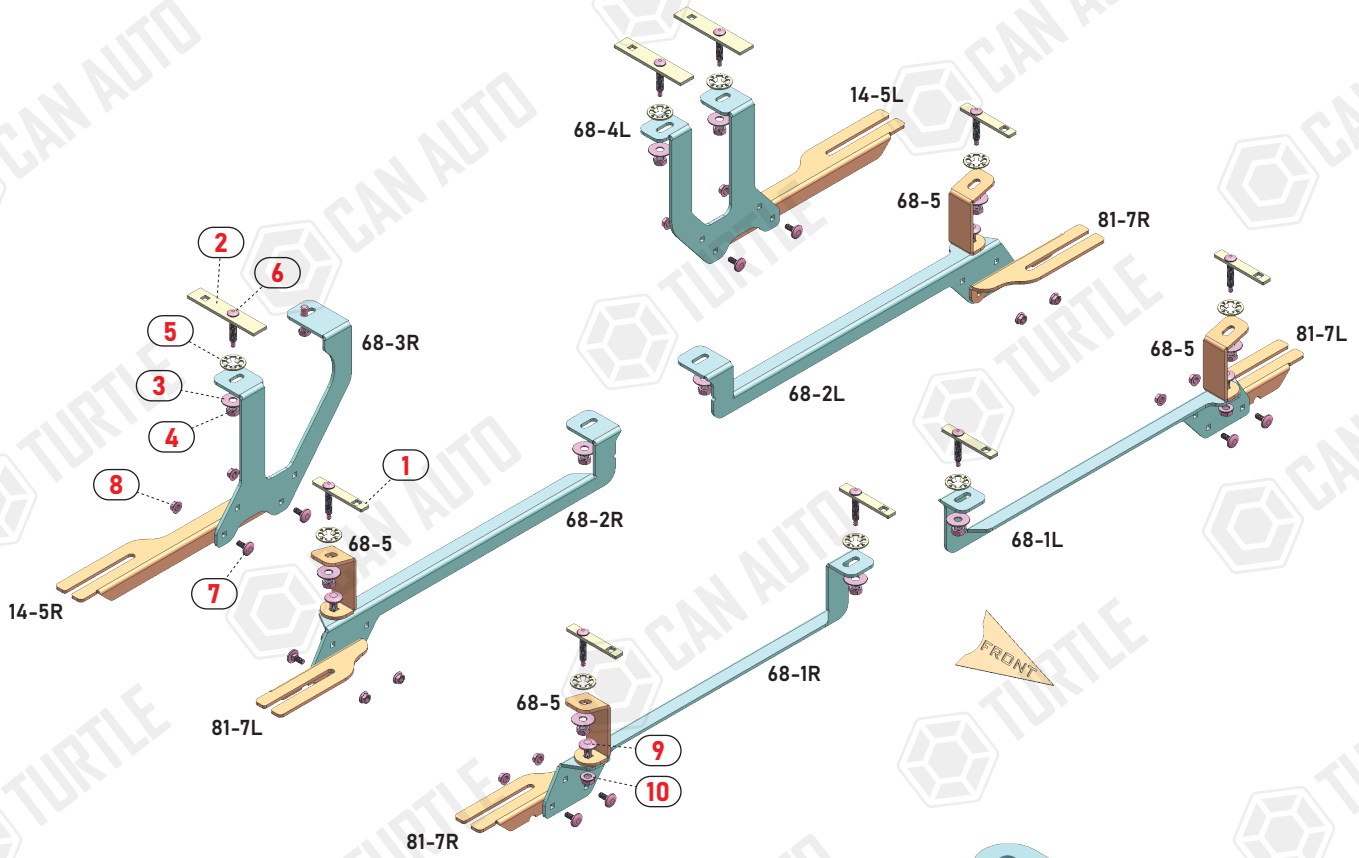
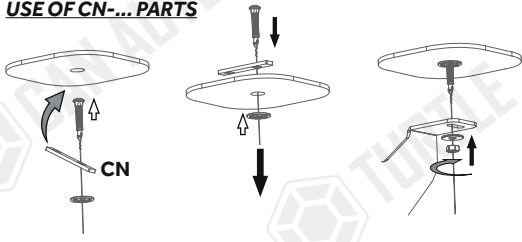
COMPATIBLE VEHICLES

LRVR DIS SPORT (L550) 14-19

LRVR DIS5 (L462) 17-

PACKAGE INCLUDED

1-	CN-01 M8	6
2-	CN-03 M8	3
3-	D8 WASHER	11
4-	M8 HEX NUT	11
5-	CLAMPING PIECE	9
6-	M8 SPECIAL BOLT	9
7-	M6x15 LOCK HEADED BOLT	12
8-	M6 HEX FLANGE NUT	12
9-	M8x20 LOCK HEADED BOLT	4
10-	M8 HEX FLANGE NUT	4

USE OF CN-... PARTS

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****MIDDLE****FRONT**