

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

\* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

\* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

\* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

**ASSEMBLY INSTRUCTIONS (BRACKET KIT)**

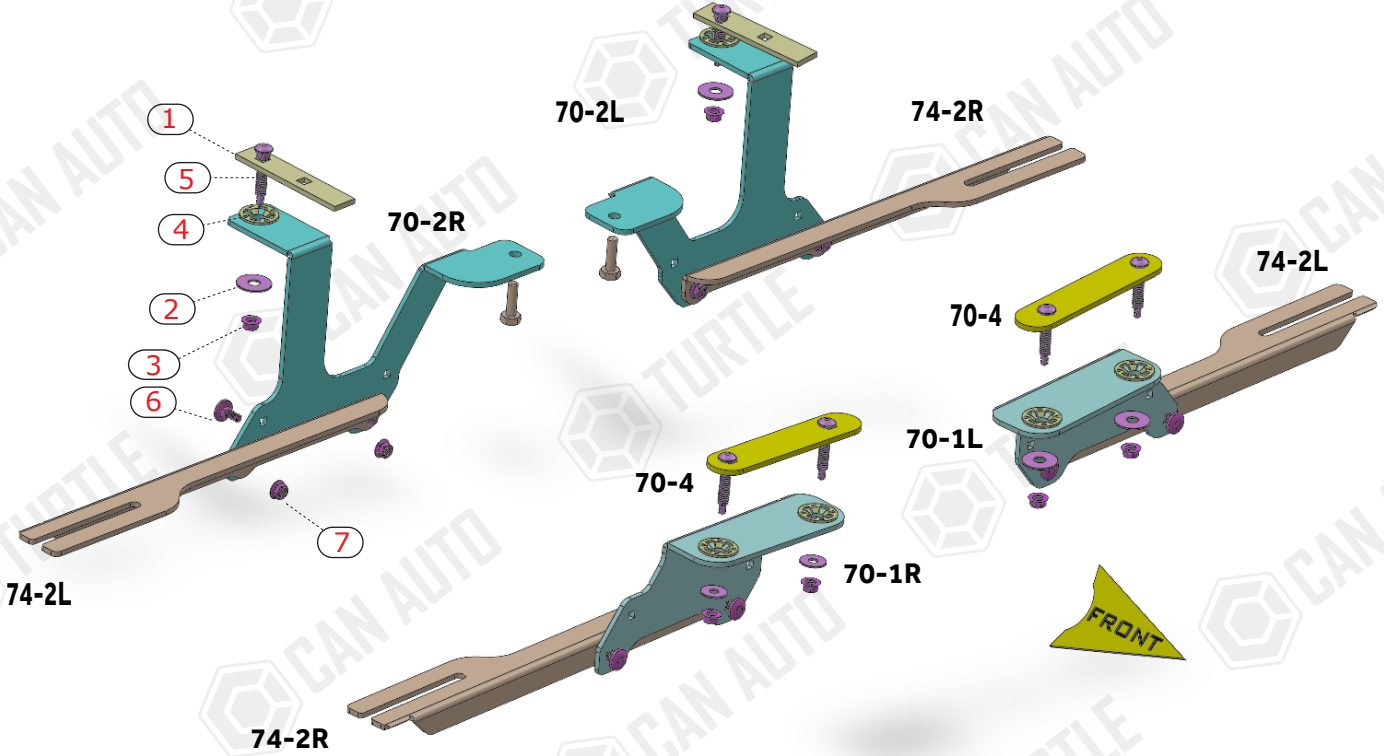
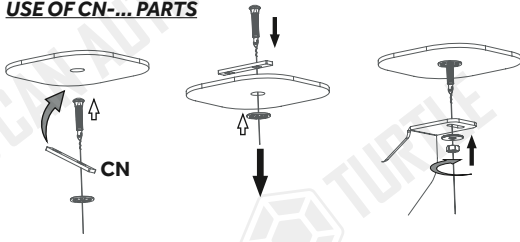
Product Code: MB05070 (A/B-TYPE)

**COMPATIBLE VEHICLES**

LRVR FRL2 (L359) 06-14

**PACKAGE INCLUDED**

|                           |   |
|---------------------------|---|
| 1- CN-03 M8               | 2 |
| 2- D8 WASHER              | 6 |
| 3- M8 HEX NUT             | 6 |
| 4- CLAMPING PIECE         | 6 |
| 5- M8 SPECIAL BOLT        | 6 |
| 6- M6x15 LOCK HEADED BOLT | 8 |
| 7- M6 HEX FLANGE NUT      | 8 |

**USE OF CN-... PARTS**

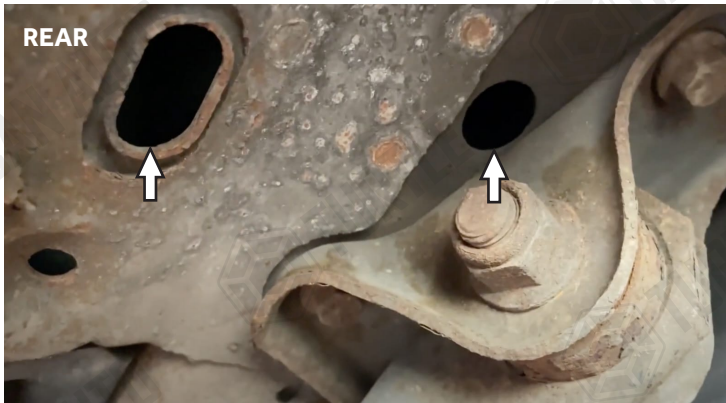
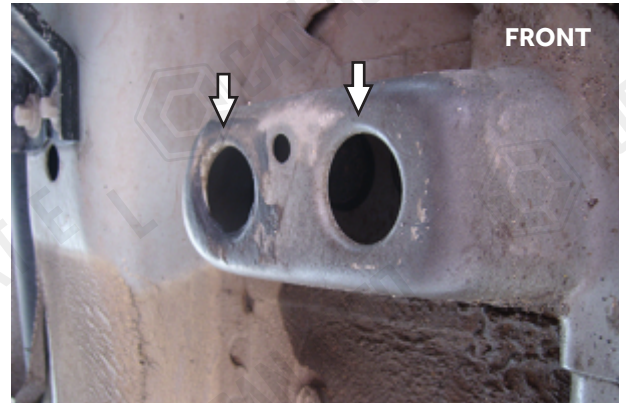
Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****FRONT**