




FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05129 (A/B-TYPE)

USE OF CN-... PARTS

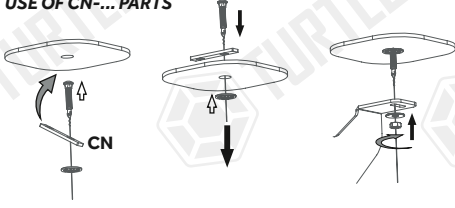


COMPATIBLE VEHICLES

SKD KDQ SUV 17-
VWGN T-RC SUV 17-
VWGN TGN SUV 07-16
VWGN TGN (5N) SUV 16-
VWGN TGN ALLSPC (5N) SUV 18-
SEA ATC SUV 16-
AUD Q2 SUV 17-

PACKAGE INCLUDED

1-	CN-02 M8	12
2-	M8 SPECIAL BOLT	12
3-	CLAMPING PIECE	12
4-	D8 WASHER	12
5-	M8 HEX NUT	12
6-	M6x15 LOCK HEADED BOLT	12
7-	M6 HEX FLANGE NUT	14
8-	CN-04 M6	2
9-	CN-34 M8	6

ZIPLOCK BAG

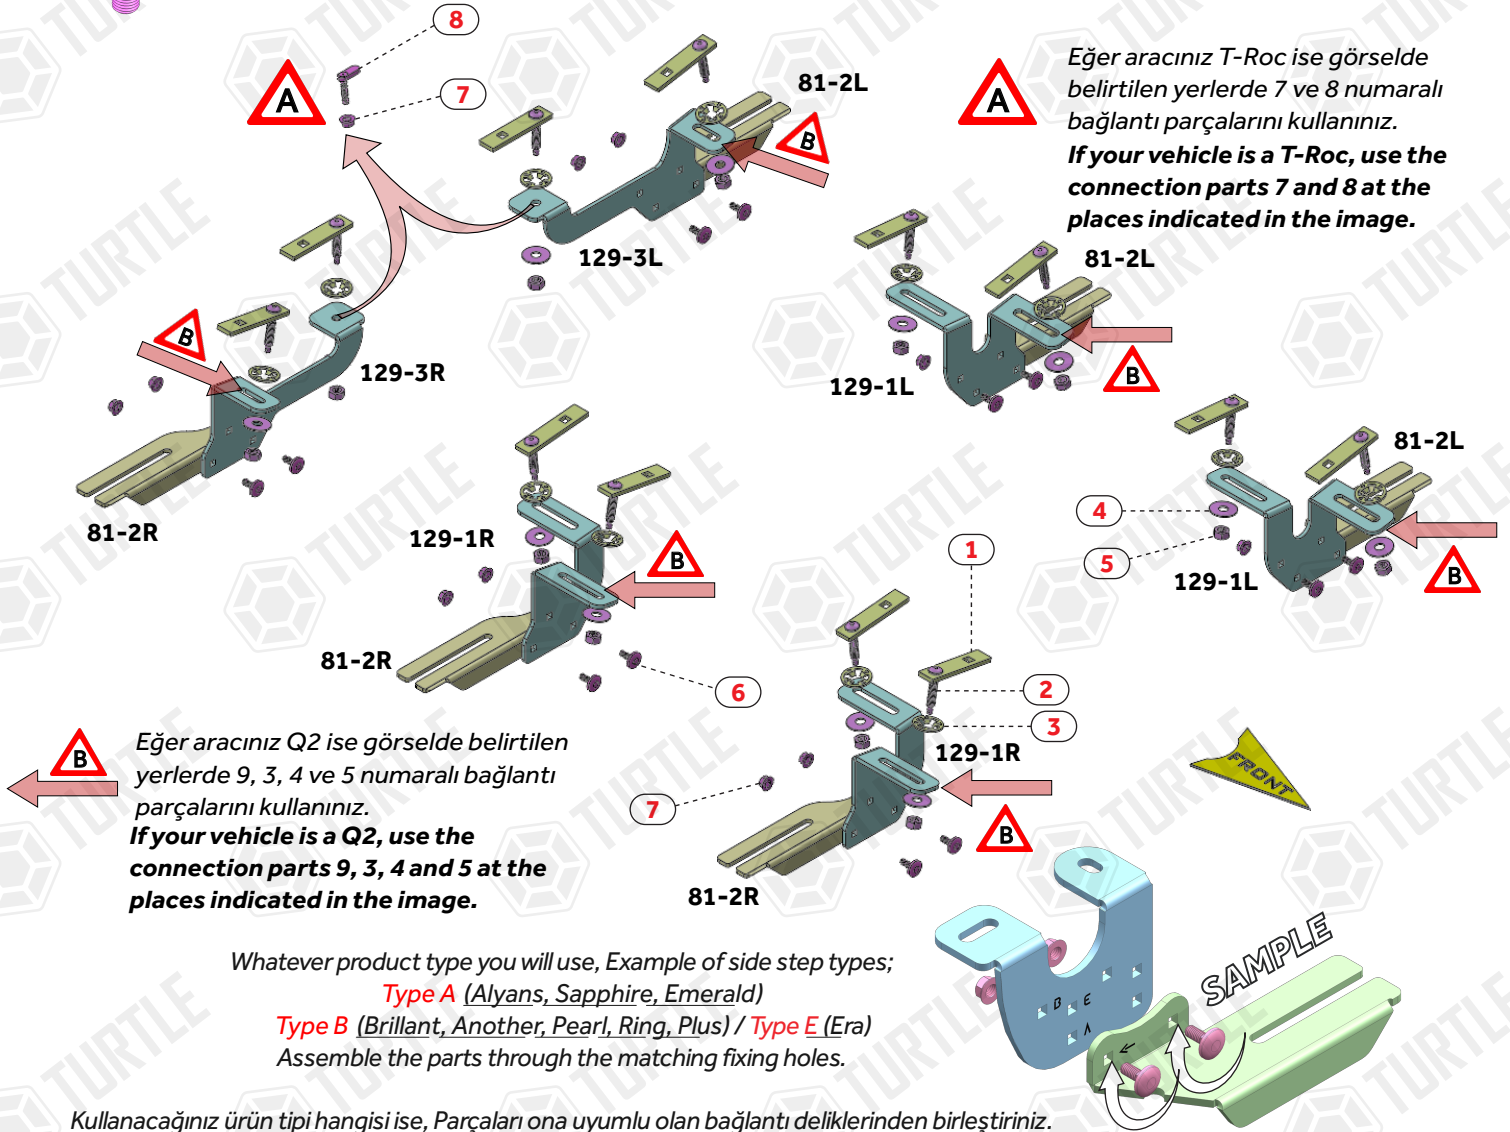

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



MB05129 / Rev.03 / 04.01.2023 (ECE)