

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

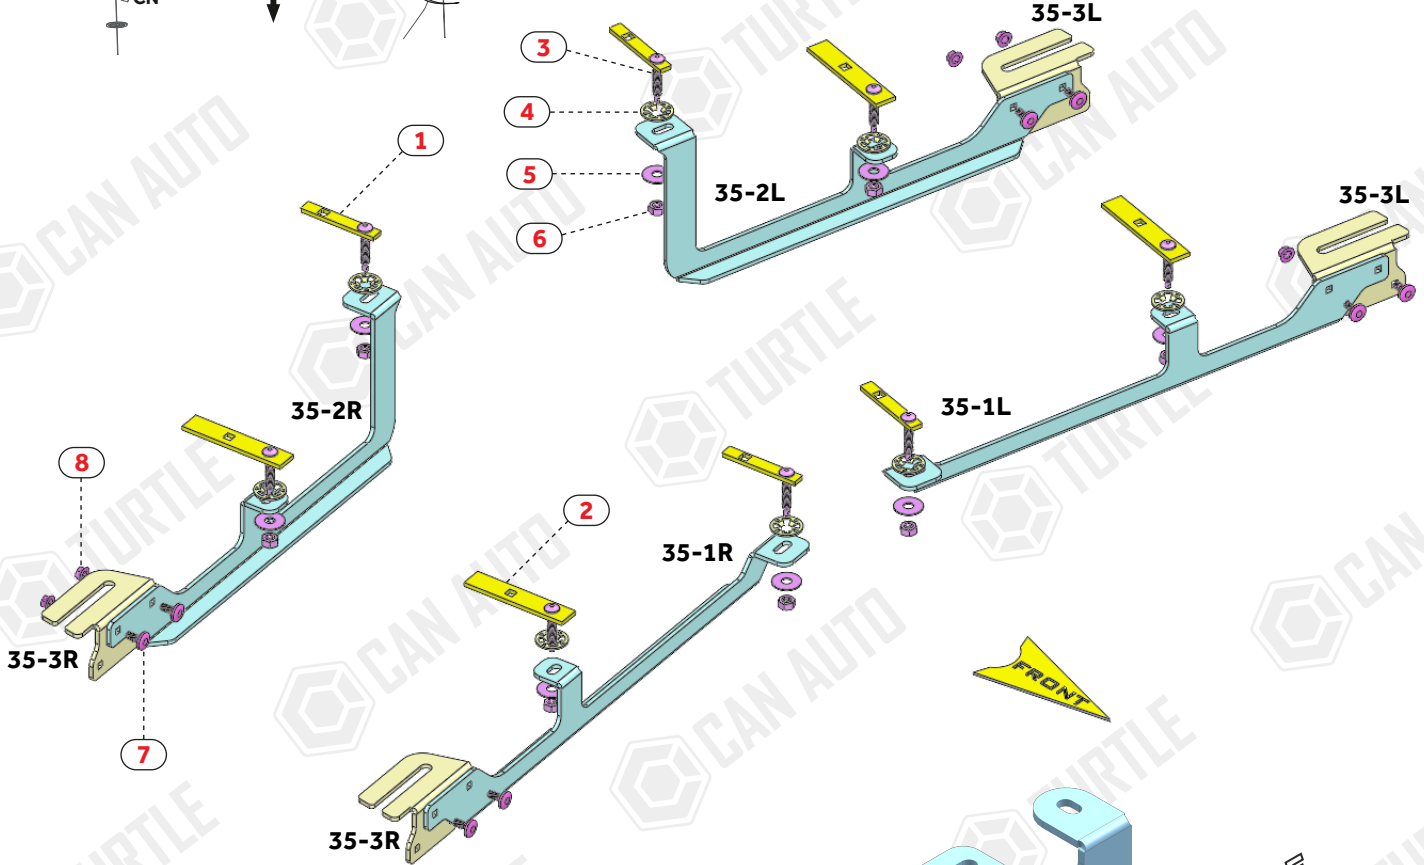
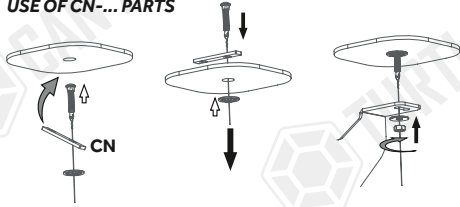
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05035 (A/B-TYPE)**COMPATIBLE VEHICLES**
FRD EDG SUV 15-**PACKAGE INCLUDED**

1- CN-01 M8	4
2- CN-03 M8	4
3- M8 SPECIAL BOLT	8
4- CLAMPING PIECE	8
5- D8 WASHER	8
6- M8 HEX NUT	8
7- M6x15 LOCK HEADED BOLT	8
8- M6 HEX FLANGE NUT	8

ZIPLOCK BAG

USE OF CN-... PARTS

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)**Type B** (Brilliant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****FRONT**

MB05135 / Rev.00 / 08.02.2022 (KRST)