

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05104 (A/B-TYPE)

COMPATIBLE VEHICLES

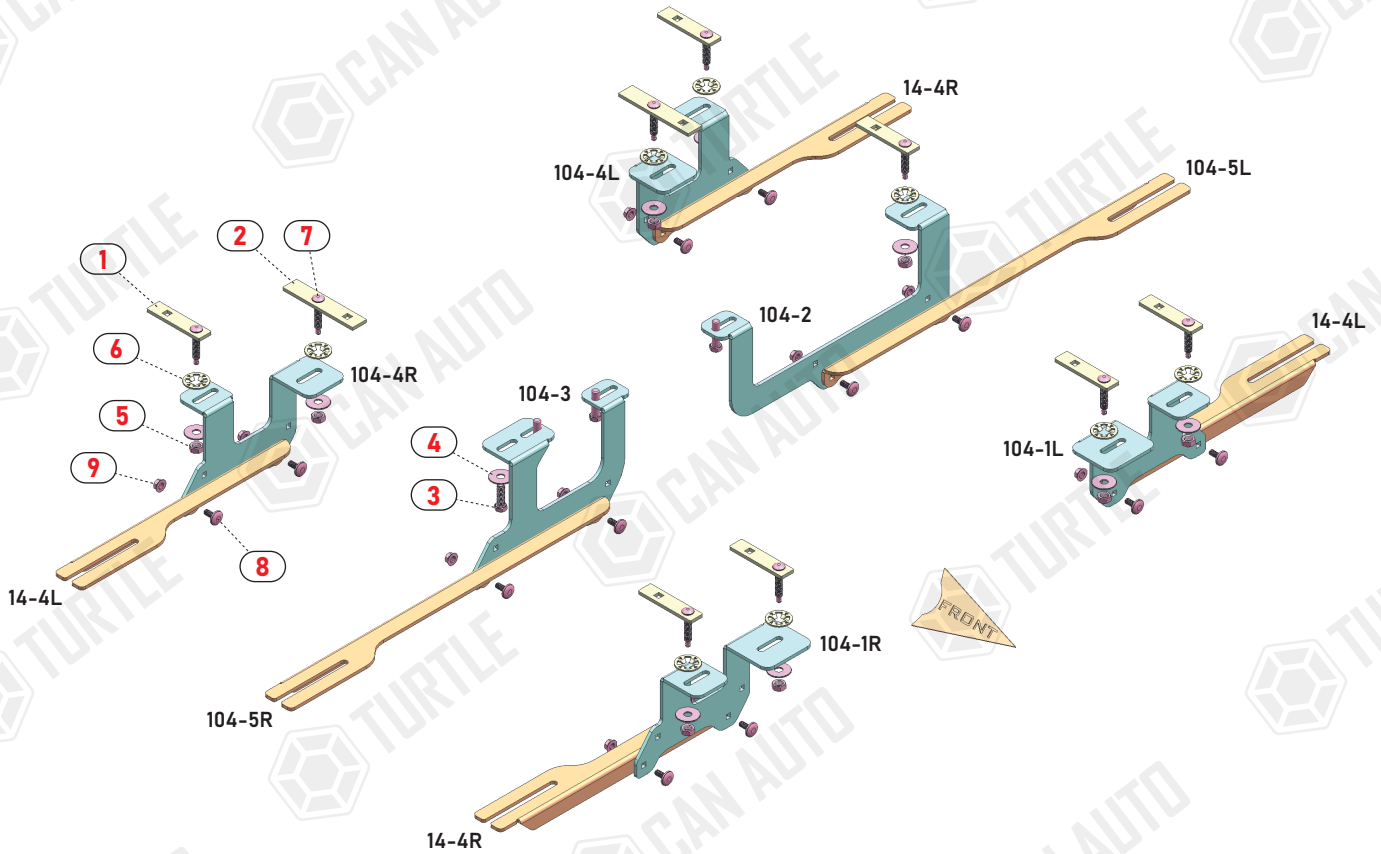
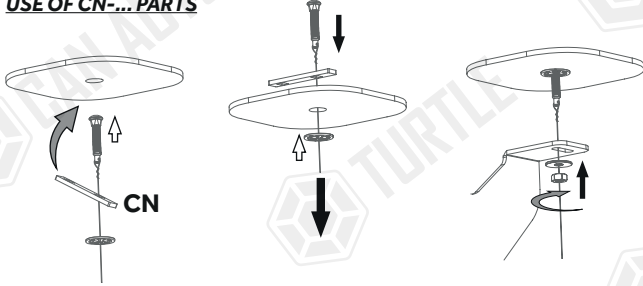
SYNG KRND (C200) SUV 10-19

SYNG NEW ACTY (C200) SUV 10-19

SYNG KRND SPORTS DOUBLE CAB 13-

PACKAGE INCLUDED

1-	CN-02 M8	7
2-	CN-03 M8	2
3-	M8x25 HEX BOLT	1
4-	D8 WASHER	10
5-	M8 HEX NUT	9
6-	CLAMPING PIECE	9
7-	M8 SPECIAL BOLT	9
8-	M6x15 LOCK HEADED BOLT	12
9-	M6 HEX FLANGE NUT	12

USE OF CN-... PARTS

Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

