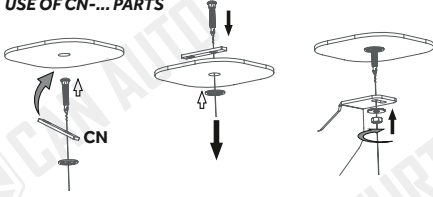


**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05027 (A/B-TYPE)**USE OF CN-... PARTS**

Your vehicle;

If it's X-Trail, use hole marked with "X" in part 27-1

If it's not X-Trail, use hole marked with "Q" in part 27-1

Aracınız;


X-Trail ise 27-1 nolu parçadaki "X" ile işaretli deliği

X-Trail değil ise "Q" ile işaretli deliği kullanınız

COMPATIBLE VEHICLESQASHQAI (J10) SUV 07-13
QASHQAI +2 (J10) SUV 07-13
QASHQAI (J11) SUV 14-
X-TRAIL (T31) SUV 07-13
X-TRAIL (T32) SUV 14-
KADJAR SUV 15-**PACKAGE INCLUDED**

1- CN-02 M8	2
2- CN-04 M6	2
3- CN-34 M8	6
4- D8 WASHER	8
5- M8 HEX NUT	8
6- CLAMPING PIECE	2
7- M8 SPECIAL BOLT	2
8- M6X15 LOCK HEADED BOLT	24
9- M6 HEX FLANGE NUT	26

ZIPLOCK BAG

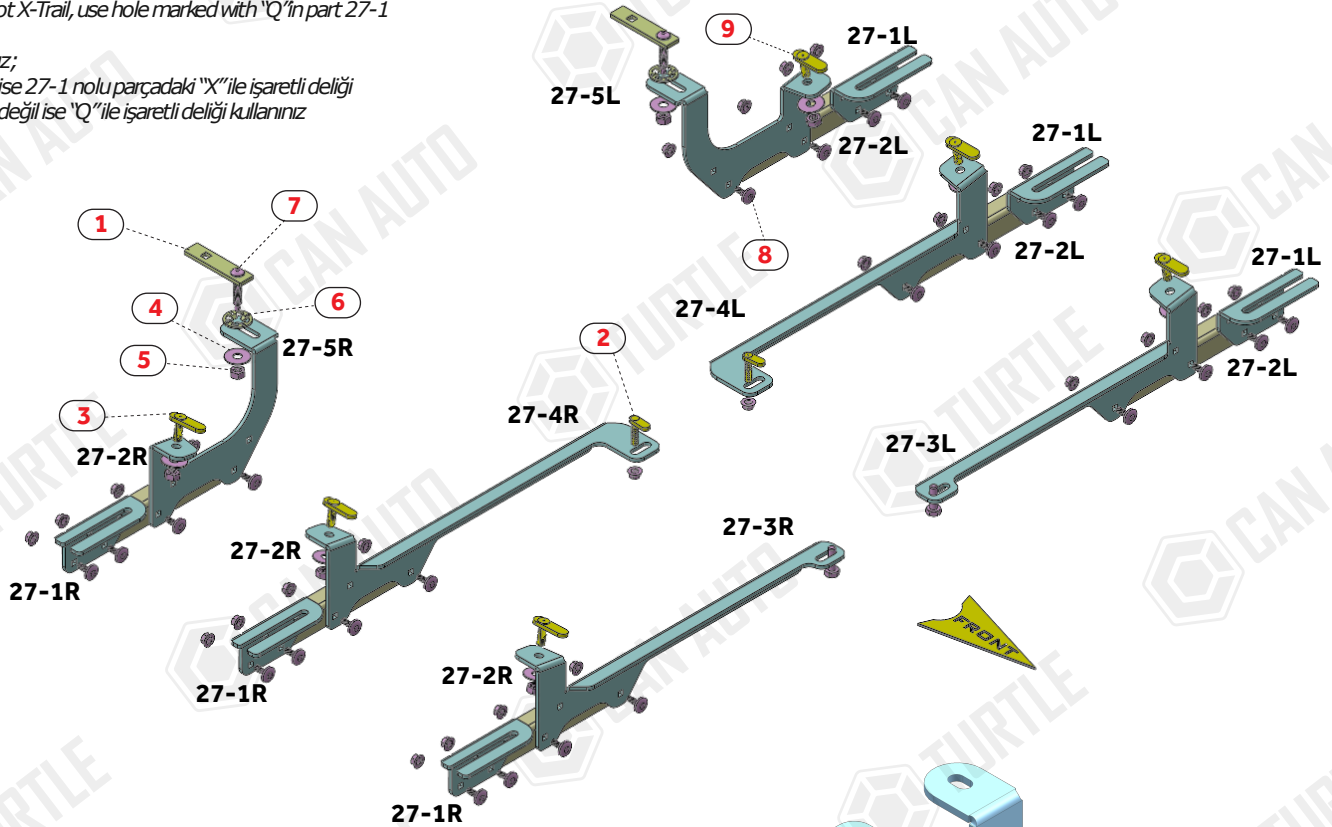

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



MB05027 / Rev.01 / 11.01.2022 (KRST)