



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01096 (A TYPE)
MB02096 (B TYPE)

COMPATIBLE VEHICLES

PEU 2008 SUV 13-19

USE OF CN-... PARTS

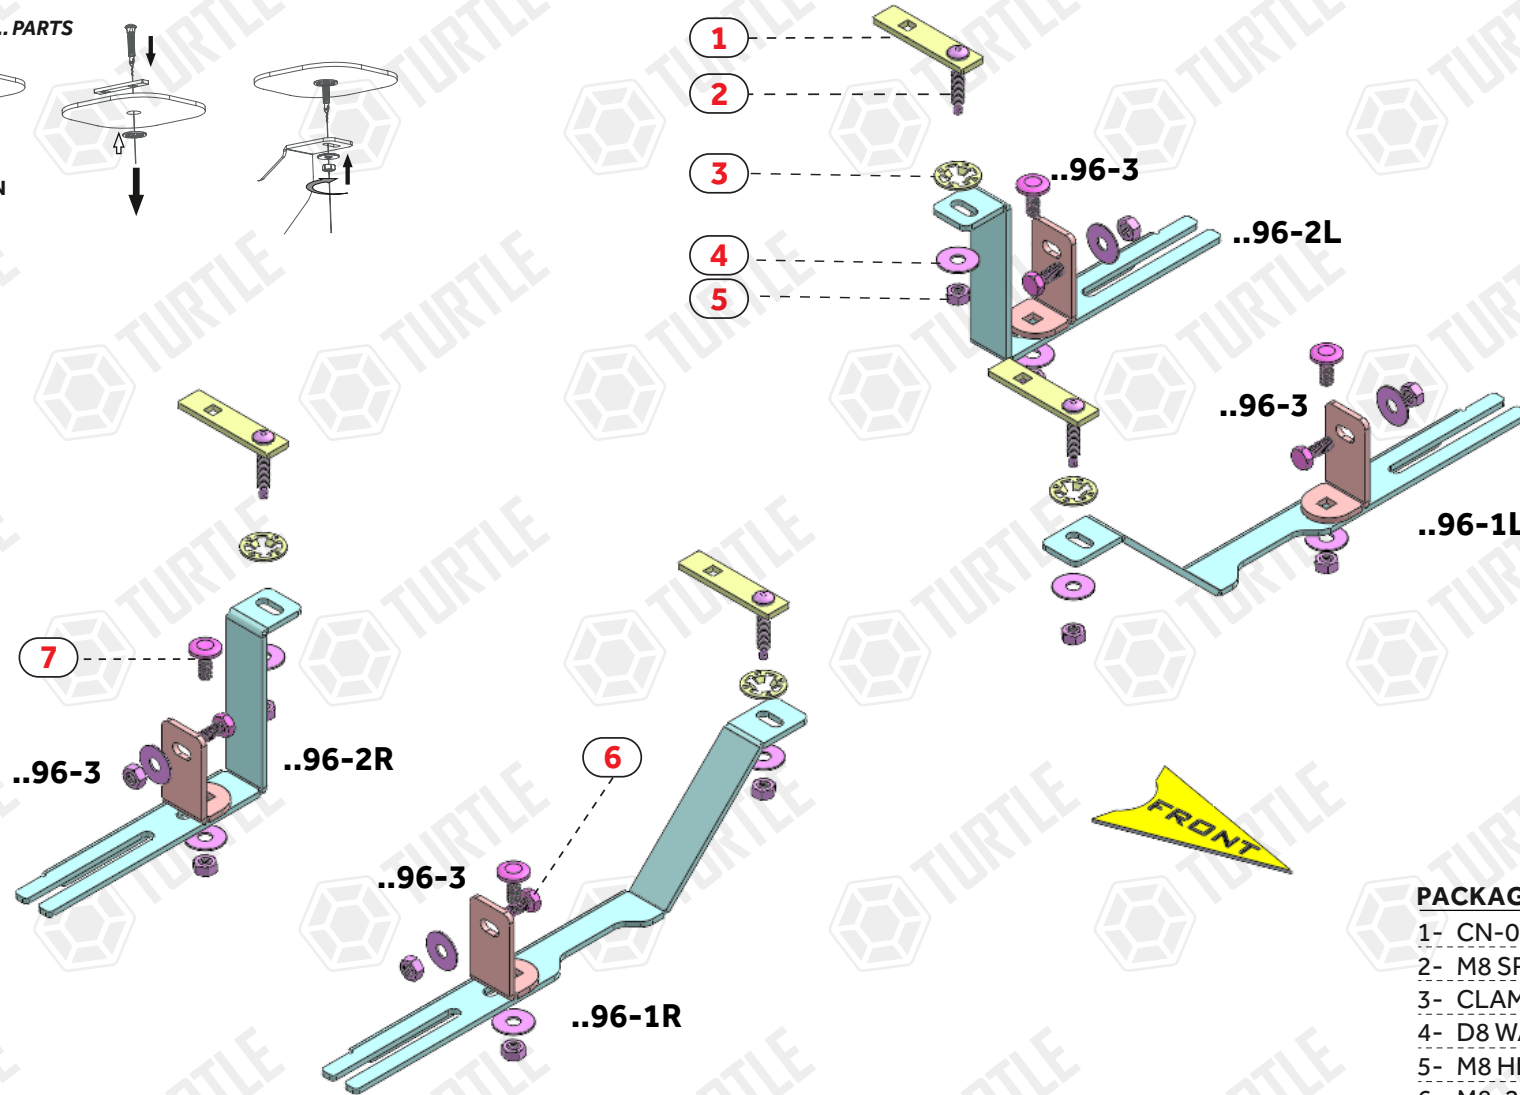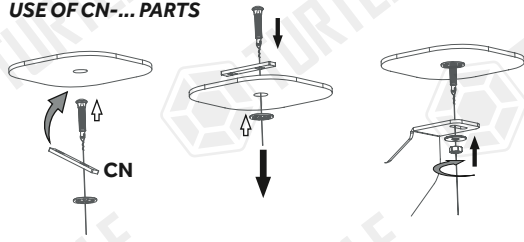

PACKAGE INCLUDED

1- CN-02	4
2- M8 SPECIAL BOLT	4
3- CLAMPING PIECE	4
4- D8 WASHER	12
5- M8 HEX NUT	12
6- M8x25 HEX BOLT	4
7- M8x25 LOCK HEADED BOLT	4

ZIPLOCK BAG